


VISUAL QUICKSTART GUIDE

INCLUDES eBook



Kindle Fire

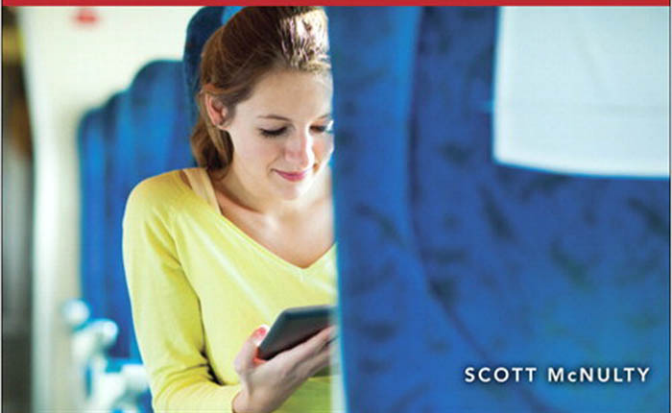

SCOTT McNULTY

© TWO WAYS TO LEARN—PRINT & eBook!

Kindle Fire

SCOTT McNULTY

Visual QuickStart Guide

Kindle Fire

Scott McNulty

Peachpit Press
1301 Sansome Street
San Francisco, CA 94111
415/675-5100
415/675-5157 (fax)

Find us on the Web at www.peachpit.com
To report errors, please send a note to errata@peachpit.com.
Peachpit Press is a division of Pearson Education.

Copyright © 2013 by Scott McNulty

Editor: Cliff Colby
Development editor: Kim Wimpsett
Production editor: Danielle Foster
Compositor: Danielle Foster
Copyeditor: Valerie Perry
Indexer: Valerie Perry
Cover Design: RHDG / Riezebos Holzbaur Design Group, Peachpit Press
Interior Design: Peachpit Press
Logo Design: MINE™ www.minesf.com

Notice of Rights

All rights reserved. No part of this book may be reproduced or transmitted in any form by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of the publisher. For information on getting permission for reprints and excerpts, contact permissions@peachpit.com.

Notice of Liability

The information in this book is distributed on an “As Is” basis without warranty. While every precaution has been taken in the preparation of the book, neither the authors nor Peachpit shall have any liability to any person or entity with respect to any loss or damage caused or alleged to be caused directly or indirectly by the instructions contained in this book or by the computer software and hardware products described in it.

Trademarks

Many of the designations used by manufacturers and sellers to distinguish their products are claimed as trademarks. Where those designations appear in this book, and Peachpit was aware of a trademark claim, the designations appear as requested by the owner of the trademark. All other product names and services identified throughout this book are used in editorial fashion only and for the benefit of such companies with no intention of infringement of the trademark. No such use, or the use of any trade name, is intended to convey endorsement or other affiliation with this book.

ISBN-13: 978-0-321-90387-7
ISBN-10: 0-321-90387-0

9 8 7 6 5 4 3 2 1

Printed and bound in the United States of America

Dedication

For Marisa, who doesn't mind that Kindles outnumber us 7 to 1.

Acknowledgments

Though my name is on the cover of this book, it is far from my effort alone. My sincere thanks to everyone at Peachpit who worked on a very tight deadline to make this book as good as it is. Cliff Colby continues to believe in my writing and puts up with my frantic e-mails. Kim Wimpsett once again took the clay of my words and shaped them into something worth reading—my thanks for that. My thanks also to Danielle Foster for managing the production of the book and for doing the layout and to Valerie Perry for the copyediting and indexing.

Any mistakes are my own.

Contents at a Glance

Chapter 1	Meet your Kindle Fire	1
Chapter 2	Wireless	23
Chapter 3	Search.	31
Chapter 4	Shop.	37
Chapter 5	Games	49
Chapter 6	Apps.	67
Chapter 7	Books	83
Chapter 8	Music	111
Chapter 9	Videos	127
Chapter 10	Newsstand.	139
Chapter 11	Audiobooks.	149
Chapter 12	Web	157
Chapter 13	Photos	169
Chapter 14	Docs.	177
Chapter 15	Offers.	185
Chapter 16	Communication	189
Chapter 17	Manage your Kindle Fire.	211
	Index	219

This page intentionally left blank

Table of Contents

Chapter 1	Meet your Kindle Fire	1
	Hardware and specifications.	2
	Locking and powering on and off	4
	Charging	6
	Setting up	7
	Using gestures.	9
	Using basic navigation	10
	Working with Favorites	14
	Working with notifications	16
	Changing the volume	17
	Changing the brightness	18
	Setting the orientation	19
	Using the keyboard	20
Chapter 2	Wireless	23
	Hooking up to Wi-Fi	24
	Hooking up to Bluetooth	27
	Setting Airplane mode	30
Chapter 3	Search	31
	Using libraries to search	32
	Searching stores	34
	Searching the Web	35
Chapter 4	Shop.	37
	Browsing the stores	38
	Managing your account.	43
	Using recommendations	47
Chapter 5	Games	49
	Getting games.	50
	Managing your games	56
	Using Amazon GameCircle.	59

Chapter 6	Apps	67
	Getting apps	68
	Using apps	74
	Managing your apps	77
	Updating apps	82
Chapter 7	Books	83
	Getting books	84
	Organizing your book selections	90
	Reading books	93
	Implementing bookmarks, highlights, notes, and definitions	98
	Sharing books with others	102
	Searching books and using X-Ray	105
	Sideloaded books	108
Chapter 8	Music	111
	Buying music	112
	Listening to music	115
	Downloading and deleting music	118
	Mastering playlists	121
	Leveraging the cloud	124
Chapter 9	Videos	127
	Renting and purchasing video	128
	Watching video	133
Chapter 10	Newsstand	139
	Buying periodicals	140
	Reading periodicals	142
	Managing issues and subscriptions	147
Chapter 11	Audiobooks	149
	Purchasing audiobooks	150
	Listening to audiobooks	153

Chapter 12	Web	157
	Using the Starter page	158
	Browsing	162
	Working with tabs	165
	Customizing settings	167
Chapter 13	Photos	169
	Importing photos	170
	Viewing photos	173
	Managing photos	175
Chapter 14	Docs.	177
	E-mailing documents	178
	Sending documents via Cloud Drive	180
	Sideloaded documents	181
	Reading and deleting documents	182
Chapter 15	Offers.	185
	Redeeming offers	186
	Opting out of offers	187
Chapter 16	Communication	189
	Using accounts	190
	E-mailing	195
	Calendar	201
	Using the Contacts app.	205
Chapter 17	Manage your Kindle Fire	211
	Customizing device settings	212
	Wiping and deregistering.	215
	 Index	 219

This page intentionally left blank

4

Shop

In addition to making the Kindle Fire, Amazon runs a little e-commerce website that sells everything from toothpicks to e-books. Of course, Amazon wants you to have access to the full Amazon shopping experience on your Kindle Fire, so it has created an app designed just for that.

Shopping is given its own place in the library navigation on the Home screen. The Shop app is an aggregator because it serves as a jumping-off point to the stores baked into the other libraries on the Kindle Fire (Books, Music, and Video). The Shop app is also a storefront because it lets you browse all the physical items for sale at Amazon.com.

This chapter shows you how to use the Shop app to buy a variety of things right from your Kindle Fire with a few taps.

In this chapter

Browsing the stores	38
Managing your account	43
Using recommendations	47

Browsing the stores

The Shop app is a central place to access several different stores on your Kindle Fire. Launch the Shop app by tapping Shop on the Home screen's library navigation **A**. At the top of the screen is a Search Store box. Tapping it takes you to the stores search (covered in Chapter 3). Below that is a large picture promoting products that Amazon wants to draw to your attention. Swipe left and right with your finger to cycle through the four different promotions. Notice the four dots at the bottom of the promotion; they let you know the position of the promotion you're currently viewing. Tap anywhere on a promotion to go to the item it is representing.

At the bottom of the screen are all the stores you can browse. The digital stores are grouped together on the left:


- Books
- Music
- Videos
- Newsstand
- Apps
- Games
- Audiobooks

 


A The Shop app provides access to all the storefronts Amazon has to offer, as well as highlighting new or notable content.

Amazon Prime

Amazon Prime is a \$79 yearly membership program. Membership includes the following:

- Free two-day shipping on Prime-eligible items denoted by the Prime logo .
- Discounted expedited shipping (\$3.99 per item for one-day shipping for a weekday delivery and \$8.99 for Saturday delivery).
- Access to an ever-expanding streaming video library called Prime Instant Videos (all of which you can watch on your Kindle Fire).
- The ability to borrow one e-book a month from the Kindle Owners' Lending Library. You can keep the book for as long as you like, but you can have only one book out at a time and borrow only once a month.

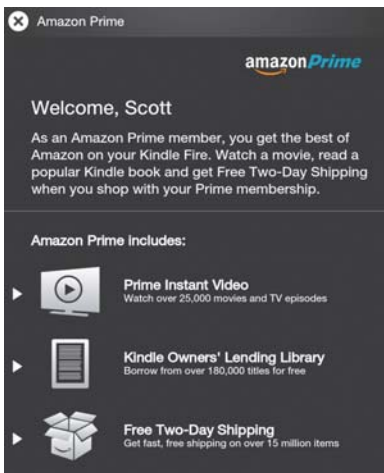


B Amazon Prime membership has its benefits. If you aren't a Prime member, you can sign up right from your Fire.

Tapping any of these takes you to that specific digital store. These stores are covered in the chapters devoted to the library of the same name.

What happens when you tap the Amazon Prime store depends on whether you're signed up for a membership. If you are a Prime member, it reminds you of all the benefits to membership and highlights some content available to Prime members **B**. If you aren't a Prime member, you can sign up right from this screen.

TIP The Kindle Fire experience is greatly enhanced by an Amazon Prime membership. If you are a fairly frequent Amazon.com shopper, you'll find the free two-day shipping a delight.

 Finally, in the lower far-right corner is the button for Amazon's physical products store (also known as Amazon.com).

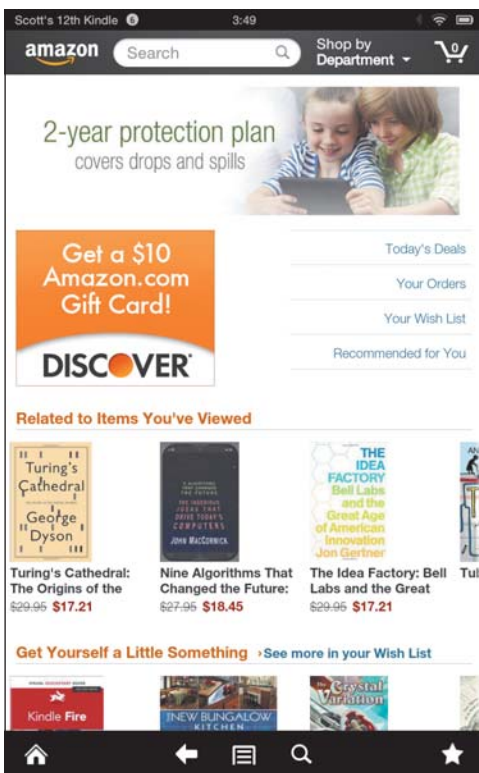

C The Amazon storefront looks very similar to Amazon.com.

To order physical goods from Amazon on your Kindle Fire:


1. Tap Shop on the Home screen's library navigation.
2. Tap the Shop Physical Products button.
3. This takes you to a rather familiar-looking storefront **C**. The front page contains items from your Wish Lists; swipe left and right to scroll through them. You'll also find recommended items, what other customers are looking at, and a section that shows particularly popular items.

continues on next page


4. Tap any item of interest to get more details **D**.
5. On the Item Detail screen, you can read the product description, see the price, and look at reviews. Once you've decided you want to purchase the item, tap either Add to Cart or Buy Now with 1-Click, and select the shipping you want.

TIP If you have 1-Click enabled, that's all you need to do. The item has been ordered and will be shipped to your 1-Click address.


6. After you add an item to your cart, tap Continue Shopping or Go to Cart **E**. If you opt to continue shopping, you can always get to your cart by tapping the Cart icon at the top of the screen.
7. When looking at your cart, the subtotal is displayed at the top, with the items in your cart listed below **F**. To change the quantity of an item you're purchasing, tap the number and enter a new one with the onscreen keypad **G**. Tap Done when you're finished.

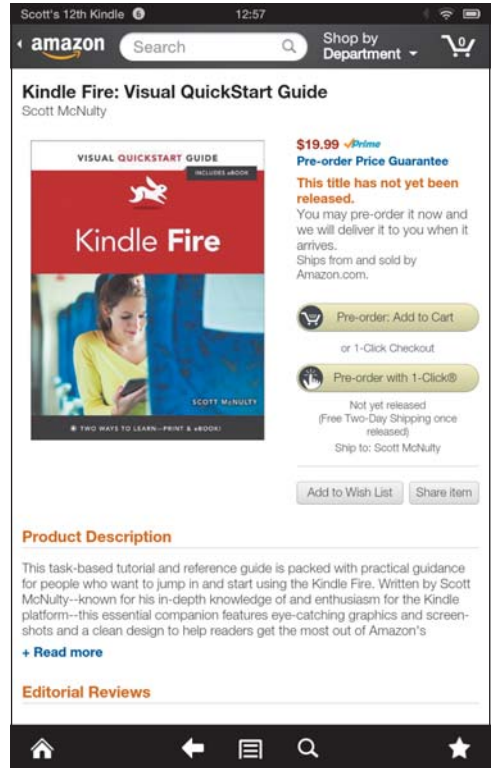

D An item's entry page gives you information about it, the chance to purchase it, and reviews to read.

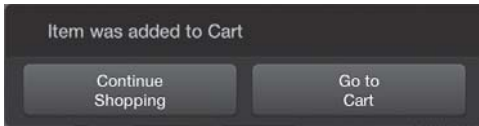


 E After you add an item to your cart, you can continue to shop, add even more to your cart, or just go to your cart and check out.

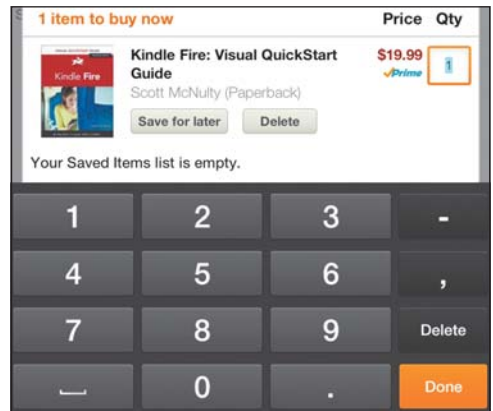


F The cart lists all of the items that you've placed in it, along with buttons to delete it or save it for later.


G Change the quantity of any item in your cart.

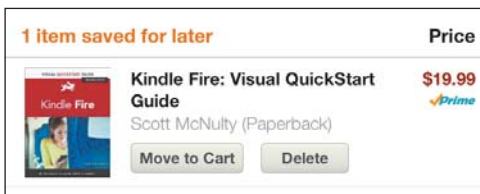

 H Saved items appear in the lower section of the cart and can be added by tapping Move to Cart.

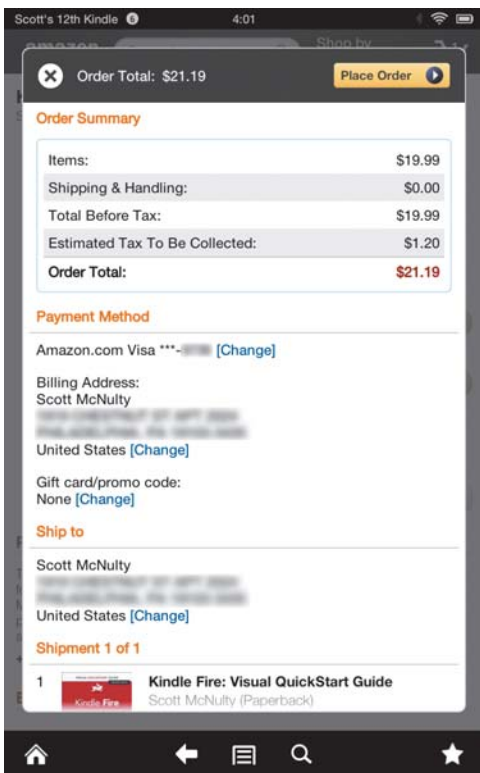

I Your order summary includes the order total, payment method, and shipping address (blurred in this picture for privacy reasons).

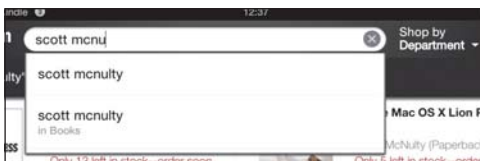

J Enter some text in the Search box to browse across the store for items.

If you no longer want to buy an item, tap Delete. To save an item for later consideration, tap Save for Later. The item is moved to your saved list and out of your cart (tap Move to Cart if you change your mind) **H**.

8. Once you're happy with your cart's contents, tap Checkout. You'll need to supply your Amazon account and tap the Sign In button to continue.
9. An order summary with the total price, taxes, and shipping costs is displayed along with the payment method and the shipping address **I**. Change either of these by tapping the Change link and selecting either another payment method or address.

TIP You can't pay for things using points accrued from rewards programs via the Shop app. You can, however, enter gift card and promo codes by tapping the Change link under that section.

10. Tap Place Order. An e-mail is sent to whatever e-mail address is associated with your Amazon account.

To find something to buy:


- At the top of every screen in the Shop app is a Search field. Tap it and type the name of whatever it is you're looking for **J**. Suggested terms appear; tap one to search for it or tap the orange magnifying glass on the keyboard to search using your exact terms.

The search results are shown and can be filtered using the Refine button as in the stores search (see Chapter 3). Tap an item to see details about it.

TIP Tapping the Amazon logo in the upper-left corner of the screen brings you back to the store's front page.

continues on next page

 - If you would rather browse by department, just tap Shop by Department and select a department from the list **K**. Once you're in a department, you can tap its name to see a list of subdepartments **L**.

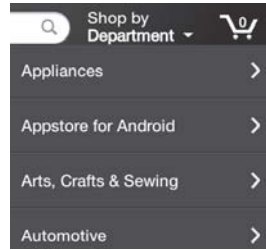


K You can browse by department. Tap any department to see a sortable list of the best-selling items.

To share a link to an item:

1. Locate an item in the Amazon store. Tap it to get to its detail page.
2. Tap the Share button.
3. A list of available methods of sharing appears **M**. This list will vary depending on the apps you have installed, but e-mail is always listed because it is a default app. Tap the method you would like to use.
4. A link to the selected item is pasted to the sharing app of your choice, waiting for you to share it with friends and family **N**.



 
L Each department, in this case Books, has a number of subdepartments that you can browse as well.

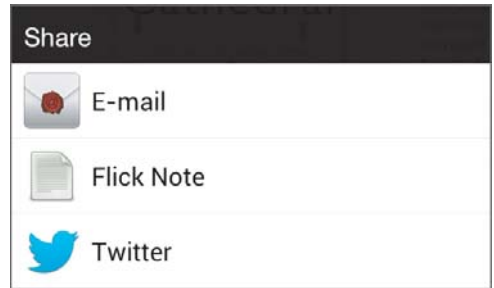

M The Share options depend on what apps you have installed, but you can always share via e-mail.



 N A tweet created by the Share button includes a link to the item on Amazon.com.

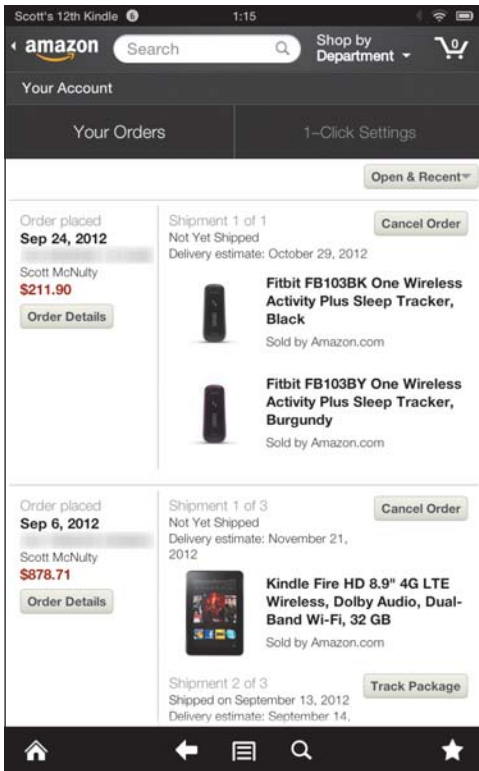

A All of your orders associated with your Amazon account are displayed here, arranged by most recently ordered at the top.



B By default, your only open and recently placed orders are shown. If you tap the Open & Recent button, you can view orders placed in other time periods.

Managing your account

You can't order anything from Amazon without an Amazon account (including the very Kindle Fire you're using). The Shop app gives you access to some of your account settings. The Shop app concentrates mostly on the order-related functions of your Amazon account, including enabling 1-Click Ordering.

To view and track your orders:

1. Open the Shop app (Home screen > Shop > Shop Physical Products).
2. Tap the menu icon on the navigation bar.
3. Tap Your Account.
4. You may be prompted for your Amazon account password. Enter it and tap Sign In.
5. Your Account page displays your recent and open (not yet shipped) orders in a scrollable list **A**. Swipe up and down to scroll through the list. If you want to filter your orders by a period of time, tap the Open & Recent button and select one of the options **B**.

continues on next page

A picture of the item ordered along with some of the order details are listed, including the price and the date the order was placed. If you need more detail about a specific order, tap Order Details **C**. Tap the x to close.

6. Tap Track Package to track your order **D**. Here, you can see shipping information such as the tracking code, delivery status, and shipper that was used. Tap the x to close.

Order Details

Order Date: Sep 17, 2012
Order #: [redacted]
Order Total: \$6.99
Ship To: Scott McNulty

Shipment #1: Delivery estimate: September 18, 2012

1 BlueRigger High Speed Micro HDMI to HDMI cable with Ethernet (6 Feet)
\$6.99
BlueRigger LLC

Two-Day Shipping
Shipped on September 18, 2012

Ship my items as they become available

Payment Method

American Express *** [redacted]
Billing Address: [redacted]
Gift Card/Promo Code: None

Payment Information

Item(s) Subtotal:	\$6.99
Shipping & Handling:	\$0.00
Total Before Tax:	\$6.99
Estimated Tax To Be Collected:	\$0.00
Grand Total:	\$6.99

C Order Details lists everything you want to know about one of your orders.

Shipment Tracking

Status: Unavailable
Ship Carrier: UPS
Tracking Number: [redacted]
Shipment Date: Oct 1, 2012
Destination: Philadelphia PA US
Arrival Date: Oct 1, 2012

Track Your Package

Out for delivery
October 2, 2012 12:35:00 AM Philadelphia PA US

Arrival Scan
October 1, 2012 10:33:00 PM Philadelphia PA US

 
Departure Scan
October 1, 2012 9:43:00 PM Horsham PA US

Shipment received by carrier
October 1, 2012 12:58:00 PM Horsham PA US

D Tap the Track button, and you can locate your order.



E The Cancel Order button is available only on open orders. Tap it to cancel the order.

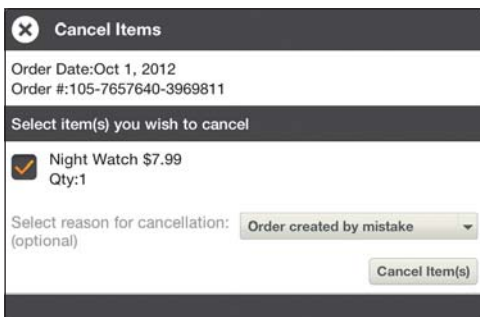

F Tap the check mark next to the item, or items, that you want to cancel in the order. Then, tap Cancel Item(s).

To cancel an order:


1. Open the Shop app (Home screen > Shop > Shop Physical Products).
2. Tap the menu icon on the navigation bar.
3. Tap Your Account.
4. You may be prompted for your Amazon account password. Enter it and tap Sign In.
5. Locate the open order on the Your Orders list **E**.
6. Tap Cancel Order and enter a reason for the cancellation **F**. Tap the check box next to the item you don't want (this is useful for orders with multiple items) and tap Cancel Order. The order is removed from the Your Orders list and cancelled.

To modify your 1-Click settings:


1. Open the Shop app (Home screen > Shop > Shop Physical Products).
2. Tap the menu icon on the navigation bar.
3. Tap 1-Click Settings.
4. You may be prompted for your Amazon account password. Enter it and tap Sign In.
5. Your current 1-Click settings are displayed **G**.

When 1-Click Ordering is turned on, you do not need to enter your Amazon password when placing an order. The order is also charged to a default credit card and shipped to a default address, so no interaction is required. (1-Click ordered items bypass the shopping cart.) If 1-Click is enabled, there will be a button labeled Turn OFF 1-Click. Tapping it will disable 1-Click on this device and change the button to read Turn ON 1-Click. Tap it again to enable 1-Click.

 
6. To change the address and credit card used by 1-Click, tap the Change link. Select an address from the list associated with your Amazon account and a payment method **H**. No need to confirm; the setting is changed immediately.

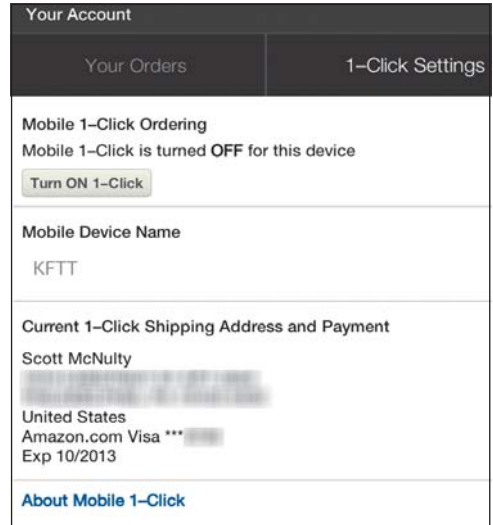


G You can change your 1-Click Settings right from your Kindle Fire.

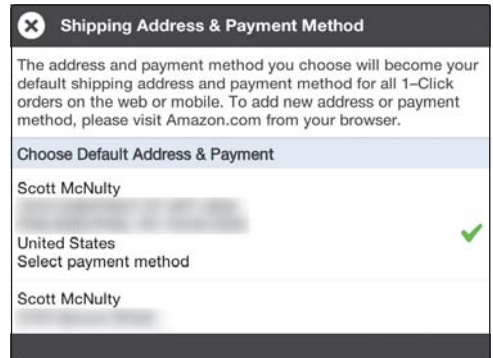

 H Modify your 1-Click shipping address and payment method.

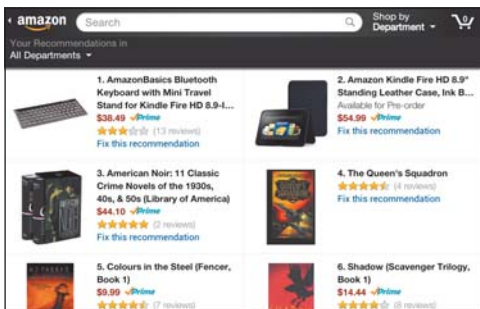

 A Amazon uses many data points about your shopping habits to create a list of recommended things you might want to buy.

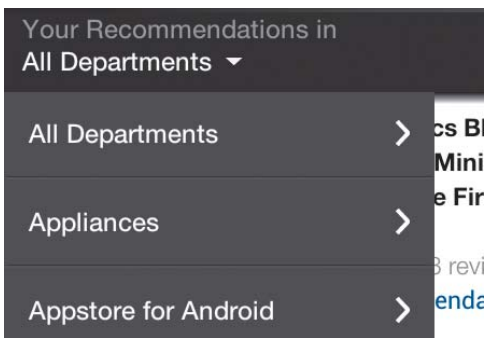

B Filter recommendations by department to see only recommended books or music, for example.

Using recommendations

Amazon is famous for its recommendation engine. That's the bit of technology used to predict what you might be interested in based on a combination of what you've purchased, the items in your Wish List, and the reviews and ratings you've left on Amazon.com. You can access the list of items Amazon recommends to you right from your Fire, and you can even help Amazon improve it.

To view your recommendations:


1. Open the Shop app (Home screen > Shop > Shop Physical Products).
2. Tap the menu icon on the navigation bar.
3. Tap Recommendations.
4. Swipe up and down to scroll through the list of recommendations **A**.

These recommendations span all of Amazon's departments. If you want to see just the recommendations from a particular department, tap the Department drop-down, and then tap the department name **B**.

5. Tap an item to see details about it and to purchase it.

To improve your recommendations:

1. Open the Shop app (Home screen > Shop > Shop Physical Products).
2. Tap the menu icon on the navigation bar.
3. Tap Recommendations.
4. When you spot a recommendation that doesn't ring true or if you see an item that you own already, tap "Fix this recommendation."
5. Two buttons appear: "I own it" and "Not Interested" **C**. Tapping "I own it" lets Amazon know that you really are into items like this, and "Not Interested" tells Amazon not to recommend things like this to you.
6. The item disappears from your Recommendations list, and Amazon's servers know just a little bit more about you (in order to serve you better).

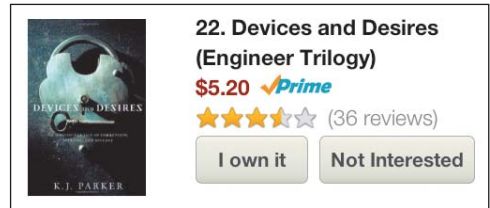

C Recommendations aren't always spot on, so you can fix them by tapping Fix This Recommendation and then tapping "I own it" or "Not Interested."

Index

Numbers

- 7-inch Kindle Fire HD. *See also* Kindle Fire
 - back of, 3
 - camera, 2
- Carousel, 2
- display, 2
- front of, 2
- headphone jack, 3
- Power button, 3–4
- related content, 2
- speakers, 3
- status bar, 2
- volume buttons, 3

A

- About screen, displaying, 212
- account information, entering, 7–8
- account settings
 - deleting, 193–194
 - entering, 192
- account types
 - AOL, 190
 - Exchange, 190
 - Gmail, 190
 - Hotmail, 190
 - Yahoo! 190
- accounts
 - adding, 190–192
 - deleting, 194
- Add Account screen, 190
- Add Contact screen, 196
- Add network screen, 25
- Airplane mode
 - disabling, 30
 - enabling, 30

- albums
 - downloading from Music Cloud library, 118–119
 - renaming in Photos library, 174
 - viewing in Music Store, 114
- Amazon
 - browsing, 41
 - browsing by department, 42
 - improving recommendations, 48
 - ordering physical goods from, 39–41
 - returning to front page, 41
 - viewing recommendations, 47
- Amazon account
 - cancelling orders, 45
 - modifying 1-Click settings, 46
 - tracking orders, 43–44
 - viewing orders, 43–44
- Amazon GameCircle. *See also* games
 - Achievements icon, 61–62
 - Add Friends screen, 60
 - comparing game stats, 65
 - determining support for, 61
 - earning achievements, 61
 - Edit Your Profile screen, 59
 - finding friends on, 60
 - in-app summary, 64
 - modifying settings, 66
 - setting up profile, 59
 - Summary, 64
 - viewing achievements, 62–64
 - viewing leaderboards, 62–64
- Amazon Prime, 38–39

- Amazon.com
 - cancelling subscriptions, 147
 - managing delivery location for periodicals, 148
 - managing periodical issues, 147
 - Android File Transfer application, 109
 - Angelmaker example, 90
 - Angry Birds game, 54
 - AOL account, described, 190
 - app content, forcing syncing, 81
 - Application Details screen, 79
 - Applications screen, 76
 - apps
 - accessing preferences, 75
 - adding to Favorites, 75
 - deleting, 78
 - determining running status, 79
 - disabling In-App Purchasing, 81
 - force-quitting, 79
 - installing, 73
 - launching, 74
 - price button, 70
 - removing from devices, 78
 - seeing permissions, 80
 - sideloading, 71
 - turning off notifications, 76
 - updating, 82
 - Apps library, sorting, 77
 - Appstore
 - browsing, 68–69
 - downloading apps, 71–72
 - purchasing apps, 71–72
 - searching, 50, 70
 - Sort options, 70
 - artists, downloading, 118–119
 - attachments to e-mail, sending, 198
 - Audible.com, 152
 - audiobooks. *See also* books
 - Bookmark icon, 155
 - Bookmarks & Notes screen, 156
 - buying, 150–152
 - creating bookmarks, 155
 - creating notes, 155
 - Credit button, 152
 - editing bookmarks, 156
 - editing notes, 156
 - Listen Now button, 152
 - listening to, 153–155
 - Note Editor, 155
 - Now Playing screen, 154
 - play controls, 154
 - removing, 156
 - sleep timer, 155
 - table of contents, 154
 - volume control, 154
 - Automatic Brightness slider, 18
 - The Avengers example, 128
- B**
- Back button, identifying, 13
 - back of 7-inch model, 2
 - Bad Piggies game, 54
 - battery level, displaying, 6
 - Blankbaby example, 209
 - Bluetooth
 - connecting peripherals, 28
 - Discoverable mode, 29
 - enabling, 27
 - managing paired devices, 28
 - Bookmark button, 98
 - bookmarked page, 98
 - bookmarks. *See also* browsing
 - accessing for Web browsing, 159
 - adding for Web browsing, 160
 - deselecting for Web browsing, 160
 - books. *See also* audiobooks; Kindle Store; reading
 - bookmarking pages, 98
 - borrowing from Kindle Owners' Lending Library, 88
 - borrowing from local libraries, 89
 - buying from various sources, 85
 - creating notes, 99
 - downloading from Cloud library, 90
 - downloading narration track, 97
 - file types for sideloading, 108
 - getting from Kindle Store, 84–87
 - highlighting text, 99

- Immersion reading, 97
- increasing font size, 95
- jumping to page locations, 95
- lending, 104
- locations, 94
- looking up words, 100
- managing bookmarks, 101
- managing highlights, 101
- managing notes, 101
- page slider, 94
- reading, 93–97
- Real Page Numbers, 94
- removing, 91
- returning borrowed, 92
- searching within, 105
- setting margins, 95
- setting up sharing accounts, 102
- sharing on Facebook, 102–103
- sharing on Twitter, 102–103
- sideloading, 108–110
- syncing place with WhisperSync, 96
- Text-to-Speech feature, 95–97
- turning pages, 94
- using X-Ray with, 106–107
- zooming in on images, 96

Books library. *See also* libraries

- deleting books from, 92
- sorting books, 91
- switching views, 91

brightness, changing, 18

browsing. *See also* bookmarks; Web

- bookmarking pages, 162
- Full-screen option, 163
- using URL bar, 162

browsing history, managing, 161

C

- calendar, viewing, 201–202. *See also* events
- Calendar General Settings screen, 204
- calendar settings, changing, 204
- Carousel
 - on 7-inch Kindle Fire HD, 2
 - described, 11
 - removing items from, 12

- cart in Amazon
 - adding items to, 41
 - changing quantities in, 40
- characters, typing, 20
- charging Kindle Fire
 - via computer, 6
 - via micro-USB adapter, 6
- Choose Attachment screen, 198
- Cloud Drive
 - creating folders on, 180
 - logging into, 180
 - using to import photos, 170–171
 - using to send documents, 180
- Cloud library
 - downloading books from, 90
 - downloading photos from, 172
- Cloud Player. *See also* music
 - deleting music from, 120
 - importing music to, 124–126
- cloud storage, 3
- Compact cable kits example, 166
- contact sort, changing, 210
- contacts
 - browsing, 206
 - creating, 207
 - editing, 207
 - joining, 208
 - making Favorites, 209
 - searching, 206
 - sharing, 209
- Contacts app
 - General Settings, 210
 - launching, 205
 - profile setup, 205–206
- Contacts General Settings screen, 210
- Customer Reviews screen, 88

D

- Dark Shadows* example, 131, 135
- deleting
 - accounts, 194
 - apps, 78
 - books from Books library, 92
 - documents, 184

- deleting (*continued*)
 - events, 203
 - games from Amazon account, 58
 - music from Cloud Player, 120
 - photos, 176
 - playlists, 122
 - deregistering Kindle Fire, 215–216
 - Device apps library, 74
 - device settings
 - payment type, 213–214
 - updating Kindle Fire, 212
 - Docs Cloud library
 - e-mailing files to, 178
 - finding e-mail address for Kindle, 178
 - limiting e-mail addresses, 179
 - documents
 - deleting, 184
 - locating, 182
 - reading, 183
 - sending via Cloud Drive, 180
 - sideloading, 181
 - Doodle Jump game, 52
 - double tap gesture, 9
 - download progress, displaying, 74
 - drag gesture, 9
- E**
- ebooks. *See also* audiobooks
 - bookmarking pages, 98
 - borrowing from Kindle Owners' Lending Library, 88
 - borrowing from local libraries, 89
 - buying from various sources, 85
 - creating notes, 99
 - downloading from Cloud library, 90
 - downloading narration track, 97
 - file types for sideloading, 108
 - getting from Kindle Store, 84–87
 - highlighting text, 99
 - Immersion reading, 97
 - increasing font size, 95
 - jumping to page locations, 95
 - lending, 104
 - locations, 94
 - looking up words, 100
 - managing bookmarks, 101
 - managing highlights, 101
 - managing notes, 101
 - page slider, 94
 - reading, 93–97
 - Real Page Numbers, 94
 - removing, 91
 - returning borrowed, 92
 - searching within, 105
 - setting margins, 95
 - setting up sharing accounts, 102
 - sharing on Facebook, 102–103
 - sharing on Twitter, 102–103
 - sideloading, 108–110
 - syncing place with WhisperSync, 96
 - Text-to-Speech feature, 95–97
 - turning pages, 94
 - using X-Ray with, 106–107
 - zooming in on images, 96
 - e-mail
 - Delete button, 199
 - reading, 195–196
 - searching, 198
 - seeing all new, 200
 - sending via Cloud Drive, 197
 - signatures, 194
 - e-mail accounts, switching, 200
 - e-mail address
 - changing for Kindle Fire, 179
 - finding for Kindle Fire, 178
 - limiting for Kindle Fire, 179
 - e-mail attachments, sending, 198
 - e-mail folders, switching, 200
 - E-mail General Settings screen, 200
 - e-mail settings, changing, 200
 - e-mailing photos, 175
 - events. *See also* calendar
 - adding, 202–203
 - deleting, 203
 - using reminders, 203
 - viewing, 201–202
 - Exchange account, described, 190

F

- Facebook, sharing books on, 102–103
- Facebook photos, importing, 172. *See also* photos
- Factory Data Reset screen, 216
- factory defaults, resetting to, 216
- favorites
 - accessing, 14
 - adding to, 15
 - rearranging, 15
 - removing, 15
- Favorites button, identifying, 13
- Favorites feature
 - adding apps to, 75
 - bringing up, 10
 - contacts, 209
- files, e-mailing to Kindle Fire, 178
- Fire. *See also* Kindle Fire HD 7-inch model
 - deregistering, 215–216
 - displaying current version of, 212
 - Lock screen, 5
 - powering off, 5
 - powering on, 5
 - resetting to factory defaults, 216
 - turning on for first time, 7–8
 - waking, 5
- folders, creating on Cloud Drive, 180
- force-quitting apps, 79
- front of 7-inch model, 2

G

- Game Store, using, 50–52
- GameCircle
 - Achievements icon, 61–62
 - Add Friends screen, 60
 - in-app summary, 64
 - comparing game stats, 65
 - determining support for, 61
 - earning achievements, 61
 - Edit Your Profile screen, 59
 - finding friends on, 60
 - modifying settings, 66

- setting up profile, 59
- Summary, 64
- viewing achievements, 62–64
- viewing leaderboards, 62–64
- games
 - changing views, 56–57
 - deleting from account, 58
 - downloading purchased, 54
 - launching, 54
 - navigation-bar access, 55
 - purchasing features in, 55
 - removing, 57
 - sharing links to, 53
 - sorting, 56
- Games library menu, 56
- gestures
 - double tap, 9
 - drag, 9
 - long tap, 9
 - pinch, 9
 - swipe, 9
 - tap, 9
- Get App button, 52, 70
- Ghostbusters example, 132
- Gmail account, described, 190
- Grooveshark example, 73

H

- HD Download Options screen, 130
- headphone jack, 3
- Hide Password option, enabling, 7
- Home button, identifying, 13
- Home screen
 - built-in apps, 11–12
 - Carousel, 11
 - landscape mode, 10
 - libraries, 11
 - portrait mode, 10
 - Related section, 11
 - Search box, 11, 32
 - status bar, 10
- Hotmail account, described, 190

I

- Ice Cream Sandwich, 3
- IMAP account settings, entering, 192
- Immersion reading, using with books, 97
- importing
 - Facebook photos, 172
 - music to Cloud Player, 124–126
 - photos using Cloud Drive, 170–171
- In-App Purchasing, disabling, 81
- Inbox for e-mail
 - Delete button, 199
 - Mark button, 199
 - Move button, 199
- Installed Applications screen, 79
- installing apps, 73
- issues of periodicals, managing, 147–148

J

- Join Contacts screen, 208

K

- keyboard
 - customizing, 22
 - implementing suggestions, 21
 - preferences, 22
 - typing alternate characters, 20
 - using spell check, 21
 - viewing numbers, 21
 - viewing symbols, 21
- keyboard settings, accessing, 22
- Kindle Fire
 - charging, 6
 - deregistering, 215–216
 - displaying current version of, 212
 - Lock screen, 5
 - powering off, 5
 - powering on, 5
 - resetting to factory defaults, 216
 - turning on for first time, 7–8
 - waking, 5
- Kindle Fire HD 7-inch model
 - back of, 3
 - camera, 2

- Carousel, 2
 - display, 2
 - front of, 2
 - headphone jack, 3
 - Power button, 3–4
 - related content, 2
 - speakers, 3
 - status bar, 2
 - volume buttons, 3
- Kindle Owners' Lending Library, borrowing books from, 88
- Kindle Store, 84. *See also* books

L

- landscape mode
 - setting, 19
 - viewing Home screen in, 10
- lending books, 104
- Liar's Poker example, 88
- libraries. *See also* Books library
 - borrowing books from, 89
 - searching, 32–33
- Lock screen
 - opening offers on, 186
 - unlocking, 5
- long tap gesture, 9

M

- MAC address, finding, 26
- magazines
 - cancelling subscriptions, 146
 - changing delivery location, 147
 - Color Mode option, 145
 - Font option, 145
 - Font Size option, 145
 - managing issues of, 146
 - Margins option, 145
 - Page View, 145
 - purchasing, 141
 - reading, 142–144
 - searching in, 146
 - Text View, 145
 - turning off page animation, 144

- types of, 140
- viewing two pages of, 144

Manage Your Kindle website, logging into, 179

Menu button, identifying, 13

micro-USB adapter, charging with, 6

movies. *See also* Videos Store

- purchasing from Videos Store, 130–132
- renting from Videos Store, 130–132

MP3s, purchasing, 112–114. *See also* music; songs

multitouch support, 9

music. *See also* Cloud Player; playlists; songs

- buying, 112–114
- deleting from Cloud Player, 120
- importing to Cloud Player, 124–126
- removing from Fire, 119

Music Cloud library

- accessing, 118
- cancelling downloads, 118
- downloading items from, 118–119

Music library

- Confirm delete screen, 122
- Create new playlist screen, 121
- navigating, 115
- playing music in, 116–117

Music Store

- Browse screen, 114
- Buy button, 113
- Confirm delete screen, 119
- displaying songs in, 112
- Search Results section, 113–114
- viewing albums in, 114

My Account screen, 190, 215

My Notes & Marks screen, 101

N

narration track, downloading for books, 97

navigation bar

- Back button, 13
- Favorites button, 13
- hiding and displaying, 13
- Home button, 13
- Menu button, 13

Network SSID option, 25

networks

- finding MAC address, 26
- joining open Wi-Fi, 24
- joining password-protected, 25

newspapers

- cancelling subscriptions, 146
- changing delivery location, 147
- managing issues of, 146
- searching in, 146

Newsstand Store

- buying periodicals from, 140–141
- Color Mode option, 145
- Font option, 145
- Font Size option, 145
- getting back issues from, 142
- magazine types, 140
- Margins option, 145
- purchasing newspapers, 141
- Sections screen, 143
- switching views, 145

notes, creating for books, 99

Notification Settings screen, 76

notification sound, setting, 16

notifications

- removing, 16
- turning off, 16
- viewing, 16

numbers, viewing, 21

O

offers

- opening on Lock screen, 186
- redeeming, 186
- seeing all available, 186
- turning off, 187–188

OfficeSuite Pro, purchasing, 183

orientation

- landscape, 19
- locking, 19
- portrait, 19
- unlocking, 19

P

- page slider, using with books, 94
- paired devices, managing, 28
- password, hiding in public, 7
- password-protected networks, joining, 25
- payment type, changing, 213–214
- periodicals. *See* Newsstand Store
- photos. *See also* Facebook photos
 - deleting, 176
 - downloading from Cloud library, 172
 - e-mailing, 175
 - importing, 170–171
 - viewing, 173
 - zooming, 173
- Photos library
 - Grid View, 174
 - Mosaic View, 174
 - renaming albums, 174
- pinch gesture, 9
- playlists. *See also* music
 - creating, 121–122
 - deleting, 122
 - downloading, 118–119
 - editing, 123
 - playing music from, 123
 - rearranging order of songs, 123
- POP3 account settings, entering, 192
- portrait mode
 - setting, 19
 - viewing Home screen in, 10
- Power button, 3–4
- PowerFast charger, 6
- Prime Instant Videos, streaming, 133

R

- Read now button, 87
- reading. *See also* books
 - documents, 183
 - e-mail, 195–196
- reading toolbar, accessing, 93
- Reading View
 - Alignment setting, 166
 - Appearance settings, 166
 - Color setting, 166

- Font size option, 166
- Margins setting, 166
 - using with Web, 166
- reminders, using with events, 203
- Rename Album screen, 174
- Requested website view screen, 168

S

- screen timeout, setting, 5
- Search app, using, 35
- search engine default, changing, 36
- searching
 - Appstore, 50, 70
 - within books, 105
 - e-mail, 198
 - libraries, 32–33
 - in magazines, 146
 - in newspapers, 146
 - stores, 34
 - with Unified Search app, 32
 - Web, 35–36
 - within Web pages, 164
- Share contact via screen, 209
- Shared Notes & Highlights screen, 103
- Shop app. *See also* stores
 - browsing by department, 42
 - Cancel Order button, 45
 - launching, 38
 - returning to front page of stores, 41
 - Search field, 41
 - sharing links to items, 42
 - Track button, 44
- Shut Down, tapping, 5
- sideloading
 - applications, 71
 - books, 108–110
 - connecting to Mac, 109
 - connecting to PC, 109
 - documents, 181
 - using USB, 109–110
- signatures, adding to e-mail, 194
- Silk. *See also* Web pages
 - clearing saved data, 167
 - cloud features, 167

- creating tabs, 165
- customizing settings, 167–168
- disabling location access, 167
- launching, 167–168
- managing tabs, 165
- modifying cloud features of, 167
- Reading View, 166
- requesting full versions of sites, 168
- zooming in on sites, 163

Silk menu, 36

Silk Settings screen, 167

sites. *See* Web

Sleep mode, activating, 4

social media accounts, linking, 8

Social Network Accounts screen, 102

songs, displaying in Music Store, 112. *See also* music

speakers, 3

spell check, using, 21

Squeeze Machine example, 116

Star Wars: The Clone Wars example, 129–130

Starter page, using for browsing, 158–159

status bar, 2

storage and cloud, 3

stores, searching, 34. *See also* Shop app

subscriptions, managing, 147–148

Successfully Linked screen, 102

suggestions, implementing, 21

swipe gesture, 9

symbols, viewing, 21

system version, displaying, 212

T

- tabs, managing on Web, 165–166
- tap gesture, 9
- Temple Run game, 54
- Text-to-Speech feature, using with books, 95–97
- time zone, entering, 7
- timeout, setting, 5
- Title Not Available screen, 104
- touch terminology
 - double tap, 9
 - drag, 9

- long tap, 9
- pinch, 9
- swipe, 9
- tap, 9
- trending sites, displaying, 12
- tutorial, accessing, 8
- TV shows, purchasing, 128–130
- Twitter, sharing books on, 102–103
- typing alternate characters, 20

U

- Unified Search app, accessing, 32
- updating
 - apps, 82
 - Kindle Fire, 212
- URL bar, using for browsing, 162
- USB Compatibility screen, 109

V

- version of Kindle Fire, displaying, 212
- videos
 - controlling while playing, 136
 - creating watchlists, 138
 - streaming, 133
 - using X-Ray with, 137
- Videos library, watching videos from, 134–135
- Videos Store. *See also* movies
 - purchasing movies, 130–132
 - purchasing TV shows, 128–130
 - renting movies, 130–132
- volume, adjusting, 17
- volume buttons, 3

W

- waking Kindle Fire, 5
- watchlists, creating for videos, 138
- Web. *See also* browsing
 - accessing bookmarks, 159
 - adding bookmarks, 160
 - deselecting bookmarks, 160
 - managing bookmarks, 160
 - managing browsing history, 161
 - searching, 35–36
 - Starter page, 158–159

Web pages. *See also* Silk
 searching within, 164
 sharing, 164
WhisperSync, syncing place in books with, 96
Wi-Fi networks
 adding, 25
 forgetting, 26
 joining, 24
 turning on or off, 24
Wi-Fi symbol, changing color of, 24
wireless connections, getting information
 about, 26
Word documents, editing, 183

X

X-Ray feature
 button, 11
 using with books, 106–107
 using with videos, 137

Y

Yahoo! account, described, 190

Z

zooming photos, 173