

My Microsoft® Windows® 7 PC



My Microsoft®
Windows® 7 PC



Katherine Murray

que®

800 East 96th Street
Indianapolis, Indiana 46240 USA

My Microsoft® Windows® 7 PC

Copyright © 2012 by Pearson Education, Inc.

All rights reserved. No part of this book shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from the publisher. No patent liability is assumed with respect to the use of the information contained herein. Although every precaution has been taken in the preparation of this book, the publisher and author assume no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein.

ISBN-13: 978-0-7897-4895-9

ISBN-10: 0-7897-4895-9

Library of Congress Cataloging-in-Publication Data is on file.

Printed in the United States of America

First Printing: October 2011

Trademarks

All terms mentioned in this book that are known to be trademarks or service marks have been appropriately capitalized. Que Publishing cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

Warning and Disclaimer

Every effort has been made to make this book as complete and as accurate as possible, but no warranty or fitness is implied. The information provided is on an "as is" basis. The author and the publisher shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this book.

Bulk Sales

Que Publishing offers excellent discounts on this book when ordered in quantity for bulk purchases or special sales. For more information, please contact

U.S. Corporate and Government Sales

1-800-382-3419

corpsales@pearsontechgroup.com

For sales outside of the U.S., please contact

International Sales

international@pearson.com

EDITOR-IN-CHIEF

Greg Wiegand

ACQUISITIONS EDITOR

Loretta Yates

MARKETING MANAGER

Dan Powell

DEVELOPMENT EDITOR

Todd Brakke

MANAGING EDITOR

Kristy Hart

SENIOR PROJECT EDITOR

Lori Lyons

COPY EDITOR

Chuck Hutchinson

INDEXER

Tim Wright

PROOFREADER

Sheri Cain

TECHNICAL EDITOR

Sharon Fields

PUBLISHING

COORDINATOR

Cindy Teeters

BOOK DESIGNER

Anne Jones

COMPOSITOR

Bronkella Publishing LLC

Contents at a Glance

	Introduction	1
Chapter 1	Getting Started with Windows 7	9
Chapter 2	Preparing Your Windows 7 PC	41
Chapter 3	Getting and Staying Connected: Phones, Devices, and Tablets	67
Chapter 4	Securing Your Windows 7 PC	89
Chapter 5	Find What You're Looking for—Fast!	115
Chapter 6	Exploring, Downloading, and Running Programs	133
Chapter 7	Organizing Files and Folders	161
Chapter 8	Doing the Web Thing (Plus Email and Calendars, Too) ...	193
Chapter 9	Ready, Set, Media!	241
Chapter 10	Cataloging and Fine-Tuning Your Photos	275
Chapter 11	Personalizing Windows 7	303
Chapter 12	Networking—at Home and on the Road	329
Chapter 13	Windows 7 Care, Feeding, and Troubleshooting	345
	Index	363

Table of Contents

Introduction	1
Highlights of Windows 7	2
Versions of Windows 7	3
What You'll Find in This Book	4
Let's Begin	6

1 Getting Started with Windows 7

Starting and Stopping Windows 7	10
Starting Windows 7	11
Using the Start Menu	13
Finding What You Need on the Start Menu	13
Learning the Taskbar	17
Learning Taskbar Tools	17
Navigation Basics: Using the Mouse and Keyboard	22
Using the Mouse	22
Working with Windows	26
Starting a Program	26
Opening a Document	29
Switching to a Different Window	30
Arranging Windows	31
Getting the Help You Need	35

2 Preparing Your Windows 7 PC

Transferring Files	42
Using Windows Easy Transfer	42
Setting Up Programs	45
Setting Up Your Printer	48
Getting Ready to Use Hardware	51
Updating Drivers	53
Setting Up Internet Connections	56
Managing Your PC Power	59
Preparing for Recovery	62

3	Getting and Staying Connected: Phones, Devices, and Tablets	67
	Connecting Devices to Windows 7	68
	Syncing Your Phone	69
	Syncing Your MP3 Player	75
	Moving Files from a Flash Drive	79
	Setting Up Your Drawing Tablet	82
	Getting Started with Your Drawing Tablet	82
4	Securing Your Windows 7 PC	89
	Working with the Action Center	90
	Working with an Action Center Alert	92
	Setting Up User Accounts	97
	Setting a Password	102
	Using Windows Defender	105
	Turning on Your Windows Firewall	109
	Changing User Account Control Settings	111
	Changing User Account Control Settings	111
5	Find What You're Looking for—Fast!	115
	Performing a Simple Search	116
	Using the Search Box	117
	Using the Search Folder	119
	Extending a Search	120
	Understanding Search Filters	121
	Expanding Your Search	122
	Searching Online	123
	Customizing and Saving a Search	126
	Creating a Custom Search	126
	Saving Your Search	129

6 Exploring, Downloading, and Running Programs 133

Finding and Starting a Program	134
Working with Program Windows	138
Exploring a Program Window	139
Copying Content Between Programs	141
Closing a Program	143
Downloading and Installing Programs	144
Getting Ready to Download a Program	145
Purchasing, Downloading, and Installing a Program	147
Repairing and Uninstalling Programs	149
Repairing Installations	149
Uninstalling Programs	150
Working with Gadgets	153
Display Running Gadgets	154

7 Organizing Files and Folders 161

Working with Windows 7 Libraries	162
Getting Started with Windows 7 File Libraries	162
Taking a Look at Windows Explorer	164
Using the Navigation Pane	166
Adding Folders to Libraries	167
Creating a Library	168
Arranging Library Display	171
Managing Folders	173
Finding the Folder You Want	173
Removing Folders	180
Finding, Organizing, and Sharing Your Files	181
Finding Files	181
Previewing Files	182
Displaying and Updating File Information	183
Tagging Files	184
Compressing and Uncompressing Your Files	189

8	Doing the Web Thing (Plus Email and Calendars, Too)	193
	Getting Online with Internet Explorer	194
	Starting Internet Explorer	194
	A Look Around the Internet Explorer Window	195
	Displaying Browser Toolbars	197
	Using the Notification Bar	198
	Selecting Your Home Page	199
	Browsing and Searching the Web	200
	Navigating the Web	202
	Searching for Information	204
	Adding a Search Provider	206
	Working with Tabs	210
	Opening a New Tab	210
	Changing the Tab Display	211
	Displaying Colorful Tabs	212
	Pinning a Site to the Taskbar	213
	Working with IE9 Tools	215
	Changing Site Display	217
	Adding and Managing Favorites	218
	Viewing Your RSS Feeds	223
	Adding Web Slices	226
	Securing Your Browsing Experience	227
	Blocking ActiveX Controls	228
	Sending a Link by Email with Windows Live Mail	235
	Sending Mail	236
9	Ready, Set, Media!	241
	Watching TV and Movies on Your PC	242
	Looking Around the Windows Media Center Window	243
	Watching Internet TV on Your PC	245
	Watching Live TV on Your PC	249
	Recording a Series or a Show	251
	Setting Recording Options	252
	Sharing Media on Your Phone	256

Enjoying Media with Windows Media Player	258
Exploring the Windows Media Player Window	259
Playing Tunes in Windows Media Player	260
Creating a Playlist	265
Streaming Your Media	268
Viewing the Media Guide	271

10

Cataloging and Fine-Tuning Your Photos 275

Adding Pictures to Your PC	276
Connecting Your Camera and Downloading Pictures	276
Adding and Viewing Pictures from Your Phone	278
Viewing Photos on Windows Phone 7	278
Viewing Photos in the Pictures Library	281
Looking Around the Pictures Library	281
Viewing Pictures in the Picture Library	282
Using the Windows Photo Viewer	284
Managing Your Pictures	287
Rotating Pictures	288
Tagging Pictures	292
Sharing Your Pictures	296
Printing Pictures	299
Printing Your Photos	299

11

Personalizing Windows 7 303

Changing Your Desktop	303
Choosing a New Background	304
Choosing a Desktop Theme	306
Adjusting the Look of Windows 7	310
Choosing a Color Scheme	310
Changing the Font Size	314
Adjusting the Mouse	320
Changing Mouse Pointers	320
Changing System Sounds	325

12	Networking—at Home and on the Road	329
	Setting Up a Home Network	330
	Gathering Your Equipment	330
	Getting Started with a HomeGroup	335
	Creating and Setting Up a HomeGroup	336
	Using Your HomeGroup	340
13	Windows 7 Care, Feeding, and Troubleshooting	345
	Updating Windows 7	346
	Backing Up and Restoring Your Files	349
	Backing Up Your Files	349
	Using System Tools	354
	Disk Cleanup	354
	Disk Defragmenter	356
	Compatibility with Windows 7	357
	Using the Windows Compatibility Center	358
	Index	363

This page intentionally left blank

About the Author

Katherine Murray has been writing about technology since before Microsoft Windows—*any* Microsoft Windows—even existed. She's worked with every consumer version of Windows that has ever been made, marveling with the masses at Windows 3.1, swearing at Windows ME, enjoying Windows XP, and threatening to throw her computer off the roof, thanks to Windows Vista. Now with Windows 7, she feels we have arrived at a sleek, smart, reasonably lightweight operating system that does pretty much what most users need it to do. She started writing about technology 24 years ago and still enjoys it, specializing in Microsoft Office technologies and the fascinating ways in which we stay in touch with each other through cloud technology, blogging, social media, and more. You'll find Katherine's blog, BlogOffice, at www.murrayblogoffice.blogspot.com. In addition to writing books, she writes regularly for CNET's TechRepublic and Windows Secrets.

Dedication

This book is dedicated to the folks who just want their computers to work, simply and easily, so they can get on with the really fun things in life (like grandchildren!).

Acknowledgments

Most creative projects require the talents and know-how of a number of people, and this is certainly true in the world of book publishing. Many thanks to the whole crew at Que Publishing for their insight, encouragement, and great editing all the way through *My Microsoft Windows 7 PC*. Special thanks to Loretta Yates for thinking of me for this project and to Laura Norman, series editor, for her experience and good suggestions on practical preparations for this project. I also greatly appreciate the expertise of Todd Brakke, development editor; Lori Lyons, project editor; Chuck Hutchinson, copy editor; and Sharon Fields, technical editor, who helped ensure that everything you find in the book is accurate and easy to read.

It's been a real pleasure for me to come back to Que and write after all these years. My career in technical writing began at Que way back in 1987 (really!), when I wrote *Using PFS: First Publisher*. The world has changed since then, but it's great to see that Que's caring about quality has been a constant all the way along.

We Want to Hear from You!

As the reader of this book, *you* are our most important critic and commentator. We value your opinion and want to know what we're doing right, what we could do better, what areas you'd like to see us publish in, and any other words of wisdom you're willing to pass our way.

As Editor-in-Chief for Que Publishing, I welcome your comments. You can email or write me directly to let me know what you did or didn't like about this book—as well as what we can do to make our books better.

Please note that I cannot help you with technical problems related to the topic of this book. We do have a User Service group, however, where I will forward specific technical questions related to the book.

When you write, please be sure to include this book's title and author as well as your name, email address, and phone number. I will carefully review your comments and share them with the author and editors who worked on the book.


Email: feedback@quepublishing.com

Mail: Greg Wiegand
Editor-in-Chief
Que Publishing
800 East 96th Street
Indianapolis, IN 46240 USA

Reader Services

Visit our website and register this book at quepublishing.com/register for convenient access to any updates, downloads, or errata that might be available for this book.

This page intentionally left blank

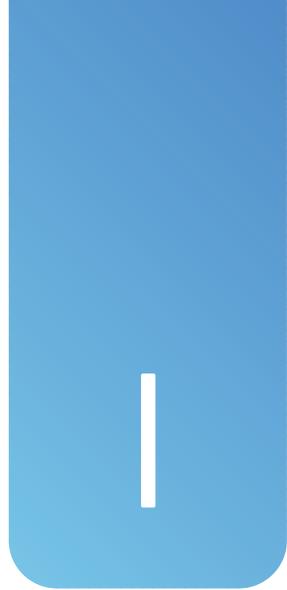

Introduction

If you're new to computers (or even if you're not), you might not be too familiar with what your operating system can do for you. Many people purchase their computers with a specific set of tasks in mind. You want to check email, update your favorite social media sites, and browse and shop online. Or you plan to use your home computer to work on the files from work you're not quite finished with. Or maybe you're interested in organizing your photos, music, or videos in a way that makes them easy to find later.

In this book, you'll learn how to use Windows 7 to do all these things—and more—on your Windows 7 PC. We'll begin with a simple introduction to your machine, and soon you'll know how to connect various devices to your system and get Windows 7 talking to them. Throughout the rest of this book, you'll learn how to accomplish all the other basic tasks you'd like to master with Windows 7, including setting up security and privacy measures for your system, finding files, preparing media, working with pictures, networking your home computers, and much, much more.

Highlights of Windows 7

Windows 7 gives you a simple, streamlined way to work with the programs, files, and settings on your computer. As you'll learn in more detail in Chapter 1, the screen is easy to understand and navigate, and mouse and keyboard techniques are easy to learn. The familiar Start menu has been enhanced to give you easy access to programs and files of all sorts, and the taskbar, along the bottom of your window for starters, makes it simple to choose the file and program you want to work with.



Windows 7 includes several features that make getting to the files and programs you want—or enjoying music, movies, or pictures on your computer—easier than ever. These new features include

- Jump lists, which enable you to move directly to a file you want when you click a program icon—either in the Start menu or on the taskbar
- Taskbar previews, which show you a thumbnail image of the file when you hover the mouse pointer over the application icon on the taskbar

- Snap, Shake, and Peek, which make it simple for you to view and arrange open windows
- Homegroups, which give you a way to easily share files and printers on a home network
- Remote Media Streaming, which lets you listen to or watch the media on your home PC no matter where you are by connecting over the Internet
- Play To, which enables you to play music or movies on another computer or device in your home
- Touch capability, which lets you use the touch capability of your monitor to point to, open, select, and even paint images on the screen

You'll find these features covered throughout this book in the appropriate chapters. Note that to be able to take advantage of some of the features—such as Homegroups, Remote Media Streaming, or touch capability—you must have other computers connect to your Windows 7 PC or home network, or use a touch-capable device.

Versions of Windows 7

Windows 7 is available in several different editions, each of which offers capabilities related to what you want to accomplish with your PC:

- Windows 7 Starter is available on netbook computers. It is a lightweight version of Windows 7 that makes it easy to connect to wireless networks, add and set up devices, and work with the programs and files you need.
- Windows 7 Home Premium is designed to shine a spotlight on all your media, while giving you access to all the programs and files you need. You can easily set up a home network, watch and record Internet TV, and share music and media.
- Windows 7 Professional is geared toward the business user, offering a reliable and secure experience and making it easy to add devices and back up your files.
- Windows 7 Ultimate combines the features of Home Premium and Professional with enhanced security features such as BitLocker, which can protect your files against loss or theft.

Oranges to Oranges

If you want to compare the different versions of Windows 7 to see which edition works best for you, visit www.windows.microsoft.com.

What You'll Find in This Book

This book takes a practical and visual approach to showing you just the tasks you need to know to make the most of your Windows 7 PC. You'll find out how to set up, manage, and secure your hardware and software and discover ways to customize Windows 7 so that it works the way you do. Specifically, here's what you'll find:

- Chapter 1, "Getting Started with Windows 7," introduces you to Windows 7 and demonstrates how to use the Start menu and taskbar. You'll also learn how to use the mouse and keyboard, find out how windows operate, and find out how to get help.
- Chapter 2, "Preparing Your Windows 7 PC," shows you how to transfer your files and get everything set up and ready to roll in Windows 7. You'll also set up your printer, make sure you have Internet access, and learn about managing your PC's power.
- Chapter 3, "Getting and Staying Connected: Phones, Devices, and Tablets," shows you how to set up and manage devices with your Windows 7 PC.
- Chapter 4, "Securing Your Windows 7 PC," introduces you to the Action Center and shows you the ins and outs of setting passwords, creating user accounts, updating your security settings, turning on a firewall, backing up your files, and creating trusted contacts.
- Chapter 5, "Find What You're Looking For—Fast!" takes a close look at all the techniques you need for searching for specific files on your computer. You'll learn how to tailor your search to get accurate results and search on various file properties as needed.
- Chapter 6, "Exploring, Downloading, and Running Programs," begins by exploring the Windows 7 gadgets already installed on your Windows 7 PC. You'll also discover how to locate and launch a program, create a program shortcut, use the Task Manager, download a program from the Internet, and install and run programs.

- Chapter 7, "Organizing Files and Folders," starts off with coverage of the new Windows 7 libraries and then shows you how to add and remove folders in Windows Explorer. You'll also learn about changing file views, previewing files and folders, hiding folders, and sharing files in a variety of ways.
- Chapter 8, "Doing the Web Thing (Plus Email and Calendars, Too)," takes you online with Internet Explorer 8 and goes through the basics of secure browsing. You'll learn to work with multiple web pages, view Quick Tabs, add pages to your favorites list, and learn what web slices are all about.
- Chapter 9, "Ready, Set, Media!" introduces you to all things media on your Windows PC. You'll learn about Windows Media Player and Windows Media Center, find out how to sync media with your phone, discover how to create audio CDs, stream your media, change video display modes, record sound, make movies, and much more.
- Chapter 10, "Cataloging and Fine-Tuning Your Photos," helps you download your pictures to your PC and view them in your Pictures Library and in the Windows Photo Viewer. You'll find out how to create a Picture Slide Show; tag the photo files; and organize, share, and print your pictures.
- Chapter 11, "Personalizing Windows 7," shows you how you can tweak Windows 7 so that it fits the way you like to work and play. Choose a new theme, change your desktop, adjust the color scheme and font size, customize the way your mouse works, and add new alert sounds if you like.
- Chapter 12, "Connecting to a Network," explores how to create a new home network, add other PCs and a printer, and learn to share files among your computers. You also learn how to create a network connection, log on to available networks, and manage your network connections.
- Chapter 13, "Windows 7 Care, Feeding, and Troubleshooting," wraps up the book with information about how to upgrade your version of Windows 7, install and uninstall programs, and problem-solve any challenges you may be having with your PC. You'll also learn about the various diagnostic tools that are part of Windows 7 so that you can check your system regularly and keep things running smoothly.

The chapters are organized so that you can jump in and read about whatever interests you most, or you can choose to go through the book sequentially if you like. Along the way, you'll find tips, notes, and two kinds of sidebars: *Go Further*, which gives you additional information about getting more from the topic at hand, and *It's Not All Good*, which lists common pitfalls and trouble spots you can watch out for.

Let's Begin

If you have a new PC that you haven't yet set up, go ahead and unbox it and follow the instructions in the system to connect the system unit, monitor, keyboard, and mouse. You can also connect your printer if you have one. Have the disc that came with your computer handy. The first time you press the Power button, Windows 7 will start. The screen will likely walk you through a number of steps as your computer is configured for the first time. Follow along with the onscreen prompts and provide information as needed. When the desktop appears, with the Windows 7 Start button in the lower-left corner, you're ready to begin.

When you're ready, turn the page and let's get started exploring your Windows 7 PC!

This chapter shows you how to connect your devices and sync your files by exploring these tasks:

- Connecting devices to Windows 7
- Synching your phone
- Synching your MP3 player
- Moving files from a flash drive
- Setting up your drawing tablet

3

Getting and Staying Connected: Phones, Devices, and Tablets

Today we live in a connected age. We listen to music on our computers, our phones, and in our cars. It seems as if we're forever moving documents from our work PC to our home computer and over to our laptop, and maybe sending them to our mobile device before we're through. We type, doodle, paint, speak, and meet on just about every conceivable piece of technology, gathering information from our browsers, tablets, phones, and more.


All this connection is a great thing, but sometimes getting all the different pieces of technology communicating can be a bit of a headache. This chapter shows you how to connect your various devices to Windows 7 so that you can share files easily and get on with other, more creative tasks.

Connecting Devices to Windows 7

One of the challenges of being the program everybody wants to plug in to is that you need to be able to accommodate all kinds of different hardware and software. This means that even though Microsoft offers several ways devices can connect to Windows 7, the hardware manufacturer—the company that manufactured your mobile phone, for example—must provide the driver needed for the device to recognize the specific Windows 7 tool designed to help the device sync up.

This means that Device Stage, for example—the newest and smartest connectivity utility offered by Windows 7—is available for your device only if the device manufacturer has created the necessary driver for the device to be able to use Device Stage.

So depending on the device you're connecting to Windows 7 and the drivers available for that device, you may see the following:

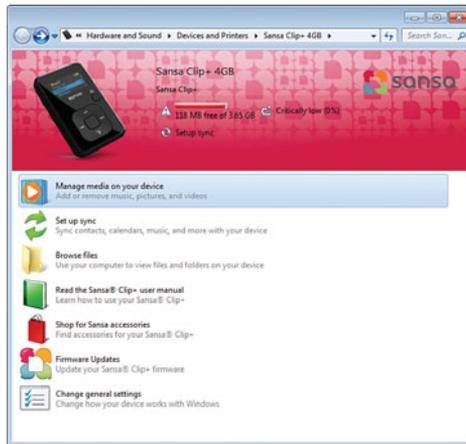

- Device Stage, which was introduced in Chapter 2, “Preparing Your Windows 7 PC,” helps you sync your device to Windows 7 and share photos, music, files, and more.



- Windows Mobile Device Center is a utility that was first made available for Windows Vista and now is part of Windows 7. If your device requires it, you need to download Windows Mobile Device Center from Microsoft Downloads. (You learn how to do that later in this chapter.)

Windows 7 Sync Center: For Networks Only

The Windows 7 Sync Center, although it might *sound* as though you could use it to sync your devices, is really intended to synchronize files when you're working on and off a network. The Sync Center keeps track of the files that have been synchronized and updates files as needed.

Yes, it's a little confusing, but the bottom line is this: Make sure your Windows Updates are turned on so that you always have the most current version of Windows 7. Chances are that the most important drivers you need to keep Windows 7 communicating happily with your devices will be updated automatically through the Windows Updates you receive. But it's a good idea to check your device manufacturer's website regularly or use the steps in the "Updating Drivers" section in Chapter 2 to make sure you have the most recent version of the driver available for your device.




Syncing Your Phone

No matter what kind of smartphone you're using, you can sync the phone with Windows 7 and transfer files—including pictures, music, videos, and Office Mobile documents—to your computer. This gives you great flexibility in the media and files you enjoy on your phone and enables you to share the files with your computer so you have access to them anywhere. The process is different, depending on the operating system of the phone you use.

Connecting Your Windows Phone 7

Excitement is growing about the Windows Phone 7 because of its beautiful touchscreen, full-featured mobile operating system, and easy integration with Microsoft programs. This phone—which is available from a handful of providers—enables you to make the most of touch capability and download and use more than 10,000 apps.


1. Begin by connecting your phone to a USB port on your computer.
2. When prompted, click Get Software.
3. You are taken to Microsoft's Zune site. Click Download Now.
4. In the File Download dialog box, click Run to download the software and click Run again.
5. Disconnect your phone as prompted and click Install.

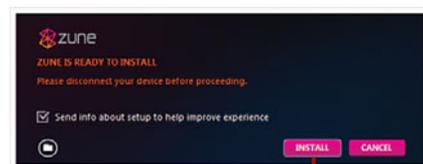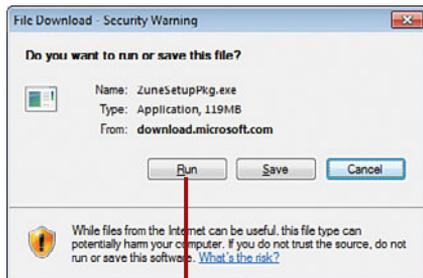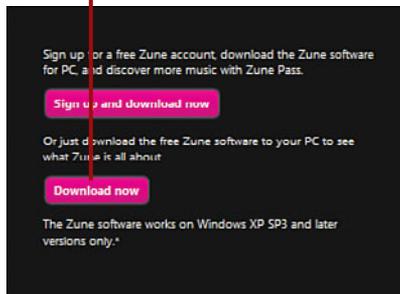

6. You are prompted to let the Zune software restart your computer and then reconnect your Windows 7 phone. The Zune software launches automatically.
7. To begin the sync, click Start and then click Skip. Click the icon in the lower-left corner of the Zune window to check your phone sync status.
8. Click the phone and PC icon (alternately) to sync items from the phone to your computer and vice versa. Drag and drop the files you want to sync.

Subsequent Syncs

After you set up your initial synchronization, Zune updates your files automatically whenever you connect your phone to your PC. You can change your sync preferences by clicking Settings in the upper-right area of the Zune window.

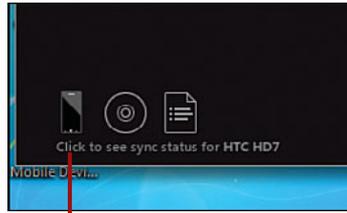

Disconnecting Your Windows 7 Phone

Remember to remove your Windows 7 phone safely by clicking the Show Hidden Icons arrow in the notification area, clicking the Safely Remove Hardware icon in the gallery, and choosing to eject your phone.

Connecting Your Windows 6 Phone

If you're using a Windows phone model made prior to Windows Phone 7, your phone uses an earlier mobile operating system, such as Windows Mobile 6.5. This means that you need to download and install Windows Mobile Device Center (instead of Zune, for the Windows Phone 7) to be able to synchronize the files on your phone and your computer.

1. Using your web browser, go to Microsoft Downloads (www.microsoft.com/downloads) and enter **Windows Mobile Device Center** in the search box.
2. Click Microsoft Windows Mobile Device Center 6.1 for Windows Vista (32-bit or 64-bit, depending on which type of computer you have).
3. After you download and install the software (the utility will lead you through the steps), plug your phone in to an available USB port and double-click the Windows Mobile Device Center icon on your desktop.
4. Click Mobile Device Settings and choose how you want Windows Mobile Device Center to handle any conflict when syncing files between your phone and PC.





5. Set sync preferences for picture files by clicking Pictures, Music and Video.
6. Click Pictures/Video Import Settings.
7. Click the arrow and choose the location where you want imported files to be stored.
8. Change other import options as needed.
9. Click OK.

Yes, It's Okay That It Says "Vista"

Even though the Windows Mobile Device Center says Windows Vista, it works with Windows 7 as well.

Not Sure Whether You Have a 32-bit or 64-bit Computer?

There's an easy way to check the type of computer you have. Click Start, and on the right side of the Start menu, right-click Computer. Click Properties. The value to the right of the System Type item tells you whether you're using a 32-bit or 64-bit PC.

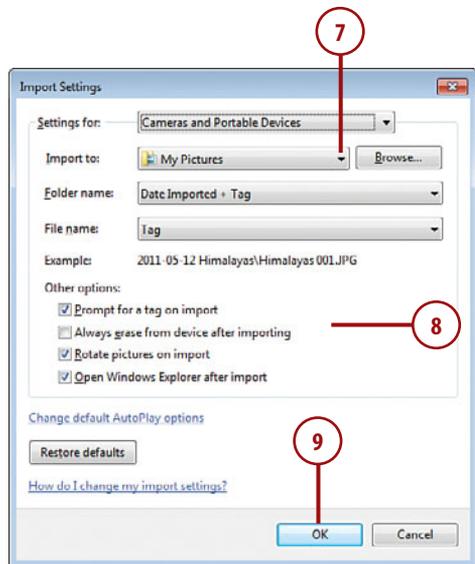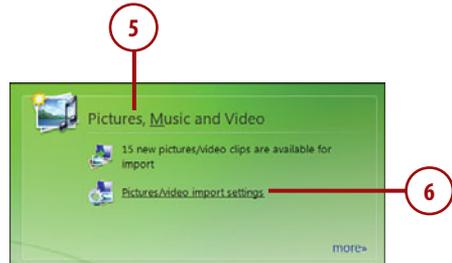

WHATEVER HAPPENED TO ACTIVESYNC?

If you've use Windows phones previously with a Microsoft Windows operating system, you may be wondering what happened to ActiveSync, which was used to synchronize devices. Windows Mobile Device Center is an improved version of ActiveSync, which was originally designed for Windows Vista.

Windows Mobile Device Center works with Sync Center (remember that?) to create a mobile partnership and manage the synchronization of your files among the PC and supported devices. Sync Center also manages file relationships so that you have the most current versions of files whether you're working connected to a network server or using an offline PC or device.



You can check the sync status in Sync Center by clicking the Sync Center icon in the Show Hidden Icons gallery in the notification area. Sync Center tells you when the most recent sync was performed and lists any outstanding sync operations.

The Apple Doesn't Fall Far from the Tree

If you're using an iPhone or an iPod Touch, you still need to use Apple iTunes to sync your files. After you set up iTunes to run in Windows 7, however, all you need to do to synchronize your devices is to connect it with the cable that came with the device. You can find out more about Apple iTunes by going to www.apple.com/itunes/.

Syncing Your MP3 Player


Your MP3 player probably gives you lots of joy, enabling you to take your favorite albums, podcasts, and more basically anywhere you want to go—to the gym, on your bike, on the trail, at your desk. Windows 7 makes it easy to sync your MP3 player and transfer the audio files you want to listen to so you'll have your tunes on the road.

Many different types of MP3 players are available, of course, and some will have their own software requirements and sync with Windows 7 in different ways. Your iPod, for example, uses iTunes to sync your media. This section describes one way you can sync your MP3 player and set device preferences, but be sure to follow the on-screen prompts for your particular device if the process you experience is somewhat different from the ones described here.

Copying Files to Your MP3 Player

The easiest way to move files to your MP3 player is to choose the option Windows 7 presents to you as soon as you connect the device to your USB port.


1. Connect the device to your Windows 7 PC.
2. Windows 7 displays a message that the driver has been installed.
3. Choose Sync Digital Media Files to This Device from the AutoPlay dialog box that appears after the driver is installed.

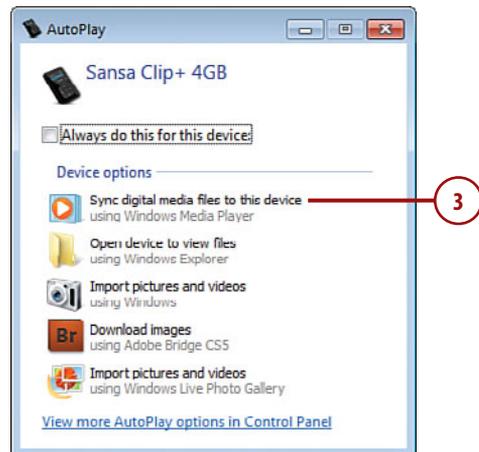

4. In Windows Media Player, drag the files, playlists, or albums you want to sync to the column on the right.
5. Click Start Sync. Windows Media Player shows you the status of the synchronization and then lets you know that it's safe to remove your MP3 player from the USB port.

Where's Device Stage?

Not all devices appear in Windows 7 Device Stage. Because Device Stage is a new utility in Windows 7, not all third-party manufacturers have produced drivers that enable devices to use Device Stage for synchronizing and file management. You can check with the manufacturer of your device to see whether an update is available for the device model you have.

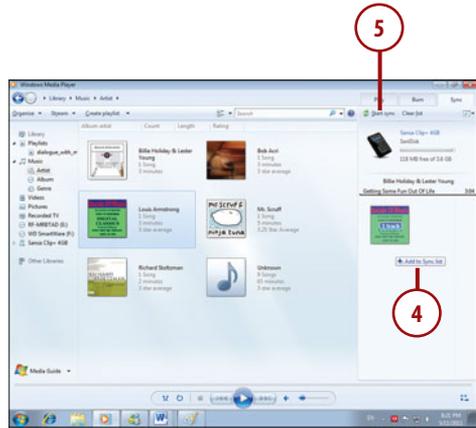

A Tiny Little USB

When you prepare to connect your MP3 player to your PC, you'll notice that the USB cable for connecting the device is different from the ones you use to connect other hardware to your computer. When you connect your printer to your PC, for example, the USB cable has what are called type A or B connectors at either end. Your MP3 player likely uses a mini or micro-USB cable, which has a small USB connector on one end and a traditionally sized USB connector on the other. Plug the small end into the port on your MP3 player and plug the regular-sized USB connector into an available USB port on your PC. Because the number of different USB cable connectors can get confusing, the important thing is to use the cable that came with your device. Windows 7 will do the rest!



Setting Connection Defaults

You can set up the way Windows 7 responds when you connect your MP3 player by changing the general settings for the device.

1. From the Device Stage window, click Change General Settings.
2. Click the arrow for the option that controls what happens when the device is connected to the computer.
3. In the list, click the action you want Windows 7 to take.
4. Leave the notifications check box selected.
5. Click OK.

Changing Connection Settings

You can change the connection behavior for your device at any time. In the Device Stage, click Change General Settings and repeat the steps in the list. If your device doesn't open Device Stage, click Start, click Device and Printers, right-click the device icon, and choose the option you want to set from the displayed list.

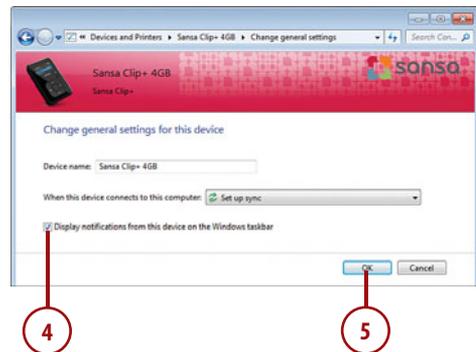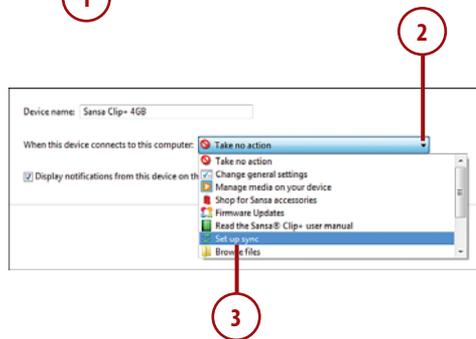




Specifying Sync Options

You can choose the way Windows 7 syncs the files on your device by choosing one-way or two-way synchronization. One-way synchronization syncs the files in one direction only—for example, from your media library on your PC to your MP3 player. Two-way synchronization syncs the device and the computer both ways, so both systems have the same files.

1. Click Set Up Sync from the device's Device Stage window.
2. Click Settings for the item you want to change.
3. Click to save as much music as you have room for.
4. Click to specify the folders, songs, or playlists you want to sync to your device.
5. Click to add specific folders to the sync.
6. Click to choose a playlist or songs.
7. Click OK to save the settings.

Keeping Track of Space on Your Device

Windows 7 shows you how much space is used on your device, how much is needed for the folders and files you want to sync, and how much space is left over.

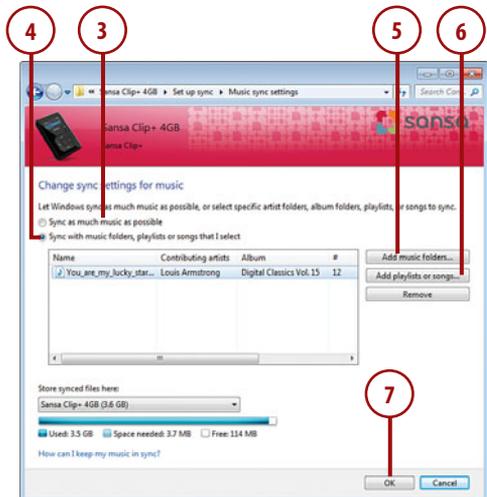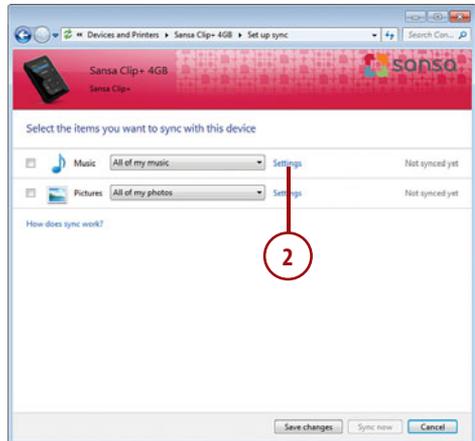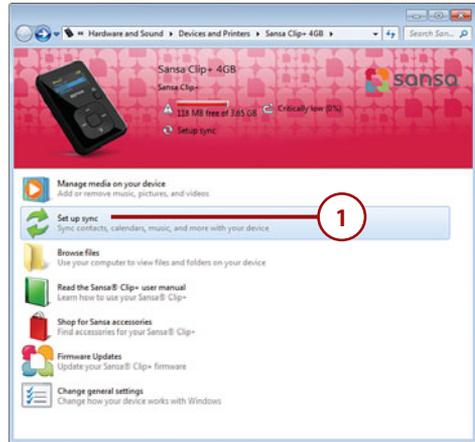



Moving Files from a Flash Drive

Small storage devices, called *flash drives* or *thumb drives*, enable you to easily move files from one device to another when you don't have the option of sharing a network or when the files you want to share are too big to attach to an email message.


Viewing and Moving Flash Drive Files

When you first connect the flash drive to your USB port, Windows 7 automatically senses the addition and displays the AutoPlay dialog box so that you can tell the program what to do next.

1. Click Open Folder to View Files.
2. In Windows Explorer, select the file(s) you want to transfer.
3. Click a folder arrow to locate the subfolder you want to use to store the file(s).

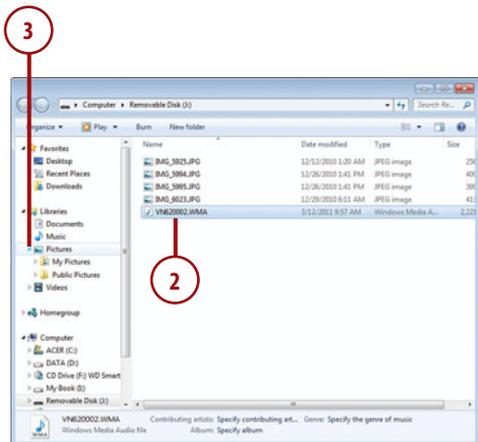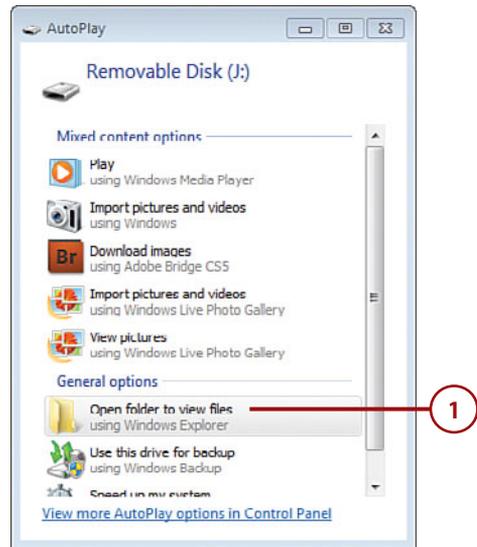

4. To move the file, press and hold the Shift key and drag it to the folder.
5. Release the mouse button and Shift key.

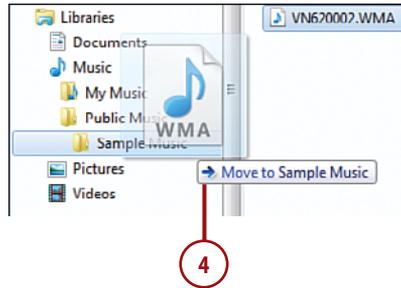

Selecting Multiple Files

Of course, you don't have to move files one by one. If you want to select all the files on the flash drive, press Ctrl+A. If you want to choose a couple of the files that happen to be next to each other, click the first file you want, press and hold Shift, and click the last file in the set you want to move. If you want to choose different files on the flash drive that are not beside each other, press and hold Ctrl and click each file you want to move.

Copying Files from the Flash Drive

If you want to leave the files on the flash drive and copy a version of the files to your Windows 7 PC, click the files you want to copy and then drag them to the destination folder. By default, Windows 7 copies the files you drag, leaving the originals intact in the original folder.

Compressing Many Files

If you have many different files you want to move or copy to a new location, you can compress all the files into one before you move them. To get the specific steps on compressing files, see Chapter 7, "Organizing Files and Folders."


Removing the Flash Drive

When you're ready to remove the flash drive, it's a good idea to let Windows 7 close the drive properly before you remove it. Chances are everything will be fine if you just pull the drive out of the port, but why take a risk when removing it the safest way takes only two extra clicks?

1. Click the Show Hidden Icons arrow in the notification area.
2. Click the Safely Remove Hardware icon.
3. Click the flash drive in the list.
4. When you see the Safe to Remove Hardware message, remove the flash drive.

On Second Thought...

If you decide you want to check something on the flash drive after you've used the Safely Remove Hardware tool, Windows 7 isn't able to view the contents of the drive unless you remove the drive from the port and reinsert it.

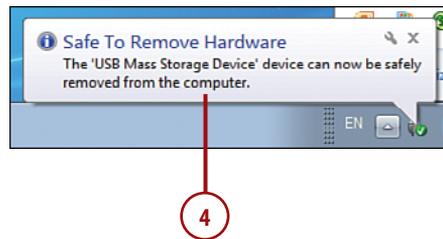

BOOSTING PERFORMANCE WITH READYBOOST

If you love the idea of optimizing the performance of your computer and accessing your files as quickly as possible, you may want to use your flash drive as additional memory. Windows 7 includes a feature called ReadyBoost that enables you to use the flash drive as a disk cache, or a segment of memory that stores data in such a way that it can be accessed more quickly.

You can use a number of different storage devices with ReadyBoost: a USB flash drive, SD card, flash memory, or CompactFlash. When you connect the device, the Windows AutoPlay dialog box appears. You can click the ReadyBoost tab to set the amount of space you want to use as the disk cache.


Setting Up Your Drawing Tablet

Depending on the type of work you do, a drawing tablet may be part of your normal toolkit. No matter what manufacturer made the drawing tablet you have, the device came with a CD that includes installation software, drivers, and possibly a manual for your device. Install the manufacturer's software before you plug the device into Windows 7. The software probably walks you through the steps of calibrating the tablet so that it responds to your handwriting and gestures. You can also specify settings (or tweak things that aren't working well) by using the Control Panel.

Getting Started with Your Drawing Tablet


Windows 7 includes a number of settings you can customize so that your drawing tablet will work the way you want it to in Windows 7. The types of settings may vary depending on the capabilities of your tablet model, but the steps here give you a sense of how to find and set drawing tablet options.

1. Click Start.
2. Click Control Panel.
3. Click Hardware and Sound.
4. Scroll down to the area that reflects your tablet and click Set Up Your Pen and Tablet.
5. Click the arrows and click your choice to select the way you want the pen buttons to function.
6. Adjust the Soft-Firm slider to change the feel of the pen tip.
7. Choose whether you want to hear an audible click when you use the tablet.
8. Click Advanced.

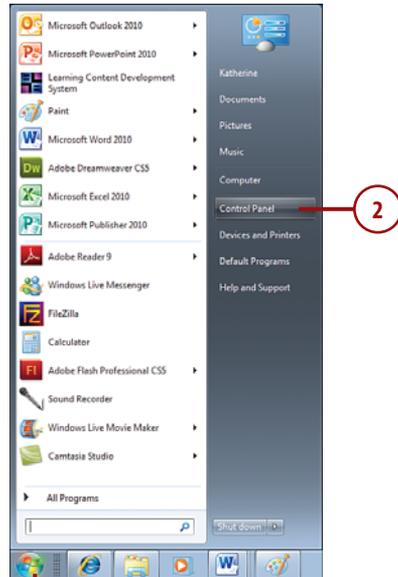


1

3

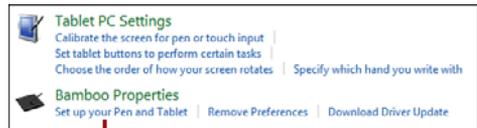



4

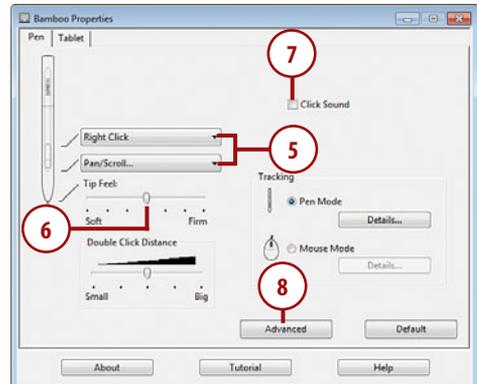

9. Choose how you want Windows 7 to recognize right-clicks on the pen.
10. Click OK.
11. Click Tablet for more options.
12. Click to choose right-handed or left-handed use.
13. Click the close box to save your settings.

Different Strokes for Different Folks



The settings shown here are part of the configuration for a Bamboo drawing tablet, so if you are using a tablet made by a different manufacturer, you may see different options from the ones shown here.

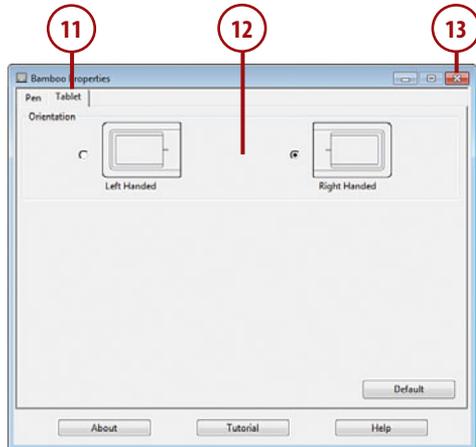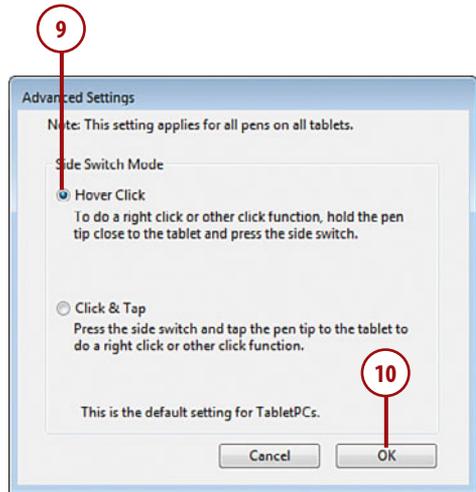

Choosing Preferences for Your Tablet

Windows 7 includes a number of settings you can customize so that your drawing tablet works the way you want it to in Windows 7.



1. Display the Hardware and Sound screen of the Control Panel.
2. In the Pen and Touch area, click Change Tablet Pen Settings.
3. In the Pen Options list, click Double-Tap.
4. Click Settings.

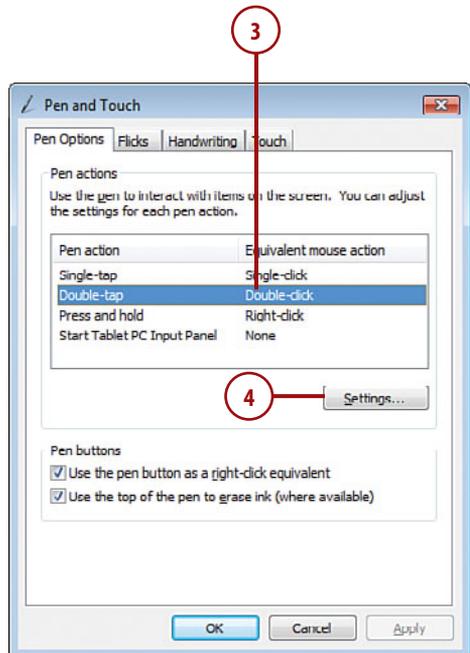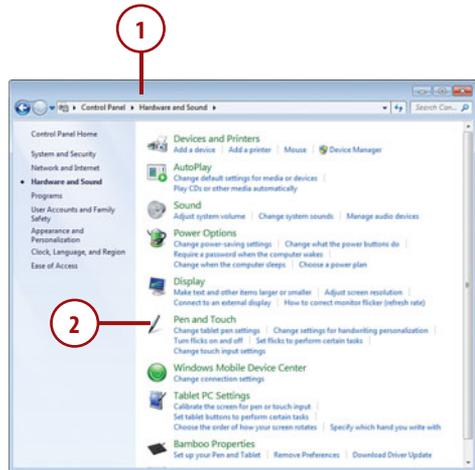

5. Adjust the slider to control the speed for double-tapping.
6. Change the Spatial Tolerance setting to allow space in the double-tap.
7. Click OK to save your settings.
8. Click the Flicks tab.
9. Click whether you want to use flicks to navigate onscreen or use them for both navigation and editing.
10. Choose how sensitive you want the tablet to be to flicks and touch.
11. Click the Handwriting tab and choose whether you want Windows 7 to learn automatically from your handwriting on the tablet.
12. Click Touch and choose your preferences for using touch on the device.
13. Click OK to save your preferences.

Customizing Flicks

If you click Navigational Flicks and Editing Flicks, the Customize button becomes available. You can click Customize to adjust the flick controls for all directions of the pen and even create your own custom flick actions.

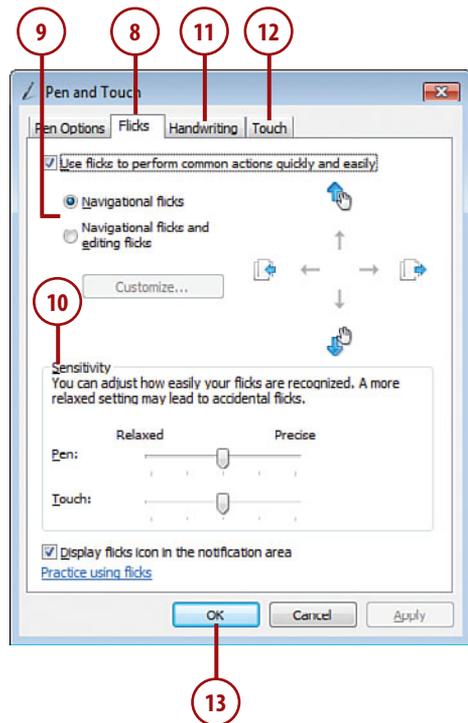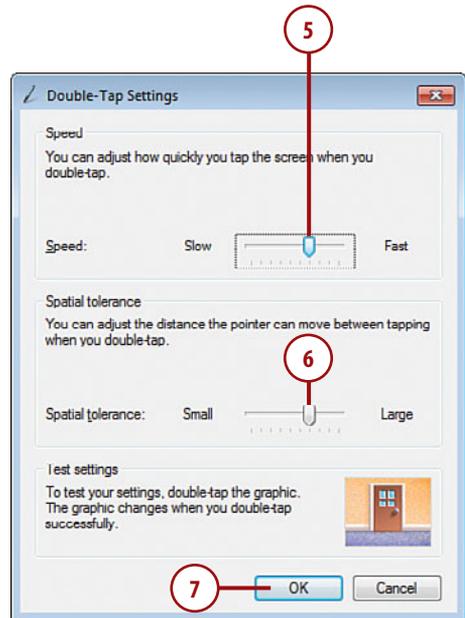

Index

A

- accepting recommended
 - backup locations, 350
- accessing
 - favorite websites in Favorites bar (Internet Explorer), 221
 - shared files in
 - HomeGroups, 341
 - themes online, 308
- Action Center
 - alerts, 92-95
 - messages, archiving, 94
 - problem reporting, updating, 95-97
 - system status, reviewing, 90-91
- activating
 - Sleep mode, 12
 - Windows Defender, 109
 - Windows Firewall, 109
- ActiveSync, 74
- ActiveX controls, blocking in Internet Explorer, 228-229
- adapters, wireless network adapters, 331
- Add Web slices tool (Internet Explorer), 226-227
- adding
 - computers
 - to HomeGroups, 338
 - to wireless networks, 333
 - favorite websites to Favorites bar (Internet Explorer), 219-220
 - folders
 - to Favorites list, 179
 - to libraries, 167-168
 - to My Pictures folder, 287-288
 - gadgets to desktop, 156
 - printer properties, 51
 - programs to Startup folder, 47
 - search providers to Internet Explorer, 206, 209
 - user accounts, 98
- adjusting
 - date and time, 318
 - desktop, font size, 314
 - screen resolution, 316-317
- Administrator account
 - passwords
 - changing, 104-105
 - setting, 103-104
 - user accounts, customizing, 99

administrator status, checking, 44

Aero, 307, 310

alerts (Action Center), 92-95

antispyware, Windows Defender, 105

appearance of taskbar, changing, 20

applications
 downloading, 145-147
 installing, 148-149
 pinning to Start menu, 14-16
 pinning to taskbar, 21
 starting, 26-27
 windows, 139-140

applying filters to searches, 121

archiving Action Center messages, 94

arranging windows, 31-33, 141

Ask tool, 38

audio, selecting sound scheme, 325-326

auto-hiding taskbar, 18

automatic updates
 settings, viewing, 149
 turning on, 346-348

B

background image, selecting, 304-306

backing up files, 349-351
 files, restoring, 352-354
 recommended backup locations, 350

Balanced power plan, 59

blocking ActiveX controls in Internet Explorer, 228-229

browsing history, viewing in Favorites bar (Internet Explorer), 225-226

burning
 CDs in Windows Media Player, 267-268
 photos to disc, 298

buttons
 mouse buttons, changing, 324-325
 Show Desktop, 141

C

calendar (Windows Live Mail), 237

Calendar gadget, 154

cameras. *See* digital cameras

cascading windows, 31

changing
 appearance of taskbar, 20
 date and time, 318
 desktop icons, 309-310
 folder views, 177-178
 font size, 314
 gadget settings, 157
 library display, 171
 mouse buttons, 324-325
 mouse click speed, 322-323
 mouse pointer, 320-321
 notification area, 21-22
 passwords, 104-105

playback order in Windows Media Player, 264

power management
 plan settings, 60

screen resolution, 316-317

size of Start menu icons, 15

User Account Control settings, 111-112

Windows Firewall settings, 110

checking
 administrator status, 44
 hardware device properties, 52
 network status, 334-335

choosing
 background image, 304-306
 default programs, 45-46
 desktop color scheme, 310, 313-314
 desktop theme, 306, 308
 power management plan, 59-60
 screen saver, 319-320
 sound scheme, 325-326
 Windows 7 version, 10

click speed (mouse), changing, 322-323

clocks, adjusting date and time, 318

Clock gadget, 154

closing
 programs, 143-144
 windows, 34-35

color scheme (desktop),
selecting, 310, 313-314

color-coding tabs in
Internet Explorer, 213

compatibility, Windows
Compatibility Center,
358-360

compressing files, 80,
189-191

computers
adding to wireless
networks, 333
naming, 340

connecting
digital camera to
computer, 276-278
Windows Phone 6,
72-74
Windows Phone 7,
70-71

connection defaults,
setting for MP3 player, 77

context menus,
displaying, 23

Control Panel
Action Center
alerts, 92-95
messages,
archiving, 94
problem reporting,
updating, 95-97
system status,
reviewing, 90-91
User Account Control,
92, 111-112
User Accounts and
Family Safety,
changing passwords,
104-105

cookies, deleting in
Internet Explorer,
229-230

copying, 186
content between
programs, 141-143
files to MP3 player,
75-76
photos, 279, 289-290

CPU Meter gadget, 154

creating
libraries, 168-169
folders, 175, 287-288
HomeGroups, 336-338
playlists in Windows
Media Player, 265-267
restore points, 153
shortcut to programs,
137-138
system image, 63
system repair disc, 62
user accounts, 98

Currency gadget, 154

custom searches,
performing, 126-129

customizing
Aero, themes, 310
user accounts, 99
website display in
Internet Explorer, 217

D

date and time,
changing, 318

default printer, setting, 50

default programs,
selecting, 45-46

definition file (Windows
Defender), 108

deleting
cookies in Internet
Explorer, 229-230
folders, 176, 180-181

desktop
background, selecting,
304-306
color scheme, select-
ing, 310, 313-314
font size, adjusting, 314
gadgets
adding to, 156
settings,
changing, 157
icons, changing,
309-310
mouse
buttons, changing,
324-325
click speed, changing,
322-323
pointer, changing,
320-321
screen resolution,
adjusting, 316-317
screen saver
choosing, 319
options, setting, 320
theme, selecting,
306-308
windows
arranging, 31-33
closing, 34-35
resizing, 34-35
switching between,
30-31

Desktop Gadget
Gallery, 158

Details pane (Windows
Explorer), 165

Device Stage, 53, 68, 76

devices
drawing tablets, 82-86
drivers
organizing, 54
updating, 53

- flash drives
 - moving files from, 79-80*
 - removing, 81*
- MP3 player
 - connection defaults, setting, 77*
 - copying files to, 75-76*
 - syncing, 75, 78*
- syncing with Windows Media Player, 270-271
- troubleshooting, 55-56
- Windows Phone 6, connecting, 72-74
- Windows Phone 7, connecting, 70-71
- digital cameras, connecting to computer, 276-278
- disaster recovery
 - system image
 - creating, 63*
 - restoring, 64*
 - system repair disc, creating, 62
- Disk Cleanup utility, 354-355
- Disk Defragmenter utility, 356-357
- displaying
 - automatic update settings, 149
 - context menus, 23
 - file properties, 184
 - files in My Documents folder, 14
 - gadgets, 154-155
 - hardware information, 53
 - mouse pointer, 323
 - programs in Startup folder, 47
 - taskbar, 18
 - ToolTips, 34

- web pages with One Box (Internet Explorer), 201-202
- documents, opening, 29
- downloading
 - photos, 276-278
 - programs, 145-147
 - themes, 308
- dragging and dropping files, 186
- drawing tablets, setting up, 82-86
- drivers
 - organizing, 54
 - for printers, installing, 49
 - updating, 53

E

- editing photos, 291-292
- email
 - photos, emailing, 297
 - Windows Live Mail
 - email, sending, 236-237*
 - signing in, 235*
- encrypted files, indexing options, 125
- establishing
 - HomeGroups, 335-338
 - wireless networks, 331-332
- exiting programs, 143-144
- expanding searches, 122
- Explorer, 164
- exporting favorite websites from Favorites bar (Internet Explorer), 221

F

- Favorites bar (Internet Explorer)
 - accessing, 221
 - adding websites to, 219-220
 - History tab, 225-226
 - importing/exporting favorites, 221
 - organizing, 222-223
 - RSS feeds, viewing, 223-224
- Favorites list, adding folders to, 179
- features of Windows 7, 2
- Feed gadget, 154
- files
 - backing up, 349-351
 - compressing, 80, 189-191
 - copying and pasting, 186
 - dragging and dropping, 186
 - libraries
 - creating, 168-169*
 - display, changing, 171*
 - folders, adding, 167-168*
 - folders, removing, 170*
 - hiding, 172*
 - viewing, 162-164*
 - locating, 27, 116-119
 - custom searches, 126-129*
 - expanding searches, 122*
 - indexing options, 124*
 - online searches, 123*
 - results, filtering, 121*
 - moving, 187, 191

opening, 29
 previewing, 28
 properties,
 displaying, 184
 rating, 185
 restoring, 352-354
 shared files in
 HomeGroups,
 accessing, 341-342
 sharing, 191
 sorting, 188
 tagging, 118, 184-185
 transferring with
 Windows Easy Transfer,
 42-44
 filtering search results, 121
 finding
 files to restore, 354
 folders, 173, 181-182
 programs, 136
 firewall. *See* Windows
 Firewall
 flash drives
 files, moving, 79-80
 removing, 81
 folders
 adding
 to Favorites list, 179
 to libraries, 167-168
 creating, 175, 287-288
 deleting, 176, 180-181
 finding, 181-182
 locating, 27, 173
 moving, 176
 My Pictures, creating
 new folders, 287-288
 previewing, 182-183
 Public folder, moving
 files to, 191
 removing from
 libraries, 170
 renaming, 178
 searching, 127

views, changing,
 177-178
 font size (desktop),
 adjusting, 314
 function keys, 24

G-H

gadgets
 adding to desktop, 156
 displaying, 154-155
 settings, changing, 157
 game ratings, 102
 hardware
 drivers
 organizing, 54
 updating, 53
 information,
 displaying, 53
 properties, checking, 52
 troubleshooting, 55-56
 Help and Support Center,
 36-37
 help information,
 printing, 37
 hidden files, displaying, 129
 hiding
 libraries, 172
 mouse pointer, 323
 panes (Windows
 Explorer), 166
 system icons, 22
 home page, selecting
 (Internet Explorer),
 199-200
 HomeGroups, 329, 335
 computers,
 naming, 340
 establishing, 335-338
 Internet time,
 setting, 339

joining, 338
 printers, sharing, 342
 shared files,
 accessing, 341
 sharing, turning
 off, 342
 viewing, 340-341
 hovering, 23, 34

I

icons
 changing, 309-310
 hiding, 22
 in notification area, 22
 overlays, 195
 Pictures library, 284
 importing
 favorite websites to
 Favorites bar (Internet
 Explorer), 221
 photos on Windows
 Phone 7, 279
 increasing security in
 Internet Explorer,
 233-234
 indexing options, per-
 forming searches, 124
 InPrivate Browsing,
 Internet Explorer, 206
 installations, repairing,
 149-150
 installing
 printers, 48-49
 programs, 148-149
 interface
 Windows Media Center,
 244-245
 Windows Media Player,
 259-260
 Internet connection
 naming, 58
 setting up, 56-58

Internet Explorer

- ActiveX controls,
 - blocking, 228-229
- Add Web slices tool, 226-227
- cookies, deleting, 229-230
- Favorites bar, 219
 - accessing*, 221
 - favorites, adding*, 219-220
 - History tab*, 225-226
 - importing/exporting favorites*, 221
 - organizing*, 222-223
 - RSS feeds, viewing*, 223-224
- home page, selecting, 199-200
- InPrivate Browsing, 206
- menu bar, 197
- notification bar, 198-199
- One Box, 196, 201-202
- page tabs, 196
- privacy options,
 - setting, 231-232
- search providers,
 - adding, 206, 209
- searching for
 - information, 204-205
 - security, 233-234
- SmartScreen Filter, 234
- Snap technique, 195
- starting, 194
- tabs
 - color-coding*, 213
 - opening*, 210-211
 - positioning*, 211
- taskbar
 - web content, printing*, 216-217
 - websites, pinning to*, 215

- toolbars, 197-198
- Tools, 196
- View Favorites, 196
- web pages, navigating, 202-203
- website history,
 - viewing, 203
- websites, customizing
 - display, 217
- Internet time, setting on HomeGroups, 339
- Internet TV, 245, 248-250
- ISPs (Internet service providers), 331

J-K-L

- joining HomeGroups, 338
- jump lists, 16-17, 135
- keyboard layout, 24-25
- launching
 - Internet Explorer, 194
 - Windows 7, 11
 - Windows Media Center, 242-243
- layout of keyboard, 25
- legacy programs,
 - compatibility with Windows 7, 360
- libraries, 162
 - creating, 168-169
 - display, changing, 171
 - folders
 - adding*, 167-168
 - removing*, 170
 - hiding, 172
 - Pictures library
 - icons*, 284
 - photos, burning to disc*, 298

- photos, copying*, 289-290
- photos, editing*, 291-292
- photos, emailing*, 297
- photos, moving*, 289-290
- photos, printing*, 299
- photos, rotating*, 288-289
- photos, setting properties*, 294-295
- photos, sharing*, 296-297
- photos, tagging*, 292-293
- photos, viewing*, 281-284
- slide shows*, 286-287
- Windows Photos Viewer*, 284
- viewing, 162-164
- Library pane (Windows Explorer), 165
- local time, adjusting, 318
- locating
 - files, 116-119
 - custom searches*, 126-129
 - indexing options*, 124
 - online searches*, 123
 - results, filtering*, 121
 - searches, expanding*, 122
 - files and folders, 27
 - folders, 173, 181-182
 - media in Windows Media Player, 263
 - programs, 136-138
- logon screen, displaying
 - with screen saver, 319

M

Maintenance Alerts (Action Center), 92-95

managing search providers, 209

Manual Activation mode (voice recognition), 25

manually checking for updates, 348-349

maximizing windows, 33

media

- locating in Windows Media Player, 263
- sharing on smart-phones, 256-258
- streaming in Windows Media Player, 268-269

Media Guide, viewing in Windows Media Player, 271-273

menu bar, Internet Explorer, 197

menus, Start menu, 13

messages (Action Center), archiving, 94

Microsoft Security Essentials, 106

monitor, adjusting screen resolution, 316-317

mouse, 22

- buttons, changing, 324-325
- click speed, changing, 322-323
- hovering, 23, 34
- multiple items, selecting, 24
- pointer
 - changing*, 320-321
 - hiding/displaying*, 323

moving

- files, 79-80, 187
- folders, 176
- photos, 289-290
- taskbar, 19

MP3 player

- connection defaults, setting, 77
- copying files to, 75-76
- syncing, 75-78

multiple items, selecting with mouse, 24

music

- CDs, burning in Windows Media Player, 267-268
- playback order, changing in Windows Media Player, 264
- playing in Windows Media Player, 260-262
- playlists, creating in Windows Media Player, 265-267

My Documents folder, displaying files, 14

My Pictures folder, adding new folders, 287-288

N

naming

- computers, 340
- Internet connection, 58

navigating web pages in Internet Explorer, 202-203

navigation

- keyboard, 24-25
- mouse, 22-24

Navigation pane (Windows Explorer), 165-166

Network and Sharing Center, checking network status, 334-335

networking

- establishing, 331-332
- HomeGroups, 335
 - computers*, naming, 340
 - establishing*, 335-338
 - joining*, 338
 - printers*, sharing, 342
 - shared files*, accessing, 341
 - sharing*, turning off, 342
 - viewing*, 340-341
- ISPs, 331
- network status, checking, 334-335
- wireless networks
 - adding computers to*, 333
 - required equipment*, 330

new features of Windows 7, 2

notification area

- changing, 21-22
- icons, 22

notification bar, Internet Explorer, 198-199

O

Office Ribbon, 140

One Box

- Internet Explorer, 196
- searching for information, 204-205
- web pages, displaying, 201-202

online searches, performing, 123

online themes,
downloading, 308

opening
files, 29
tabs in Internet
Explorer, 210-211

ordering photos online, 285

organizing
drivers, 54
favorite websites in
Favorites bar (Internet
Explorer), 222-223

P

page tabs, Internet
Explorer, 196

paid Internet
advertising, 205

panes (Windows
Explorer), hiding, 166

parental controls
game ratings, 102
setting for user
accounts, 100-101
user accounts, 100-101

passwords
changing, 104-105
setting, 101-104

pasting files, 186

PC Tuners, 245

performance, enhancing
with ReadyBoost, 82

performing system scans,
106-108

peripheral devices
mouse
buttons, changing,
324-325

click speed, changing,
322-323

pointer, changing,
320-321

printers, installing,
48-49

personalizing the desktop
background image,
selecting, 304-306
color scheme,
selecting, 310,
313-314

font size, adjusting, 314

icons, 309-310

mouse
buttons, 324-325
click speed, 322-323
pointer, changing,
320-321

screen resolution,
adjusting, 316-317

screen saver
options, setting, 320
selecting, 319

sound scheme,
selecting, 325-326

theme, selecting,
306-308

phones
smartphones, sharing
media, 256-258
Windows Phone 7
photos, importing, 279
photos, viewing, 278

photos
burning to disc, 298
copying, 289-290
copying to phone, 279
downloading, 276-278
editing, 291-292
emailing, 297

importing on Windows
Phone 7, 279

moving, 289-290

ordering online, 285

printing, 299

properties, setting,
294-295

rotating, 288-289

scanning, 280

sharing, 296-297

tagging, 292-293

viewing
in Pictures library,
281-287
on Windows
Phone 7, 278

Picture Puzzle gadget, 155

Pictures library

icons, 284

photos

burning to disc, 298

copying, 289-290

editing, 291-292

emailing, 297

moving, 289-290

printing, 299

properties, setting,
294-295

rotating, 288-289

sharing, 296-297

tagging, 292-293

viewing, 281-284

slide shows, 286-287

Windows Photo
Viewer, 284

pictures. *See* photos

pinning

programs

to Start menu, 14-16

to taskbar, 18, 21

websites to taskbar
(Internet
Explorer), 215

- playback order, changing in Windows Media Player, 264
 - playing music in Windows Media Player, 260-262
 - playlists, creating in Windows Media Player, 265-267
 - positioning
 - tabs in Internet Explorer, 211
 - taskbar on desktop, 19
 - power management plan
 - selecting, 59-60
 - settings, changing, 60
 - Power Save power plan, 59
 - preferences (printer), setting, 50
 - Preview pane (Windows Explorer), 165
 - previewing
 - files, 28, 182-183
 - printers
 - drivers, installing, 49
 - installing, 48-49
 - preferences, setting, 50
 - properties, adding, 51
 - setting as default, 50
 - sharing, 49
 - sharing in HomeGroups, 342
 - printing
 - help information, 37
 - photos, 299
 - web content with Internet Explorer, 216-217
 - privacy
 - InPrivate Browsing, 206
 - Internet Explorer options, 231-232
 - problem reporting (Action Center), updating, 95-97
 - programs
 - adding to Startup folder, 47
 - content, copying between, 141-143
 - default programs, selecting, 45-46
 - downloading, 145-147
 - exiting, 143-144
 - installations, repairing, 149-150
 - installing, 148-149
 - locating, 138
 - pinning to taskbar, 18, 21
 - purchasing online, 147
 - removing, 46
 - searching for, 136
 - shortcut, creating, 137-138
 - starting, 26-27
 - from jump list, 135*
 - from Start menu, 134*
 - switching between, 139
 - uninstalling, 150-153
 - windows, 139-141
 - properties
 - of hardware devices, checking, 52
 - of photos, setting, 294-295
 - of printers, entering, 51
 - Public folders, moving files to, 191
 - purchasing programs online, 147
 - rating files, 185
 - ReadyBoost, 82
 - recommended backup locations, accepting, 350
 - recording TV shows, 251-252, 255
 - recovering deleted folders, 181
 - redisplaying hidden libraries, 172
 - Refresh button (Windows Explorer), 165
 - removing
 - folders from libraries, 170
 - flash drives, 81
 - folders, 180-181
 - programs, 46
 - renaming folders, 178
 - repairing program installations, 149-150
 - required equipment for wireless networks, 330
 - resizing windows, 33-35
 - resolving compatibility issues, Windows Compatibility Center, 358-360
 - restore points, creating, 153
 - restoring
 - files, 352-354
 - system image, 64
 - results of searches, filtering, 121
 - reviewing
 - system status, 90-91
 - Windows update history, 349
 - rotating photos, 288-289

Q-R

- Quick Access toolbar, 140
- quitting programs, 143-144

RSS feeds, viewing in

Favorites bar (Internet Explorer), 223-224

S

Safely Remove Hardware tool, 81

SafeSearch, 102

saving searches, 174

scanning photos, 280

scheduling

backups, 349-351

defragmenting, 357

screen resolution,

adjusting, 316-317

screen saver

options, setting, 320

selecting, 319

scrollbars, 141

Search box, performing

searches, 117-119

search providers

adding in Internet

Explorer, 206-209

managing, 209

searches, 116-119

custom searches,
126-129

expanding, 122

indexing options, 124

online searches, 123

options, setting, 174

results, filtering, 121

saving, 174

searching

for files to restore, 354

for programs, 136-138

security

Internet Explorer,
233-234

ActiveX controls,

blocking, 228-229

cookies, deleting,

229-230

privacy options,

231-232

Microsoft Security

Essentials, 106

Windows Defender, 105

activating, 109

definition file, 108

system scans, chang-
ing options, 108

system scans,

performing, 106-107

Windows Firewall

activating, 109

settings, changing, 110

Security alerts (Action
Center), 92-95

selecting

background image,
304-306

default programs,
45-46

desktop color scheme,
310, 313-314

desktop theme,
306-308

file transfer method
(Windows Easy
Transfer), 44

home page (Internet
Explorer), 199-200

multiple items with
mouse, 24

power management
plan, 59-60

screen saver, 319-320

sound scheme, 325-326

Windows 7 version, 10

sending mail in Windows
Live Mail, 236-237

setting

Internet connections,
56-58

passwords, 101-104

printer as default, 50

privacy options in
Internet Explorer,
231-232

search options (Win-

dows Explorer), 174

User Account Control,
111-112

shared files in

HomeGroups

accessing, 341

sharing, turning off, 342

sharing

files, 191

media on smartphones,
256-258

photos, 296-297

printers, 49

printers in

HomeGroups, 342

shortcut keys

files, copying and

pasting, 186

windows, arranging, 33

Show Desktop button, 141

shutting down

Windows 7, 13

signing in to Windows
Live Mail, 235

size of icons in Start
menu, changing, 15

Sleep mode, activating, 12

- Slide Show gadget, 155
 - slide shows, 286-287
 - smartphones, sharing media, 256-258
 - SmartScreen Filter (Internet Explorer), 234
 - Snap technique, 33, 195
 - sorting files, 188
 - sounds schemes, selecting, 325-326
 - Speech Recognition, 25
 - Start menu, 13
 - icons, changing size of, 15
 - jump lists, 16-17
 - pinned programs, 14
 - programs
 - pinning, 15-16*
 - searching for, 136*
 - starting, 134*
 - searches, performing, 116
 - starting
 - Internet Explorer, 194
 - programs, 26-27
 - from jump list, 135*
 - from Start menu, 134*
 - Windows 7, 10-11
 - Startup folder, adding programs, 47
 - status bar, 141
 - streaming media in Windows Media Player, 268-269
 - Suggested Sites (Internet Explorer), 223
 - switching
 - between programs, 139
 - between windows, 30-31
 - syncing
 - devices with Windows Media Player, 270-271
 - MP3 player, 75, 78
 - phone, 69
 - system icons, hiding, 22
 - system image
 - creating, 63
 - restoring, 64
 - system repair disc, creating, 62
 - System Restore, 153
 - system scans
 - options, changing, 108
 - performing, 106-107
 - system status, reviewing, 90-91
 - system time, adjusting date and time, 318
 - System Tools
 - Disk Cleanup, 354-355
 - Disk Defragmenter, 356-357
- ## T
- Tab key, 25
 - tabs (Internet Explorer
 - color-coding, 212-213
 - opening, 210-211
 - positioning, 211
 - tagging
 - files, 184-185
 - photos, 292-293
 - taskbar
 - appearance of, changing, 20
 - auto-hiding, 18
 - displaying, 18
 - moving, 19
 - notification area, changing, 21-22
 - programs, pinning, 18, 21
 - tools, 17
 - websites, pinning, 215
 - text, adjusting font size, 314
 - themes
 - Aero, customizing, 310
 - downloading, 308
 - mouse pointer, selecting, 321
 - selecting, 306-308
 - time, setting on HomeGroups, 339
 - time zones, adding additional clocks, 318
 - title bar (program window), 140
 - toolbars, Internet Explorer, 196-198
 - ToolTips, revealing, 34
 - transferring files, 42-44
 - troubleshooting
 - compatibility issues, 358-360
 - devices, 55-56
 - turning off sharing in HomeGroups, 342
 - turning on
 - automatic updates, 346-348
 - InPrivate Browsing, 206
 - TV shows, recording, 251-252, 255
 - TV Tuner Troubleshooter, 250
 - TV tuners, 245
 - Internet TV, watching, 249-250
 - TV shows, recording, 251-252, 255

U

- uncompressing files, 189-191
- uninstalling programs, 150-153
- updates
 - checking for manually, 348-349
 - history, reviewing, 349
- updating
 - Action Center problem reporting, 95-97
 - automatic updates, turning on, 346-348
 - drivers, 53
- USB connectors, 76
- User Account Control, 92
- user accounts
 - Administrator, setting passwords, 101
 - creating, 98
 - customizing, 99
 - parental controls, 100-101
 - passwords, changing, 104-105
 - passwords, setting, 103-104
- utilities
 - Disk Cleanup, 354-355
 - Disk Defragmenter, 356-357

V

- versions of Windows 7, 3, 10
- View Favorites, Internet Explorer, 196

- viewing
 - automatic update settings, 149
 - browsing history in Internet Explorer, 225-226
 - file properties, 184
 - gadgets, 154-155
 - HomeGroups, 340-341
 - libraries, 162-164
 - photos
 - in Pictures library*, 281-287
 - on Windows Phone 7*, 278
 - programs in Startup folder, 47
 - RSS feeds in Internet Explorer, 223-224
 - visited websites, 203

- voice recognition, 25

W

- watching Internet TV, 245, 248-250
- Weather gadget, 155
- web browsers, Internet Explorer
 - ActiveX controls, blocking, 228-229
 - Add Web slices tool, 226-227
 - cookies, deleting, 229-230
 - Favorites bar, 219-224
 - History tab, 225-226
 - home page, selecting, 199-200
 - InPrivate Browsing, 206
 - menu bar, 197
 - notification bar, 198-199
- One Box, 196
- page tabs, 196
- privacy options, 231-232
- search providers, adding, 206, 209
- searching for information, 204-205
- security, 233-234
- starting, 194
- tabs, color-coding, 213
- tabs, opening, 210-211
- tabs, positioning, 211
- toolbars, 197-198
- Tools, 196
- View Favorites, 196
- web content, printing, 216-217
- web pages, displaying with One Box, 201-202
- web pages, navigating, 202-203
- websites, customizing display, 217
- websites, pinning, 215
- web pages
 - navigating, 202-203
 - printing, 216-217
- web-based mail, Windows Live Mail
 - calendar, 237
 - email, sending, 236-237
 - signing in, 235
- websites
 - adding to Favorites bar, 219-220
 - display, customizing in Internet Explorer, 217
 - history, viewing, 203
- wheel (mouse), customizing, 325

- windows, 139-140
 - arranging, 31-33, 141
 - closing, 34-35
 - resizing, 34-35
 - switching between, 30-31
- Windows 7
 - features, 2
 - Help and Support Center, 36-37
 - logon screen, displaying, 319
 - shutting down, 13
 - Sleep mode, activating, 12
 - starting, 10-11
 - Sync Center, 69
 - versions, 3
- Windows 7 Home Premium, 3, 10
- Windows 7 Professional, 3, 10
- Windows 7 Starter, 3, 10
- Windows 7 Ultimate, 3, 10
- Windows Compatibility Center, 358-360
- Windows Defender, 105
 - activating, 109
 - system scans
 - options, changing, 108*
 - performing, 106-107*
- Windows Easy Transfer, transferring files, 42-44
- Windows Explorer, 27, 164
 - Details area, 183
 - files
 - compressing, 189-191*
 - copying and pasting, 186*
 - locating, 27*
 - moving, 187*
 - opening, 29*
 - previewing, 28*
 - properties, viewing, 184*
 - rating, 185*
 - sharing, 191*
 - sorting, 188*
 - tagging, 184-185*
- folders
 - adding to Favorites list, 179*
 - creating, 175*
 - finding, 181-182*
 - locating, 173*
 - moving, 176*
 - previewing, 182-183*
 - removing, 180-181*
 - renaming, 178*
 - views, changing, 177-178*
- HomeGroups, viewing, 340-341
- libraries
 - creating, 168-169*
 - display, changing, 171*
 - folders, adding, 167-168*
 - folders, removing, 170*
 - hiding, 172*
- Navigation pane, 166
- panes, hiding, 166
- programs, locating, 136
- searches, 174
- Windows Fax and Scan, scanning photos, 280
- Windows Firewall
 - activating, 109
 - settings, changing, 110
- Windows key, 24
- Windows Live Family Safety, 102
- Windows Live Mail
 - calendar, 237
 - mail, sending, 236-237
 - signing in, 235
- Windows Media Center
 - extending to Xbox 360, 258
 - interface, 244-245
 - Internet TV, watching, 245, 248-250
 - launching, 242-243
 - media, sharing on smartphones, 256-258
 - TV shows, recording, 251-252, 255
- Windows Media Center gadget, 155
- Windows Media Player, 243
 - CDs, burning, 267-268
 - interface, 259-260
 - media, streaming, 268-269
 - media devices, syncing, 270-271
 - media, locating, 263
 - Media Guide, 271, 273
 - music, playing, 260-262
 - playback order, changing, 264
 - playlists, creating, 265-267
- Windows Phone 6, connecting, 72-74
- Windows Phone 7
 - connecting, 70-71
 - photos
 - importing, 279*
 - viewing, 278*
- Windows Photo Viewer, 284
- Windows Remote Assistance, 38
- Windows Update window, reviewing update history, 349
- wireless network adapters, 331

wireless networks

adding computers

to, 333

establishing, 331-332

HomeGroups, 335

*computers,**naming, 340**establishing, 335-338**joining, 338**printers, sharing, 342**shared files,**accessing, 341**sharing,**turning off, 342**viewing, 340-341*

network status,

checking, 334-335

required

equipment, 330

work area, 141

X-Y-Z

XBox 360, setting up

Windows Media

Center, 258

Zune Software, photos

importing, 279

viewing, 278

This page intentionally left blank