

My Android™ Tablet



COVERS

Android 5.0
"Lollipop"

QUE

 
Craig James Johnston

FREE SAMPLE CHAPTER



SHARE WITH OTHERS

My Android™ Tablet

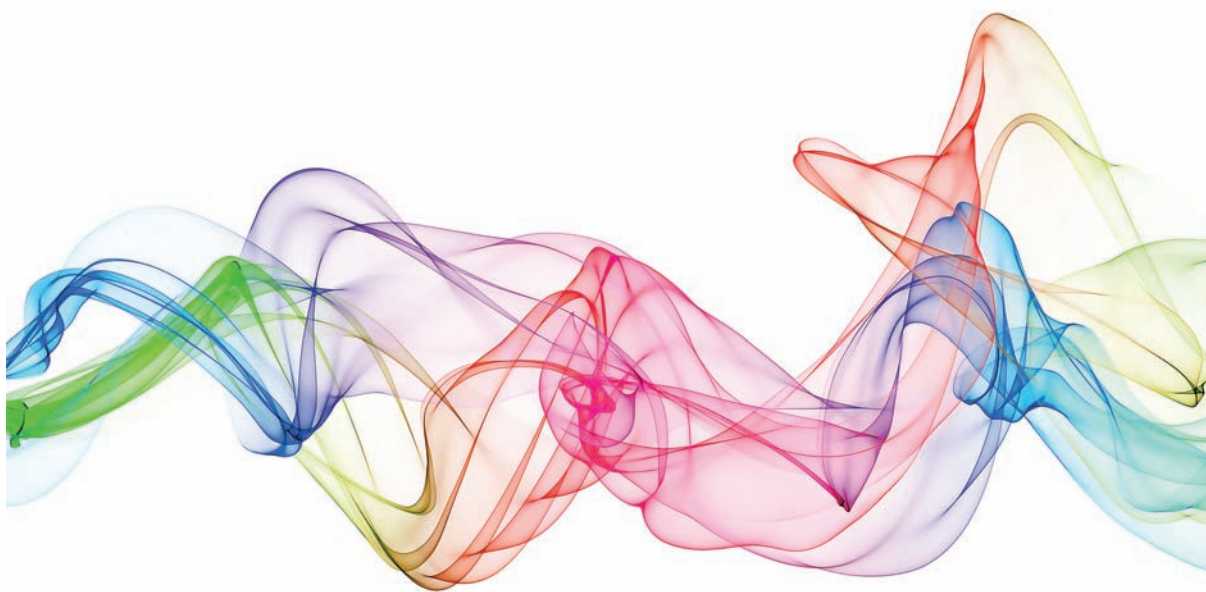

Craig James Johnston

que®

800 East 96th Street,
Indianapolis, Indiana 46240 USA

My Android Tablet

Copyright © 2015 by Pearson Education, Inc.

All rights reserved. No part of this book shall be reproduced, stored in a retrieval system, or transmitted by any means, electronic, mechanical, photocopying, recording, or otherwise, without written permission from the publisher. No patent liability is assumed with respect to the use of the information contained herein. Although every precaution has been taken in the preparation of this book, the publisher and author assume no responsibility for errors or omissions. Nor is any liability assumed for damages resulting from the use of the information contained herein.

ISBN-13: 978-0-7897-5368-7

ISBN-10: 0-7897-5368-5

Library of Congress Control Number: 2014952477

Printed in the United States of America

First Printing: February 2015

Trademarks

All terms mentioned in this book that are known to be trademarks or service marks have been appropriately capitalized. Que Publishing cannot attest to the accuracy of this information. Use of a term in this book should not be regarded as affecting the validity of any trademark or service mark.

Warning and Disclaimer

Every effort has been made to make this book as complete and as accurate as possible, but no warranty or fitness is implied. The information provided is on an "as is" basis. The author and the publisher shall have neither liability nor responsibility to any person or entity with respect to any loss or damages arising from the information contained in this book.

Special Sales

For information about buying this title in bulk quantities, or for special sales opportunities (which may include electronic versions; custom cover designs; and content particular to your business, training goals, marketing focus, or branding interests), please contact our corporate sales department at corpsales@pearsoned.com or (800) 382-3419.

For government sales inquiries, please contact governmentsales@pearsoned.com.

For questions about sales outside the U.S., please contact international@pearsoned.com.

Editor-in-Chief

Greg Wiegand

Acquisitions Editor

Michelle Newcomb

Development Editor

Charlotte Kughen, The
Wordsmithery LLC

Managing Editor

Kristy Hart

Senior Project Editor

Lori Lyons

Copy Editor

Apostrophe Editing
Services

Senior Indexer

Cheryl Lenser

Proofreader

Debbie Williams

Technical Editor

Christian Kenyeres

Editorial Assistant

Cindy Teeters

Compositor

Bronkella Publishing

Contents at a Glance

Prologue	Getting to Know Your Android Tablet.....	3
Chapter 1	Contacts	41
Chapter 2	Audio, Video, and Movies	69
Chapter 3	Connecting to Bluetooth, Wi-Fi, and VPNs.....	117
Chapter 4	Email.....	135
Chapter 5	Browsing the Web with Chrome	163
Chapter 6	Google Now and Navigation.....	181
Chapter 7	Working with Date, Time, and Calendar	199
Chapter 8	Working with Android Applications.....	215
Chapter 9	Customizing Your Android Tablet.....	227
Chapter 10	Google Wallet	249
Chapter 11	Books and Magazines	263
Chapter 12	Maintaining Your Android Tablet and Solving Problems.....	279
Chapter 13	Taking and Editing Pictures	289
	Index.....	325

Table of Contents

Prologue: Getting to Know Your Android Tablet	3
Your Android Tablet's External Features	3
Front	4
Back	6
Other Buttons and Connectors	7
First-Time Setup	8
Set Up Your Android Tablet	8
Fundamentals of Android 5.0 (Lollipop)	12
The Lock Screen	12
The Home Screen	14
The System Bar	18
Using Your Touchscreen	19
Using Your Keyboard	20
Edit Text	25
Menus	26
Switch Between Apps	27
Setting Up Multiple Users on Your Tablet	28
Add a New Tablet User	28
Add a Tablet Guest User	30
Installing Synchronization Software	31
Install Android File Transfer (Apple Mac OS X)	32
Install Google Music Manager (Apple Mac)	33
Install Google Music Manager (Windows)	35
Configure Music Manager (Windows and Apple Mac)	36

Contacts	41
Adding Accounts	41
Add a Work Email Account	42
Navigating Contacts	48
Edit a Contact	50
Add a Contact Photo	51
Adding and Managing Contacts	53
Add Contacts from an Email	53
Add a Contact Manually	54
Add a Contact from a vCard	55

Customize Contacts Settings	58
Contact Groups	58
Choose Contacts to Display	60
Joining and Separating Contacts	61
Adding a Contact to Your Home Screen	64

2 Audio, Video, and Movies 69

Music	69
Find Music	70
Purchase Music	71
Add Your Existing Music to Google Play Music	73
Use the Music App	75
Work with My Library	77
Work with Playlists	78
Instant Mixes	80
Control Playback	82
Work and Listen to Music	84
Listen to Music with No Wireless Coverage	85
Change Google Play Music Settings	85
Recording Videos with the Camera Application	88
Record Video	88
Change Video Settings	90
Play Videos	92
Share Videos	95
Delete Videos	97
Change Photos App Settings	97
Movies and TV Shows	100
Buy and Rent Movies	100
Buy TV Shows	103
Use the Play Movies & TV App	105
Copy Videos from Your Computer	107
Watching Videos with YouTube	109
Navigate the YouTube Main Screen	109
Navigate the YouTube App	110
Play a Video	111
Upload a Video	112
Change YouTube Settings	114

3 Connecting to Bluetooth, Wi-Fi, and VPNs 117

Connecting to Bluetooth Devices	117
Pair with a New Bluetooth Device	118
Extra Bluetooth Options	120
Change Bluetooth Device Options	120
Wi-Fi	121
Connect to Wi-Fi	121
Adjust Wi-Fi Network Options	124
Set Advanced Wi-Fi Options	124
Virtual Private Networks (VPNs)	126
Add a VPN	127
Connect to a VPN	128
Near Field Communications (NFC)	132
Enable NFC	133

4 Email 135

Adding Accounts To Gmail	135
Add a Google Account	136
Add a New POP3 or IMAP Account	138
Add a Work Email Account	142
Navigate the Gmail App	145
Compose an Email	148
Read an Email	151
Customize Gmail App Settings	154

5 Browsing the Web with Chrome 163

Navigating with Chrome	163
Get Started with Chrome	164
Use Web Page and Chrome Options	165
Master Chrome Browser Tricks	167
Managing Bookmarks and History	169
Open a Bookmark	169
Manage Browsing History	171
Customizing Browser Settings	172

6 Google Now and Navigation 181

Google Now	181
Set Up Google Now	184
Google Maps	190
Get Directions	192
Configure Google Maps Settings	194
Use Offline Google Maps	195

7 Working with Date, Time, and Calendar 199

Setting the Date and Time	199
Clock Application	201
Navigate the Clock Application	201
Manage Alarms	202
Adjust Clock Settings	204
Using the Calendar Application	205
Get to Know the Calendar Main Screen	205
Adjust Calendar Settings	206
Use Quick Responses	209
Add a New Event	210
Respond to an Event Invitation	212

8 Working with Android Applications 215

Configuring Google Wallet	215
Navigating Google Play	216
Install Free Applications	218
Buy Applications	220
Manage Apps	222
Adjust Google Play Settings	224

9 Customizing Your Android Tablet 227

Changing Your Wallpaper	228
Wallpaper from Pictures in the Photos App	228
Live Wallpaper	229
Wallpaper	230
Changing Your Keyboard	231

Adding Widgets to Your Home Screens	233
Add a Widget	233
Remove and Move a Widget	234
Customizing Language	235
Adjusting Accessibility Settings	236
Modifying Sound and Notification Settings	239
Changing Display Settings	241
Changing Security Settings	243

10**Google Wallet****249**

Setting Up Google Wallet	250
Adding Methods of Payment	251
Add a Credit Card or Checking Account	251
Using Loyalty and Gift Cards	252
Add an Existing Gift Card	253
Add an Existing Loyalty Card	254
Using Google Wallet	257
Google Wallet Settings	258

11**Books and Magazines****263**

Books	263
Navigate the Play Books App	264
Buy Books	265
Read Books	267
Magazines and Newspapers	271
Search for Stories	272
Purchase or Subscribe to Publications	272
Read a Publication	274

12**Maintaining Your Android Tablet and Solving Problems****279**

Updating Android	279
Optimizing Battery Life	281
Looking After the Battery	281
Determine What Is Using the Battery	281

Applications and Memory	283
Checking Your Apps' Data Usage	284
Caring for the Android Tablet's Exterior	286
Getting Help with Your Android Tablet	287

13**Taking and Editing Pictures 289**

Using the Camera	289
Adjust Camera Settings	293
Take Regular Pictures	295
Take Panoramic Pictures	296
Take Photo Sphere (360 Panoramic) Pictures	298
Take Lens Blur Pictures	299
Viewing and Managing Your Photos	302
Navigate Photos	302
Delete Photo Albums	303
Review and Share Pictures	304
Edit Pictures	305
Modify Photos App Settings	318
Managing Photos with Your Computer	319
Manual Picture Management	319
Automatic Picture Management on a Mac	322
Synchronizing Pictures Using Your Google Cloud	323

Index**325**

About the Author

Craig James Johnston has been involved with technology since his high school days at Glenwood High in Durban, South Africa, when his school was given some Apple][Europluses. From that moment technology captivated him, and he has owned, supported, evangelized, and written about it.

Craig has been involved in designing and supporting large-scale enterprise networks with integrated email and directory services since 1989. He has held many different IT-related positions in his career ranging from sales support engineer to mobile architect for a 40,000 smartphone infrastructure at a large bank.

In addition to designing and supporting mobile computing environments, Craig co-hosts the CrackBerry.com podcast, as well as guest hosting on other podcasts including iPhone and iPad Live podcasts. You can see Craig's previously published work in his books *Professional BlackBerry*, and *My iMovie*, plus many other books in the *My* series, including books covering BlackBerry, Palm, and Android devices.

Craig also enjoys high-horsepower, high-speed vehicles and tries very hard to keep to the speed limit while driving them.

Originally from Durban, South Africa, Craig has lived in the United Kingdom, the San Francisco Bay Area, and New Jersey, where he now lives with his wife, Karen, and a couple cats.

Craig would love to hear from you. Feel free to contact Craig about your experiences with *My Android Tablet* at <http://www.CraigsBooks.info>.

All comments, suggestions, and feedback are welcome, including positive and negative.

Dedication

"I love deadlines. I like the whooshing sound they make as they fly by."

—Douglas Adams

Acknowledgments

I would like to express my deepest gratitude to the following people on the *My Android Tablet* team who all worked extremely hard on this book.

My agent Carole Jelen, my acquisitions editor Michelle Newcomb, as well as technical editor Christian Kenyeres, development editor Charlotte Kughen, senior project editor Lori Lyons, copy editor San Dee Phillips, senior indexer Cheryl Lenser, compositor Tricia Bronkella, and proofreader Debbie Williams.

We Want to Hear from You!

As the reader of this book, *you* are our most important critic and commentator. We value your opinion and want to know what we're doing right, what we could do better, what areas you'd like to see us publish in, and any other words of wisdom you're willing to pass our way.

We welcome your comments. You can email or write to let us know what you did or didn't like about this book—as well as what we can do to make our books better.

Please note that we cannot help you with technical problems related to the topic of this book.

When you write, please be sure to include this book's title and author as well as your name and email address. We will carefully review your comments and share them with the author and editors who worked on the book.

Email: feedback@quepublishing.com

Mail: Que Publishing
ATTN: Reader Feedback
800 East 96th Street
Indianapolis, IN 46240 USA

Reader Services

Visit our website and register this book at quepublishing.com/register for convenient access to any updates, downloads, or errata that might be available for this book.

This page intentionally left blank



In this chapter, you become familiar with the external features of a typical Android tablet and the basics of getting started with the Android operating system. Topics include the following:

- Your Android tablet's external features
- Fundamentals of Android 5.0 (Lollipop)
- First-time setup
- Synchronization software

P

Getting to Know Your Android Tablet

 
You can start to get to know more about your Android tablet by examining the external features, device features, and how Google's latest operating system—Android 5.0 (Lollipop)—works.

One important thing to remember about any Android tablet bearing the Nexus name is that it is a pure Android tablet with no wireless carrier or vendor modifications. This book refers to this unchanged version of Android, but where appropriate some vendor-specific information is also included.

Your Android Tablet's External Features

Becoming familiar with the external features of your Android tablet is a good place to start because you will be using them often.

Front

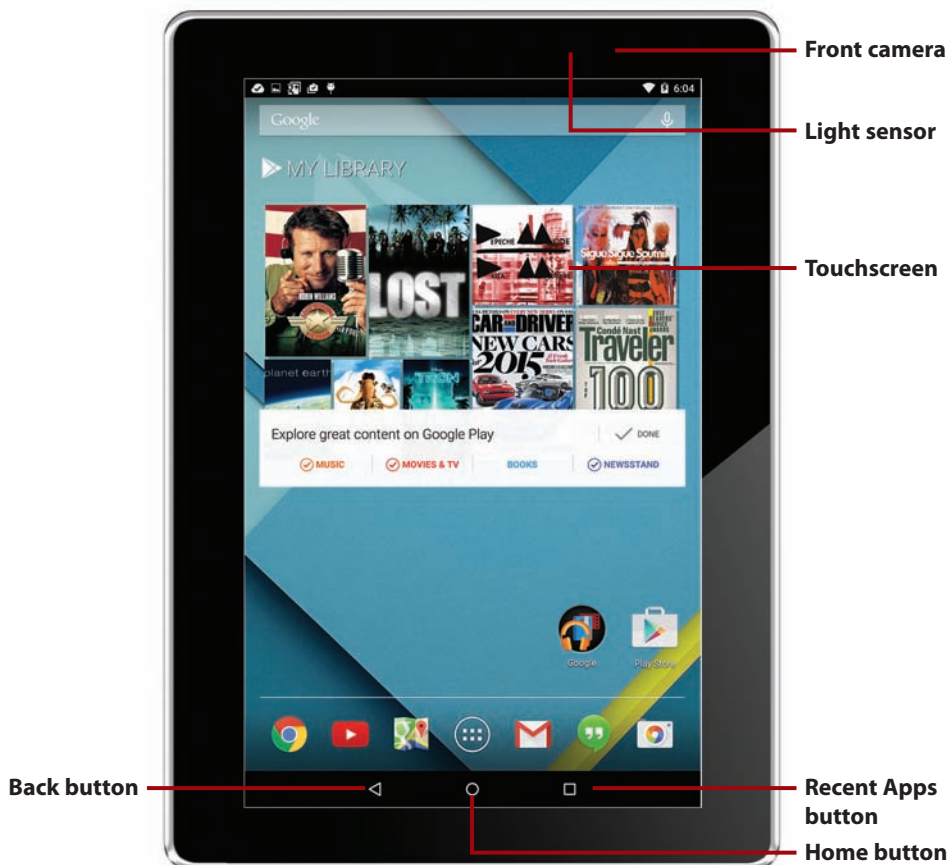

Light sensor Normally placed near the front camera, it adjusts the brightness of the screen based on the brightness of the ambient light.

Front camera Front-facing camera that you can use for video chat, taking self-portraits, and even unlocking your Android tablet using your face. Some tablets might not have a front-facing camera.

Touchscreen The Android tablet has a screen that incorporates 10-finger capacitive touch. The exact physical dimensions, technology used, and resolution of the screen differ depending on which vendor makes and sells the tablet.

Back button Tap to go back one screen when using an application or menu. This virtual button is actually on the screen; however some tablet vendors place a touch-sensitive Back button below the screen.

 
Recent Apps button Tap to see a list of recently used apps and switch between them. This virtual button is actually on the screen. Some vendors, such as Samsung, modify Android so that this virtual button is removed. These vendors normally require that you touch and hold the Home button to see recent apps.

Home button Tap to go to the Home screen. The application that you are using continues to run in the background. This virtual button is actually on the screen; however, some vendors, such as Samsung, place an actual physical Home button below the screen.

Menu button—Some vendors, such as Samsung, keep the Menu button even though it is a hold-over from a much older version of Android. Tap the Menu button to see a context-aware menu of options based on the screen or app you are using.

Button Placement

Google creates Android, and in older versions of Android, many devices that ran Android used physical buttons and even featured trackballs for navigation. More recent versions of Android have moved the physical buttons onto the screen as virtual buttons. Android also no longer has a Menu button (virtual or not), opting for a Menu icon in each app. However some vendors, such as Samsung, have chosen to implement buttons using their own design. Samsung has chosen to keep the physical Home button on all its devices. Samsung (as well as some other vendors) also has kept the Back and Recent Apps buttons below the screen. Depending on the model of Samsung tablet you own, you may have a Recent Apps button or a Menu button. These are some variations you might see.

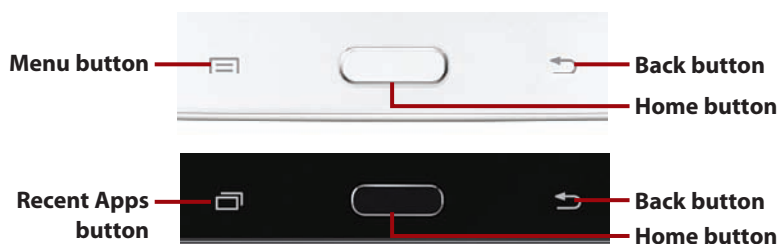

Back



Micro-HDMI port Some tablets include a Micro-HDMI port that enables you to use a Micro-HDMI-to-HDMI cable to play videos from your tablet onto a television or monitor.

Microphone Used for video and audio calls (using apps such as Skype or Google Talk). The actual placement of this microphone differs between manufacturers; however, it is normally on the top edge of the tablet or on the back near the top.

3.5mm headphone jack Used with third-party headsets so that you can enjoy music and talk on the tablet. The actual placement of the headphone jack differs based on the manufacturer of the tablet.

Micro-USB port Used to synchronize your Android tablet to your desktop computer and charge it. The placement of the Micro-USB port differs based on the manufacturer of the tablet. Some manufacturers are starting to include a Micro-USB 3 port, which is slightly longer.

LED camera flash Illuminates the area when you're taking photos or recording video.

Rear camera Rear-facing camera. The exact lens type, sensor resolution, and aperture differ based on who makes and sells the tablet. Some tablets do not include a rear camera.

Other Buttons and Connectors



Docking pins Use with accessories and docks to automatically start certain applications and charge your Android tablet. For example, a vehicle dock could automatically launch the Navigation app. Not all tablets include this connector, and the location of it differs based on which company manufactures the tablet.



Power button Press once to wake your Android tablet. Press and hold for 1 second to reveal a menu of choices. The choices enable you to put your Android tablet into silent mode, airplane mode, or power it off completely. The location of the Power button differs based on the tablet manufacturer.

Volume up/down buttons Control the audio volume on calls and while playing audio and video. The location of the volume buttons differs based on the tablet manufacturer.

Other Sensors and Radios

Your Android tablet includes a Wi-Fi (WLAN) radio for connecting to your home or office networks or to Wi-Fi hotspots in airports, coffee shops, and even on planes. It also has a Bluetooth radio for connecting Bluetooth accessories such as headsets. Some tablets may include a Near Field Communications (NFC) radio for mobile payments and swapping information between other Android devices. On the sensor front your tablet probably has an accelerometer for detecting movement, a compass for directional awareness, a gyroscope for assisting with movement detection and gaming, a Global Positioning System (GPS) for detecting where you are on the planet, and, in some cases, a Hall Sensor for detecting a magnetic field.

First-Time Setup

 
Before setting up your new Android tablet, it is advisable that you have a Google account. This is because your Android tablet running Android is tightly integrated into Google and enables you to store your content in the Google cloud, including any books and music you buy or movies you rent. If you do not already have a Google account, go to <https://accounts.google.com> on your desktop computer and sign up for one.

You Need Wi-Fi to Set Up Your Android Tablet



You need to connect to a Wi-Fi network when you set up your Android tablet.

Set Up Your Android Tablet


1. Press the Power button until you see the animation start playing.
2. Swipe up or down to change your location if needed.
3. Tap the arrow button to start the setup process.

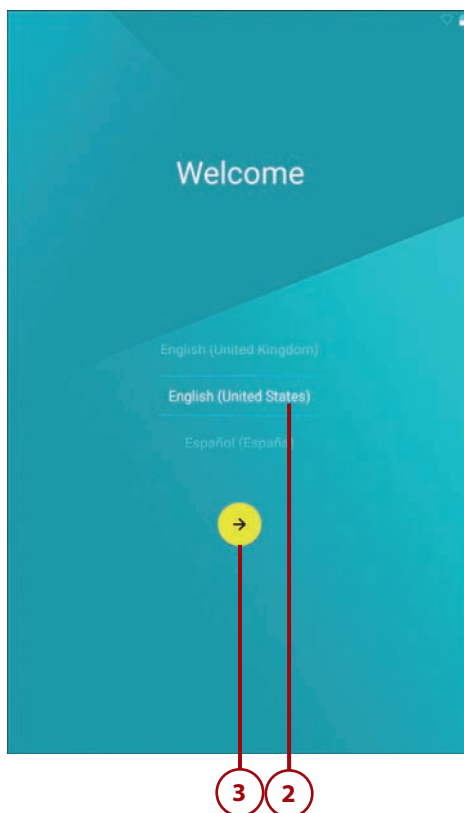

  
4. Select a Wi-Fi network to connect to.
5. Type in the Wi-Fi network password.
6. Tap Connect.
7. If you have another Android device (tablet or smartphone) running Android 5.0 (Lollipop), and you want to transfer the data from it to your new tablet, follow the instructions on this screen, or tap Skip to continue.

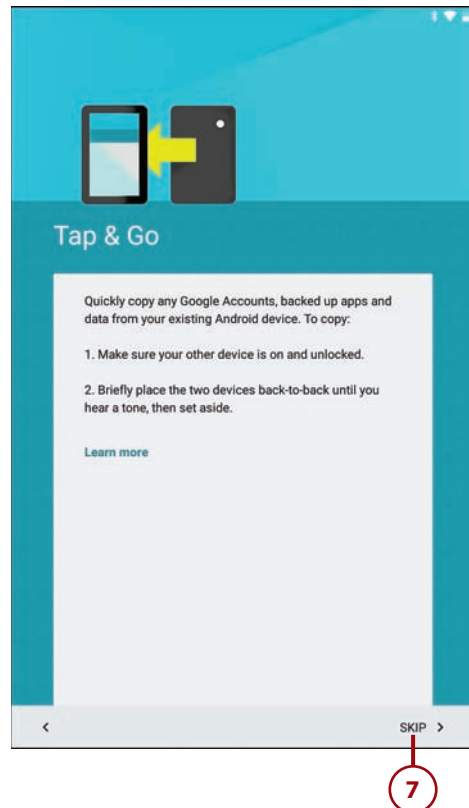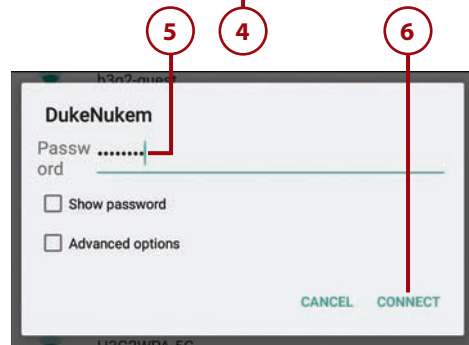

 
8. Enter your Gmail email address if you already have a Gmail account, and tap Next.
9. Enter your Google account password.
10. Tap Next.

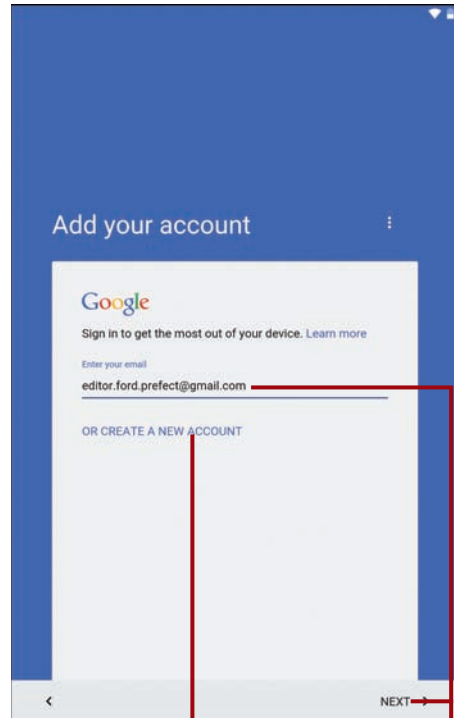

Tap to get a
Google account

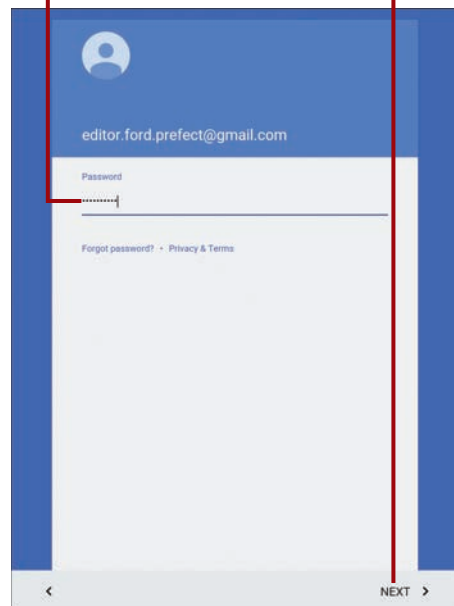 

11. Check this box if you want to back up your tablet's data so that it can be restored to a new tablet or smartphone in the future.
12. Check this box if you are okay with Google collecting information about your geographic location at any time. Although Google keeps this information safe, if you are concerned about privacy rights, you should uncheck this box.
13. Check this box if you are okay with your tablet scanning for Wi-Fi networks even if you have the Wi-Fi radio turned off. This helps improve location accuracy.
14. Check this box if you are okay letting Google collect diagnostic information about your tablet and the apps running on it.
15. Tap Next to complete your tablet setup.

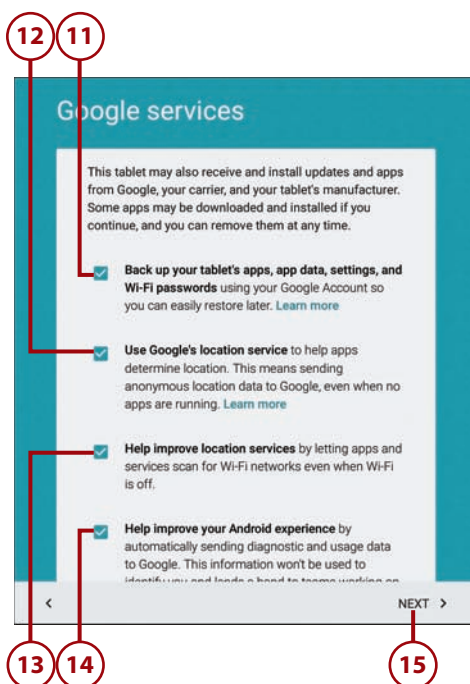 

Extra Setup Steps for Some Tablets

Many vendors that make Android tablets modify them so that they include special services and features unique to their brand of tablets—for example, separate app stores, special cloud services that provide backup and restore services, and other unique brand-only features. Normally, these features require that you have an account with the vendor itself in addition to having your Google account. Some tablet vendors include extra apps such as Dropbox and use those services to back up your tablet or store the pictures you take with the camera. During the tablet setup, you might be asked to enter your vendor-specific account details (or create a new account) or participate in extra services such as Dropbox. It's up to you whether you want to create this account or use only your Google account.

 
Fundamentals of Android 5.0 (Lollipop)

Your Android tablet is run by an operating system called Android. Android was created by Google to run on any tablet or smartphone, and quite a few tablets and smartphones run on Android today. This book covers the latest version of Android, called Android 5.0 (also called Android Lollipop).

The Lock Screen


If you haven't used your Android tablet for a while, the screen goes blank to conserve battery power. Here is how to interact with the lock screen.

1. Press the Power button to wake up your Android tablet. Some tablets have a physical Home button (as discussed earlier) and in these instances, pressing the physical Home button also wakes up your tablet.
2. Swipe up anywhere on the screen to unlock your tablet.

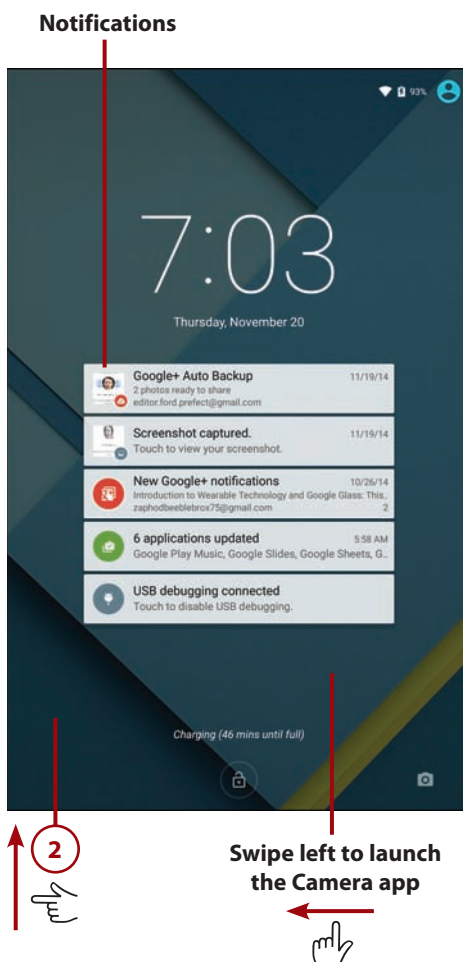

Talk to Your Tablet While It's Sleeping

 As long as it's plugged into power, you can speak to your tablet and give it commands, even while it is sleeping. Just say "OK Google," and it will wake up and listen for commands. You can search your tablet or the Internet, or give commands to send an email, add reminders, and many other things. To enable this feature, go to Settings, Language & Input, Voice Input, and tap the cog icon to the right of Enhanced Google services. Then tap "OK Google" Detection, and make sure all three switches are in the on position.

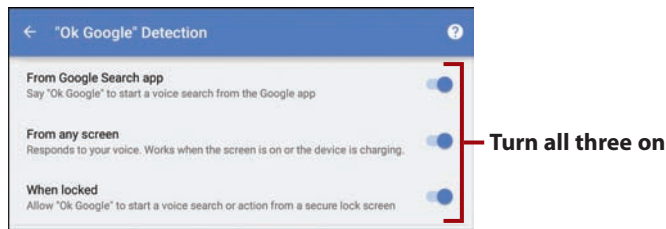


Work with Notifications on the Lock Screen

With Android 5.0 (Lollipop), you can work with notifications right on the lock screen. If you see notifications in the middle of the screen, touching one takes you straight to the app that created it. Read more about notifications later in this section.


Work with Android Settings on the Lock Screen

 With Android 5.0 (Lollipop), you can work with settings (such as Airplane Mode, turning Wi-Fi on or off, and so on) right on the lock screen. To work with settings, pull down the Quick Settings bar by sliding down from the top of the screen with two fingers to view and change commonly used settings. Tap the Settings icon to see a full list of settings. Tap the user icon to log in as a different tablet user, a guest tablet user, or create a new tablet user. Tablet user is covered later in this prologue.

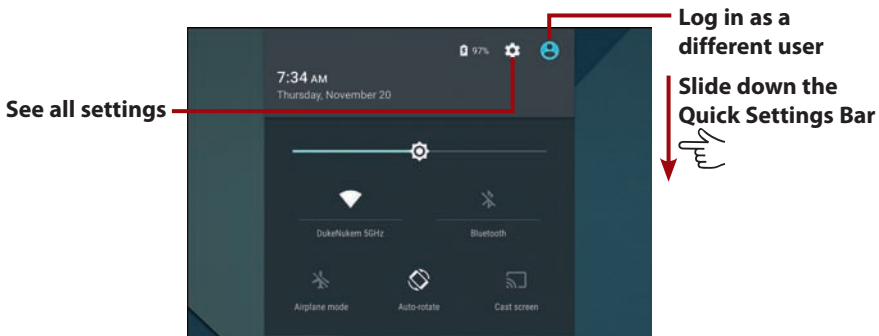

The Home Screen

 After you unlock your Android tablet, you are presented with the middle Home screen pane. Your Android tablet typically has five Home screen panes. The Home screen panes contain application shortcuts, a Launcher icon, a Notification Bar, Shortcuts, a Favorites Tray, and widgets.


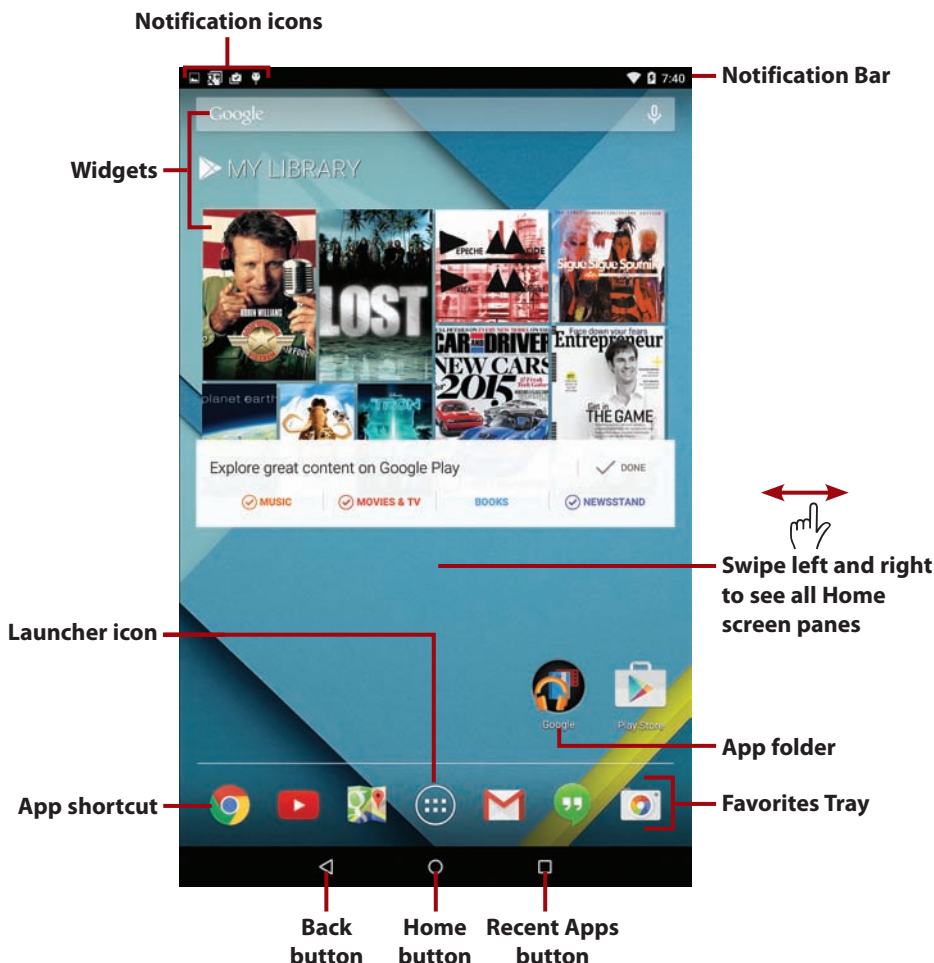


Notification Bar The Notification Bar shows information about Bluetooth, Wi-Fi, and cellular coverage, as well as the battery level and time. The Notification Bar also serves as a place in which apps can alert or notify you using notification icons.

Notification icons Notification icons appear in the Notification Bar when an app needs to alert or notify you of something. For example, the tablet app can show the new email icon indicating that you have new unread emails.


Working with Notifications and Quick Settings

  To interact with notifications that appear in the Notification Bar, place one finger above the top of the screen and swipe down to reveal the notifications. Swipe each individual notification off the screen to the left or right to clear them one by one. Using two fingers, drag down on a notification to expand it. You can also work with settings (such as Airplane Mode or turning Wi-Fi on or off). To work with settings, tap the Quick Settings Bar to view and change commonly used settings. Tap the Settings icon to see a full list of settings. If you want to get to Quick Settings right away, use two fingers and swipe down from the top of the screen. The Quick Settings Bar will slide down, with the notifications underneath it. Swiping down to see notifications and Quick Settings works on any screen, and while running any app.

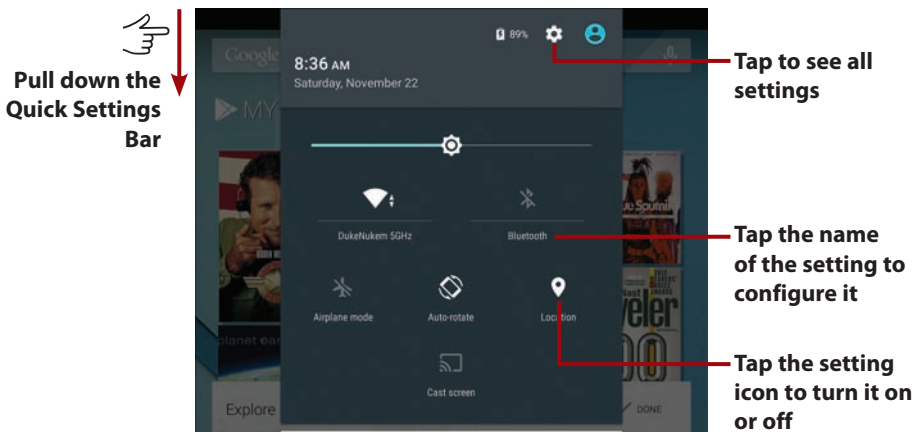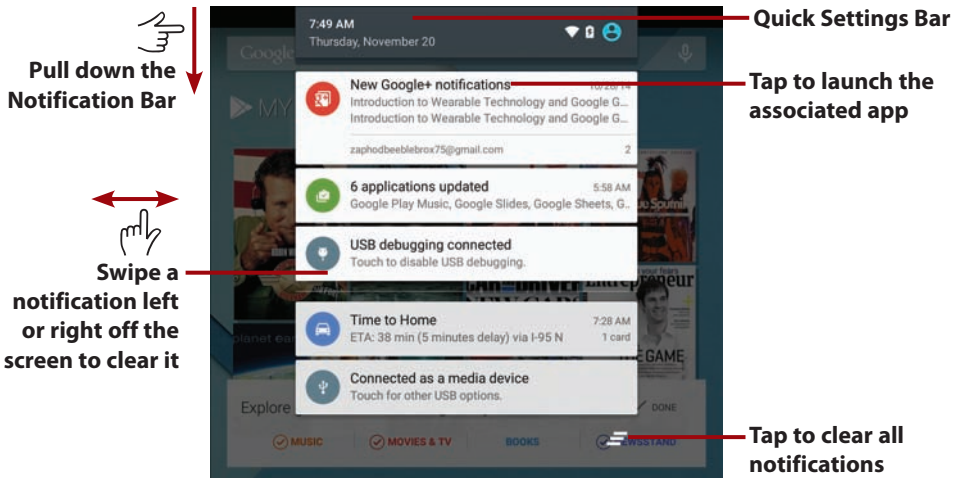

Differences Between Tablets

 Some tablets modify the way that Quick Settings works. For example, when you swipe down with two fingers on a Samsung tablet, you see a lot more Quick Settings icons. To control how many you see, tap the pencil icon. To configure a setting like Bluetooth, touch and hold the setting icon. Tap the icon to turn the setting on or off.

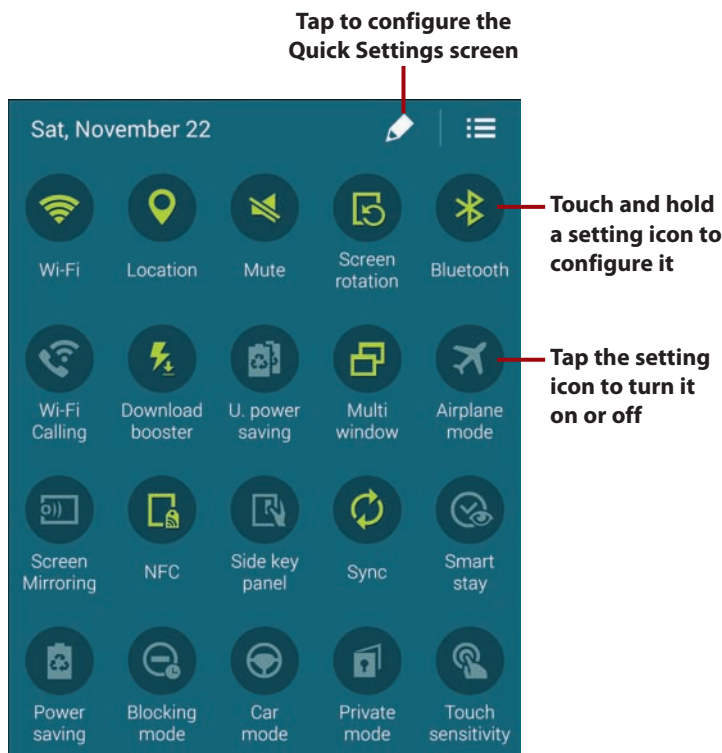


Widgets Widgets are mini apps that run right on the Home screen panes. They are specially designed to provide functionality and real-time information. An example of a widget is one that shows the current weather or provides search capability. You can move and resize widgets.

App shortcut Tapping an app shortcut launches the associated app.

Creating App Shortcuts

 Tap the Launcher icon to see all your apps. Touch and hold on the app you want to make a shortcut for. After the Home screen appears, drag the app shortcut to where you want it on the Home screen, drag it to an app folder to add it to the folder, or drag it left or right off the screen to move it between Home screen panes. Release the icon to place it.

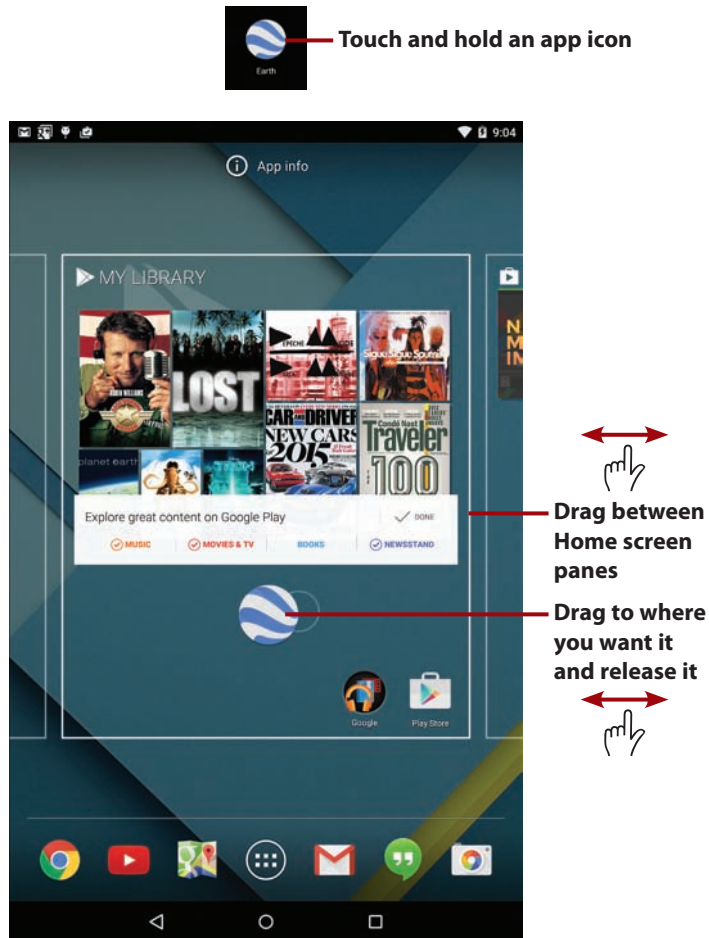

App folders App folders are groups of apps that you can use to organize and declutter your screen.

Creating App Folders

To create a new app folder, simply drag one app shortcut onto another one. An app folder is created automatically. To name your new app folder, tap the folder to open it, and tap Unnamed Folder to enter your custom name.



Favorites Tray The Favorites Tray is visible on all five Home screens. You can drag apps to the Favorites Tray so that they are available no matter which Home screen pane you are looking at. You can rearrange and move apps in the Favorites Tray.


Launcher icon Tap to show application icons for all applications that you have installed on your Android tablet.

The System Bar

Your Android tablet running Android 5.0 (Lollipop) has no physical buttons. Instead it has an area of the screen set aside for virtual buttons. This area is called the System bar. The System bar includes the Back, Home, and Recent Apps virtual buttons.

My Tablet Doesn't Have a System Bar

 Although Google's Android operating system is designed to use virtual buttons in the System bar, some tablet vendors, such as Samsung, have chosen to use physical and touch-sensitive buttons below the screen. Because the buttons are below the screen, there is no need to have a System bar. Refer to the "Button Placement" margin note earlier in this prologue for more information.

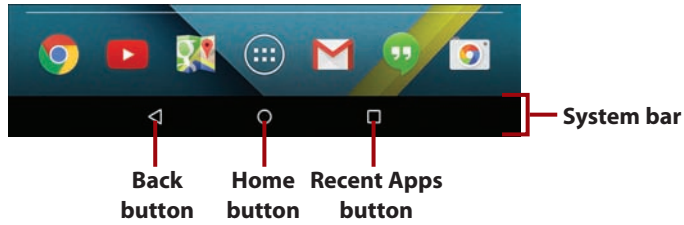

System bar Reserved area of the screen where virtual buttons are displayed.

Back button Tap to go back one screen in an app or back one step while navigating Android.

Home button Tap to exit what you are doing and return to the Home screen. Your app continues to run in the background.

Recent Apps button Tap to see your recently used apps, switch between them, and close them.

Using Your Touchscreen

Interacting with your Android tablet is done mostly by touching the screen—what's known as making gestures on the screen. You can tap, touch and hold, swipe, pinch, double-tap, and type.

Tap To start an application, tap its icon. Tap a menu item to select it. Tap the letters of the onscreen keyboard to type.



Touch and hold Touch and hold to interact with an object. For example, if you tap and hold a blank area of the Home screen, a menu pops up. If you tap and hold an icon, you can reposition it with your finger.



Drag Dragging always starts with a tap and hold. For example, if you tap and hold the Notification Bar, you can drag it down to read all the notification messages.



Swipe or slide Swipe or slide the screen to scroll quickly. To swipe or slide, move your finger across the screen quickly. Be careful not to tap and hold before you swipe or you will reposition something. You can also swipe to clear notifications or close apps when viewing the recent apps.



 
Double-tap Double-tapping is like double-clicking a mouse on a desktop computer. Tap the screen twice in quick succession. For example, you can double-tap a web page to zoom in to part of that page.



Pinch To zoom in and out of images and pages, place your thumb and forefinger on the screen. Pinch them together to zoom out or spread them apart (unpinch) to zoom in. Applications such as Browser, Photos, and Maps support pinching.




Rotate the screen If you rotate your Android tablet from an upright position to being on its left or right side, the screen switches from portrait view to landscape view. Most applications honor the screen orientation. The Home screens and Launcher do not.

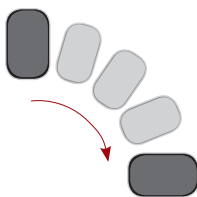

Using Your Keyboard

Your Android tablet has a virtual (onscreen) keyboard for those times when you need to enter text. You might be a little wary of a keyboard that has no physical keys, but you will be pleasantly surprised at how well it works.

 
Most apps automatically show the keyboard when you need to enter text. If the keyboard does not appear, tap the area where you want to type and the keyboard slides up ready for use.

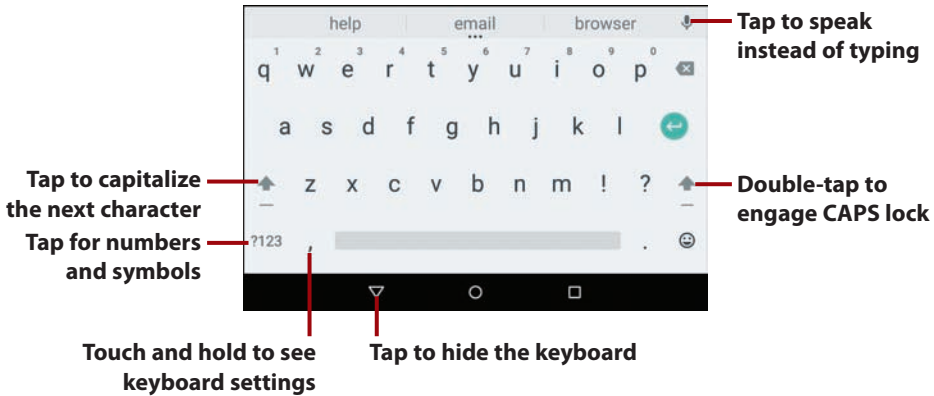

Keyboard Quick Tips

If you are typing an email address or a website address, the keyboard shows a button labeled .COM. If you tap it, you type .COM, but if you touch and hold it, you can choose between .EDU, .GOV, .ORG, and .NET. If you tap and hold the Return key, the cursor jumps to the next field. This is useful if you fill out forms on a website or move between fields in an app. If you touch and hold the comma key, you can change the language and keyboard settings.

 Using the virtual keyboard as you type, your Android tablet makes word suggestions. Think of this as similar to the spell checker you would see in a word processor. Your Android tablet uses a dictionary of words to guess what you are typing. If the word you were going to type is highlighted, tap the space or period to select it. If you can see the word in the list but it is not highlighted, tap the word to select it.

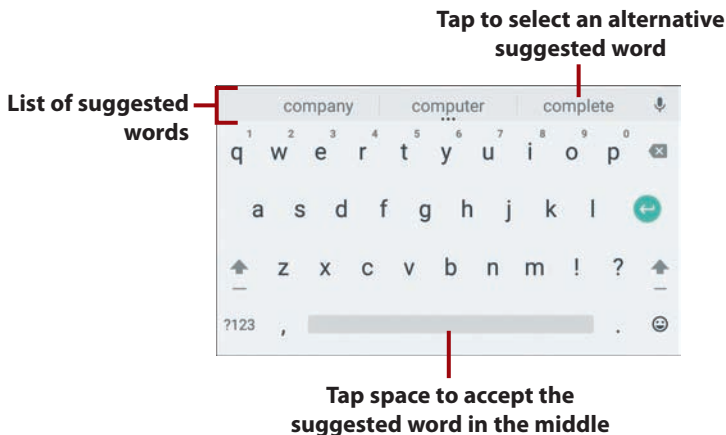


Add Your Word

If you type a word that you know is correct, you can add it to your personal dictionary so that the next time you type it, your Android tablet won't try to correct it. To do this, after you type the word—but before you tap space—you'll notice that your word is underlined. Tap on the underlined word, and your word appears in the middle of the suggested words area. Tap the word to add it to your personal dictionary. Tap it once more to complete the action.

First, tap your word to add it to the dictionary.



 Next, tap the word as it appears here.



Tap your word again to complete the save

To make the next letter you type a capital letter, tap the Shift key. To make all letters capitals (or CAPS), double-tap the Shift key to engage CAPS Lock. Tap Shift again to disengage CAPS Lock.

To type numbers or symbols, tap the Symbols key.

When on the Numbers and Symbols screen, tap the Symbols key to see extra symbols. Tap the ABC key to return to the regular keyboard.



 
To enter an accented character, touch and hold any vowel or the C, N, or S keys. A small window opens enabling you to select an accented or alternative character. Slide your finger over the accented character, and lift your finger to type it.



To reveal other alternative characters, tap and hold any other letter, number, or symbol.

Want a Larger Keyboard?

Turn your Android tablet sideways to switch to a landscape keyboard. The landscape keyboard has larger keys and is easier to type on.

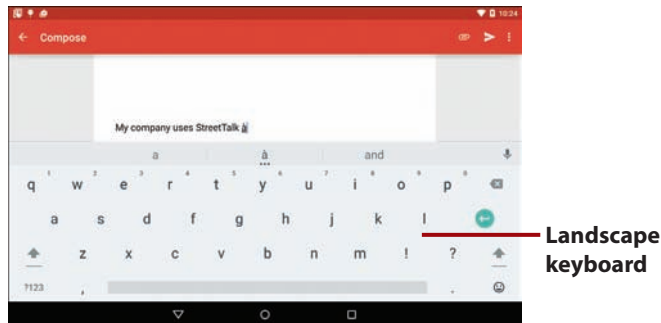


Dictation: Speak Instead of Typing

Your Android tablet can turn your voice into text. It uses Google's speech recognition service, which means that you must have a connection to the cellular network or a Wi-Fi network to use it.

1. Tap the microphone key.
2. Wait until you see **Speak Now**, and then start saying what you want to be typed. You can speak the punctuation by saying "comma," "question mark," "exclamation mark," or "exclamation point."
3. Stop speaking to finish dictation.



 Tap to select a different dictation language

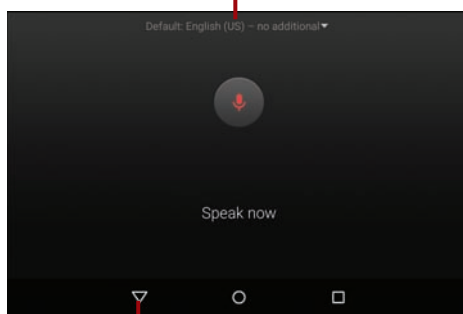

Tap to cancel voice dictation

Swipe to Type

Instead of typing on the keyboard in the traditional way by tapping each letter individually, you can swipe over the letters in one continuous movement. This is called Gesture Typing. It is enabled by default; to use it, just start swiping your finger over the letters of the word you want to type. As you swipe your finger, you see a trail following your finger. Lift your finger after each word. To add a space, swipe over the space bar, or just start the next word and let the keyboard add the space for you. To type a double letter (as in the word "pool"), loop around that letter on the keyboard.

Edit Text

After you enter text, you can edit it by cutting, copying, or pasting the text. Here is how to select and copy text, and then paste over a word with the copied text.

1. While you are typing, tap and hold a word you want to copy. The word highlights in blue, and you see end markers on either side of the word.
2. Slide the blue end markers until you have selected all the text you want to copy. In this example, we just need the one word.
3. Tap to copy the text. You can also cut the text. This example demonstrates copying text.
4. Touch and hold the word you want to paste over.
5. Tap Paste.



Simpler Copy/Paste

 
You might want to just copy some text and paste it somewhere else, instead of pasting it over a word. To do this, after you have copied the text, tap once in the text area, and move the single blue marker to where you want to paste the text. Tap the blue marker again, and tap Paste.



Menus

Your Android tablet has two types of menus: App menus and Context menus. Let's go over what each one does.


Most applications have a Menu icon, which enables you to make changes or take actions within that application. The Menu icon should always appear in the top-right corner of an app; however, it can sometimes appear in the System bar next to the Recent Apps button or elsewhere in the app. Remember that some tablets have a physical Menu button below the screen and might not have the onscreen Menu icon.

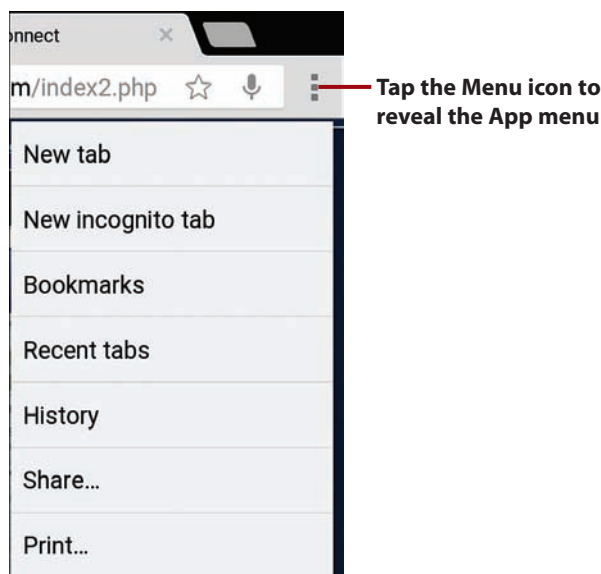

A context menu applies to an item on the screen. If you tap and hold something on the screen (in this example, a link on a web page), a context menu appears. The items on the context menu differ based on the type of object you tapped.

**Touch and hold a link to
reveal the link context menu**

 **Tap an item
in the menu**

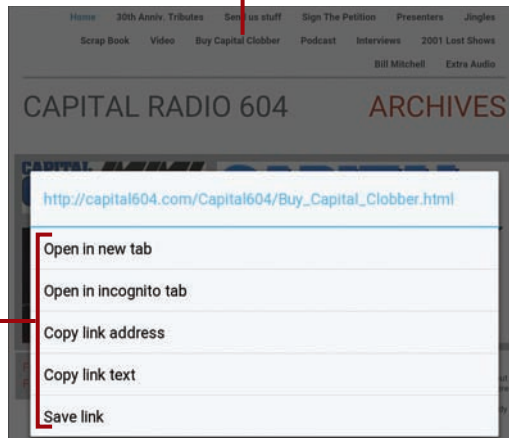


Switch Between Apps

Your Android tablet has an icon called the Recent Apps icon. This icon is always on the System bar at the bottom of your screen. You can use this icon to switch between apps, close apps, and force them to quit if they have stopped responding.

1. Tap the Recent Apps icon.
2. Scroll up and down the list of recent apps.
3. Swipe an app left or right off the screen to close it.
4. Tap and hold an app's icon to reveal the app's information screen.

 
**Tapping the X icon
also closes the app**

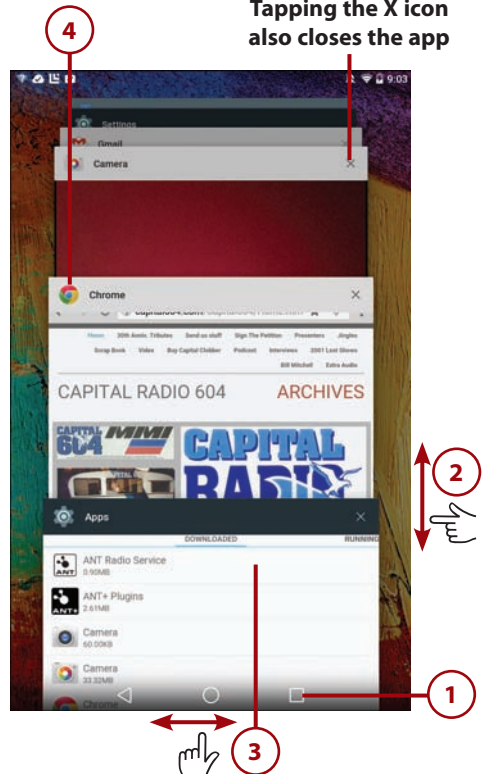

5. Tap to force an app to close if it has stopped responding.

My Tablet Doesn't Have a Recent Apps Button

 Tablets made by some vendors such as Samsung remove the Recent Apps button and replace it with a Menu button. In these cases, press and hold the Home button to reveal the Recent Apps screen.

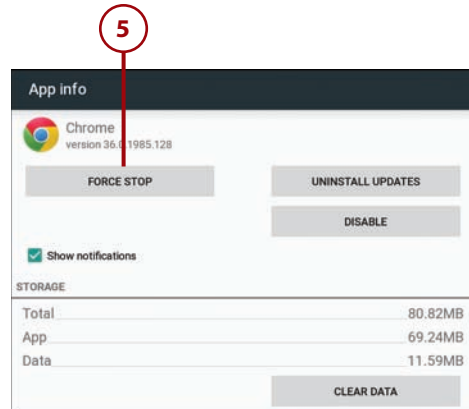


Setting Up Multiple Users on Your Tablet

Your Android tablet has the capability to support multiple users. This enables you to share your tablet among co-workers, family members, or friends, with each person having his own unique login, apps, photos, videos, and settings. Your tablet can support up to eight users. Some tablet vendors do not allow this option.




Add a New Tablet User

Tablet users can have their own apps, photos, videos, wallpapers, and do anything on the tablet with the exception of removing other users and factory resetting the tablet. To add other users, the original owner of the tablet must be logged in and needs to use the following steps. The user being added should also be present at the time the new user profile is created.

 1. Pull down the Quick Settings pane, and tap the user icon.

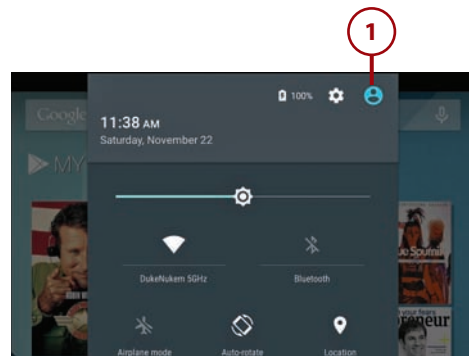


   2. Tap Add User.
3. Tap OK.
4. Tap Set Up Now.
5. Hand the tablet to the person who will be setting up her account. She can now follow the steps in the section called “First-Time Setup,” earlier in this chapter.

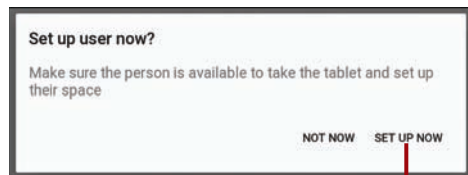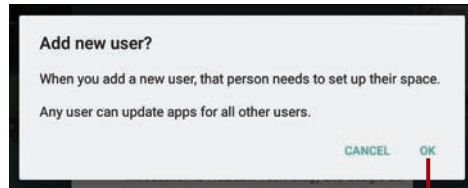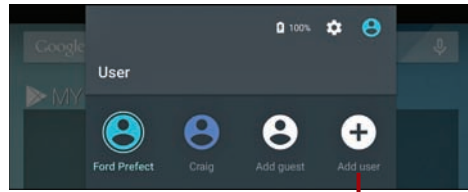

How to Switch Between Tablet Users

 To switch between tablet users, pull down the Quick Settings Bar on the lock screen, Home screen, or while running any app, and tap the user icon. Tap the user you want to switch to.

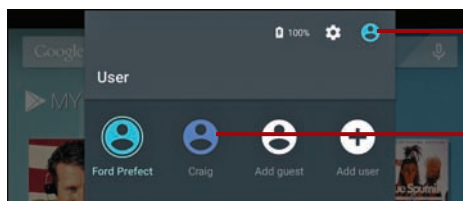


Tap the user icon to switch users

Tap a user to switch to

Add a Tablet Guest User


A tablet guest user can use the tablet like a regular user; however, the user's information is not permanently saved. There can only be one guest account, and it can either be reused by the same guest, or wiped for a new guest.

 1. Pull down the Quick Settings pane, and tap the user icon.
2. Tap Add Guest.
3. Hand the tablet to the guest. No setup is required.

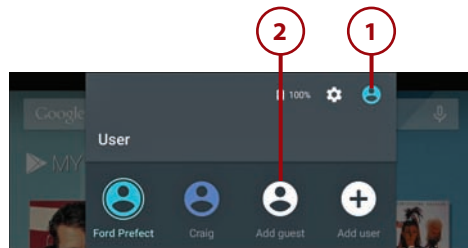

Continue as a Guest or Start Over

 If you previously added a guest user and allowed someone to use it, the guest account will remain untouched until your guest wants to use it again. If the same person wants to continue where they left off, when they switch to the guest user they will be asked to either start over or continue. If they tap Continue, their guest session will continue where it left off. However, if you are allowing a new person to use the guest user, he must tap Start Over to wipe the previous guest session and start fresh.

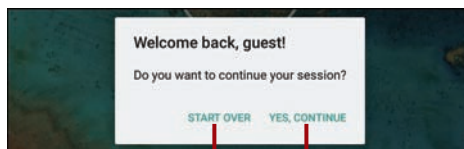


**Tap to start as
a new guest**

**Tap to continue as
the previous guest**

>>>Go Further

LET YOUR CHILDREN USE YOUR TABLET SAFELY

 When you add a new user, the user has his own Google account and full access to all apps that he installs while he is logged in to the tablet. A restricted profile is a copy of your own login profile but with apps and content restricted. You can imagine using restricted profiles for your children who may not have their own Google account and who should not have access to all apps. By creating a restricted profile, you can decide which apps and content the person may access, but you don't have to worry about having to set up a whole new user on your tablet. Restricted profiles appear like new users but actually function under your user account with restrictions in place. To add a restricted profile, go into Settings, tap Users, tap Add user or Profile, and tap Restricted Profile. If you haven't already, you will be asked to set a screen lock. This is to protect your account so nobody can just switch back to it. After you set your screen lock, you set up the restricted profile.

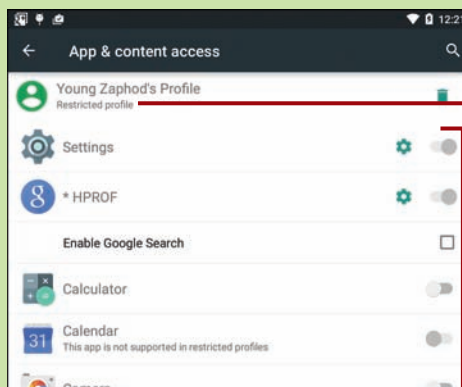

**Name the
restricted profile**

**Choose which apps
and content the
restricted profile
has access to**

 
Installing Synchronization Software

Because your Android tablet is tightly integrated with Google and its services, all media that you purchase on your tablet is stored in the Google cloud and accessible anywhere and anytime. However, you might have a lot of music on your computer already that you need to copy to your Google cloud, so you need to install the Google Music Manager software or the Android File Transfer app for your PC or Mac to copy any file back and forth.


Install Android File Transfer (Apple Mac OS X)

You need only the Android File Transfer app when using an Android tablet on an Apple Mac running OS X, and only if you think you want to drag files to and from your tablet using Finder.


1. From your Mac, browse to <http://www.android.com/filetransfer/> and download the Android File Transfer app.

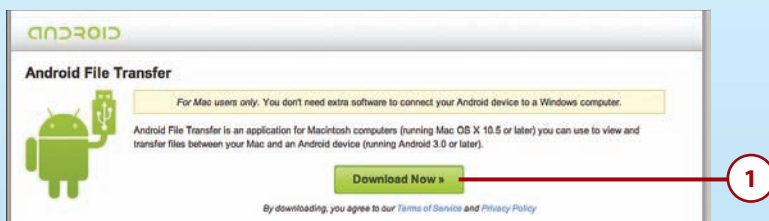

 2. Click the downloads icon to reveal your downloaded files.
3. Double-click the androidfiletransfer.dmg file in your Safari Downloads.

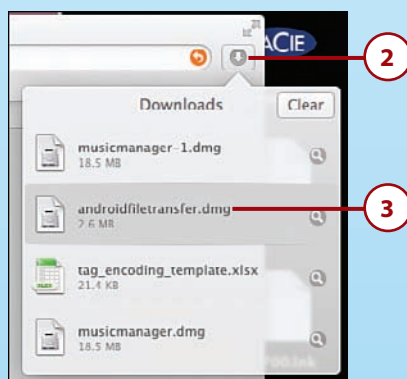

 
4. Drag the green Android to the Applications shortcut to install the app.

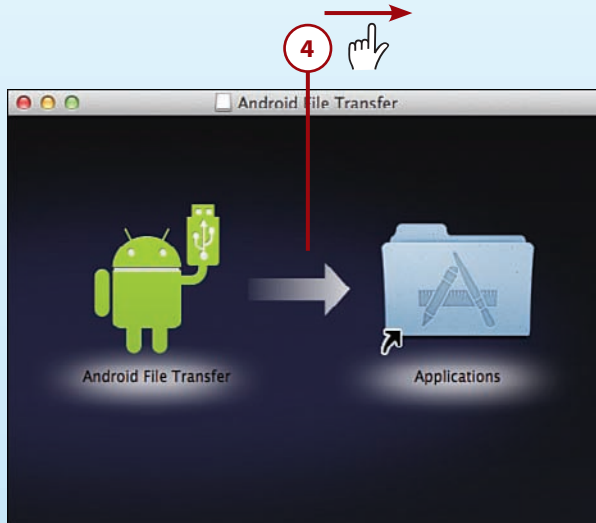



Install Google Music Manager (Apple Mac)

Don't install Google Music Manager unless you plan to upload files from your computer to the Google Music cloud.

 
1. Visit https://play.google.com/music/listen#manager_pl from your desktop web browser, and log in to your Google account if prompted.
2. Click Download Music Manager.

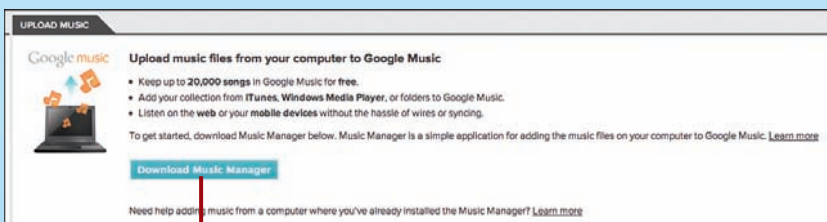

  3. Click the downloads icon to reveal your downloaded files.
4. Double-click the musicmanager.dmg file in your Safari Downloads.

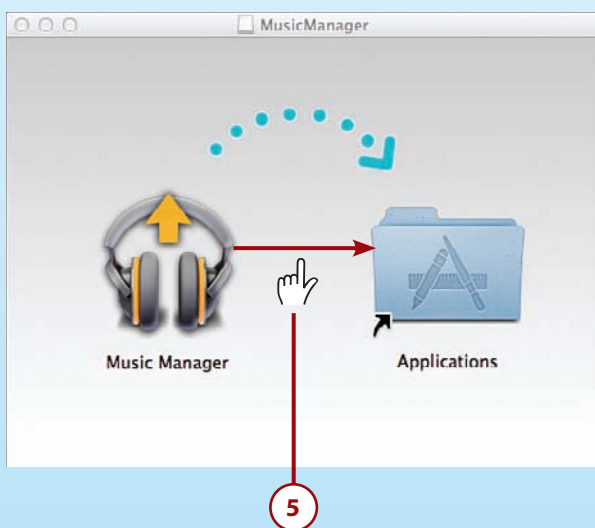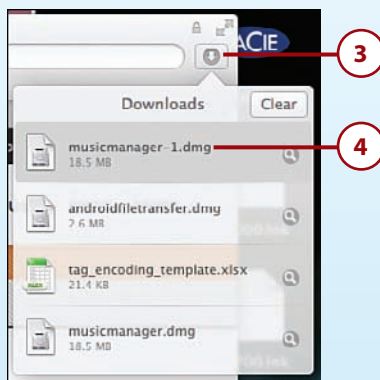

 5. Drag the Music Manager icon to the Applications shortcut to install the app.




6. Double-click the Music Manager icon in the Applications folder.
7. Skip to the "Configure Music Manager" section later in the prologue to complete the installation.


Install Google Music Manager (Windows)

Don't install Google Music Manager unless you plan to upload files from your computer to the Google Music cloud.

 1. Visit https://music.google.com/music/listen#manager_pl from your desktop web browser, and log in to your Google account if prompted.
2. Click Continue to download Music Manager.

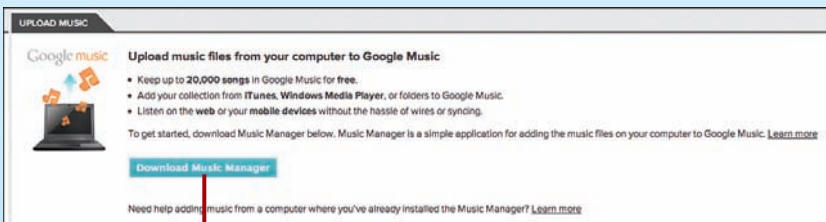


 3. Double-click the musicmanagerinstaller app in your Downloads folder, and then follow the steps in the next section.

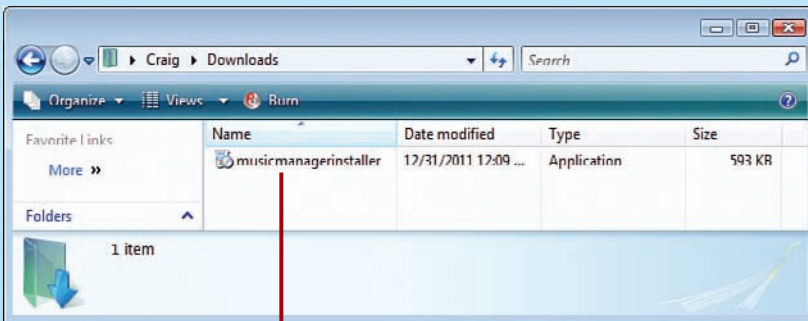


Configure Music Manager (Windows and Apple Mac)

 
1. Click Continue.

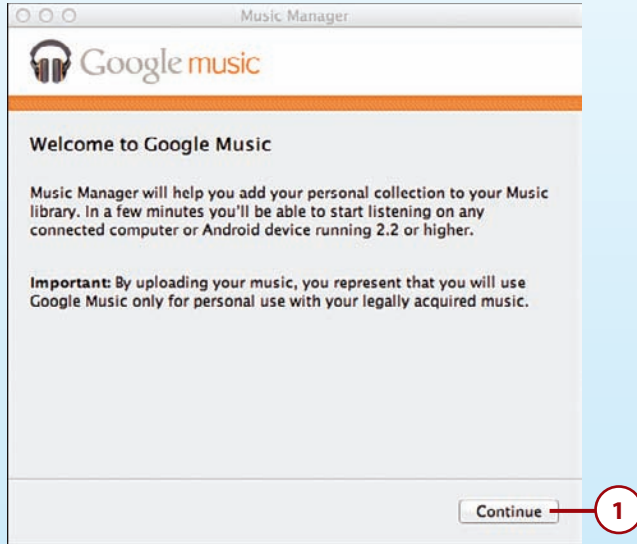

 
2. Enter your Google (Gmail) email address.
3. Enter your Google (Gmail) password.
4. Click Continue.

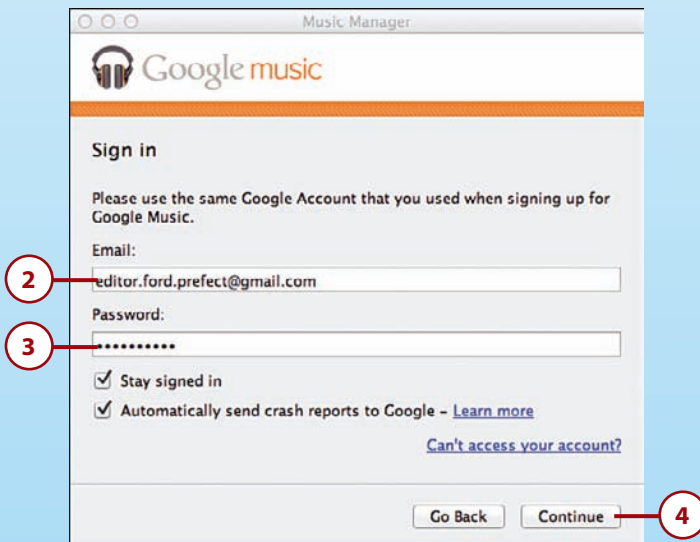

 
5. Choose where you keep your music.
6. Click Continue.

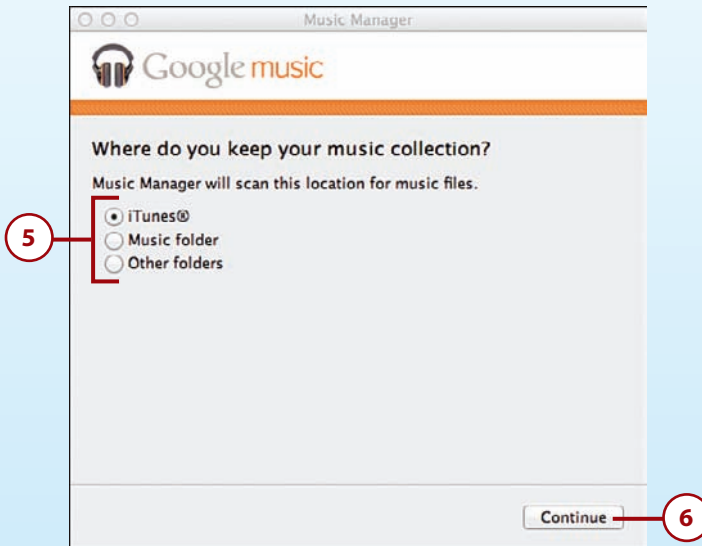

 7. Choose whether to upload all your music or just some of your playlists. Remember that you can upload only 20,000 songs for free. Skip to Step 12 if you choose to upload all music.
8. Check if you want to also upload podcasts.
9. Click Continue.

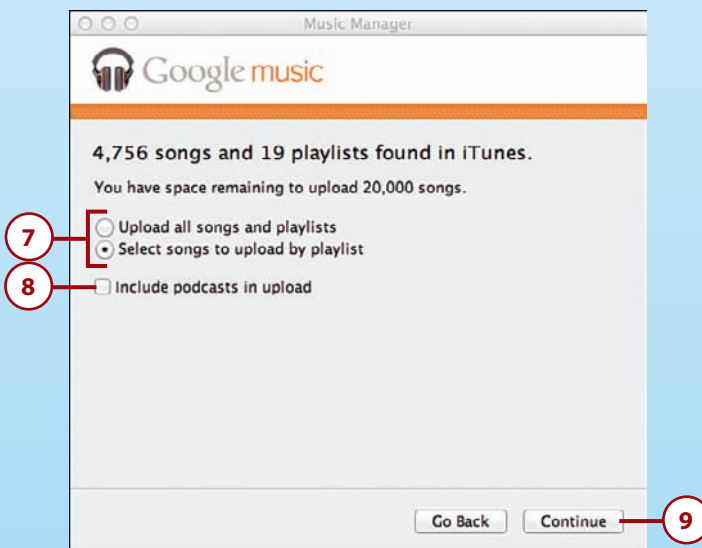

 
10. Select one or more playlists of music.
11. Click Continue.

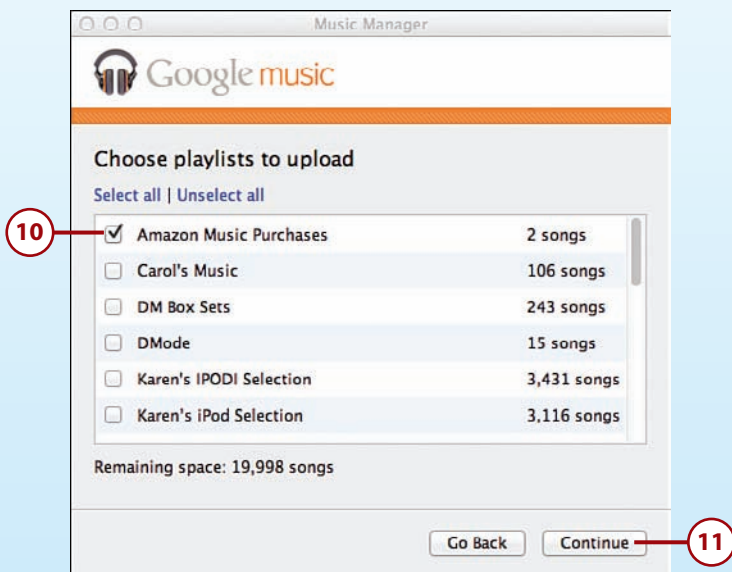


12. Choose whether you want to automatically upload any new music that is added to your computer.



 
13. Click Continue, and your files start uploading.

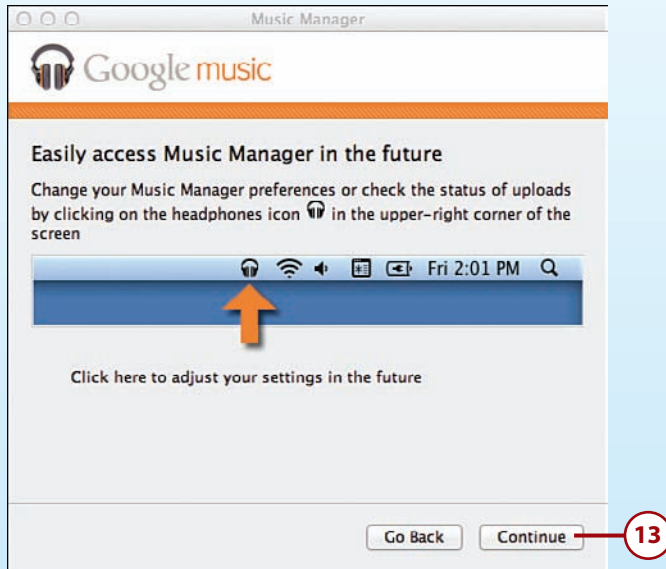

 14. Click Close.

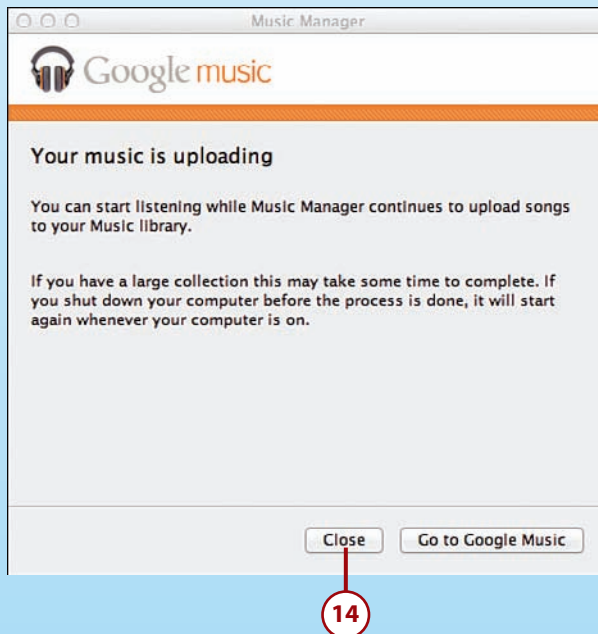

Take panoramas

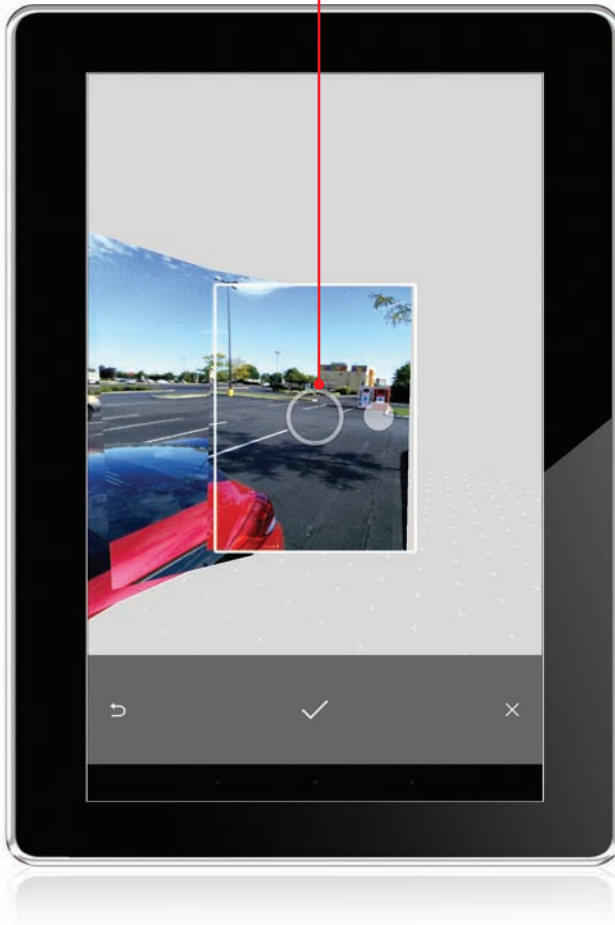 

In this chapter, you learn how to take pictures with your Android tablet, how to store them, and how to share them with friends. Topics include the following:

- Using the camera
- Taking panoramic pictures
- Taking Photo Sphere pictures
- Synchronizing pictures
- Viewing pictures

 
Taking and Editing Pictures

Most Android tablets have both front- and rear-facing cameras. The rear-facing camera is normally quite good, so taking pictures is not a disappointing experience. After you take those great pictures, you can share them with friends. You can also synchronize the pictures directly with your computer or using Google Photos in the cloud.

Using the Camera

Before you start taking photos, you should become familiar with the Camera application.

1. Tap to launch the Camera.
2. Swipe in from the left of the screen to change the camera mode between still camera, panoramic camera, Lens Blur, Photo Sphere, and video camera. (These modes are covered in more detail later in the chapter.)
3. Tap to change the camera settings. (See the next section for more information about the camera settings.)

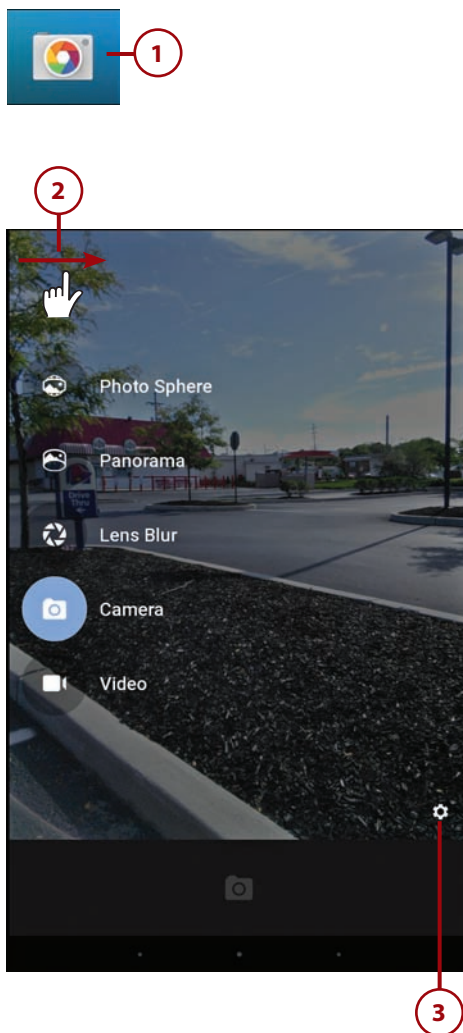


4. Tap anywhere in the frame to make the camera focus specifically in the area.
5. Tap to switch between the front-facing and rear-facing cameras, overlay a grid pattern on the screen, or manually adjust the exposure setting.
6. Tap to take a picture.



Zooming In—Is It Worth It?

Before you snap your picture or record a video (and also while you're recording a video), you can zoom in on the frame. To zoom in, place your thumb and forefinger on the screen and move them apart. To zoom out, move your thumb and forefinger back together. This is commonly called "pinch to zoom."

 
When you slide your thumb and forefinger apart to zoom in, the Camera app is faking the zoom. Although the image appears to get larger, what is actually happening is the image is simply manipulated to appear like it's zooming in. This is commonly called "digital zoom." Optical zoom is when the camera actually zooms using a lens movement, which is something that this camera cannot do.

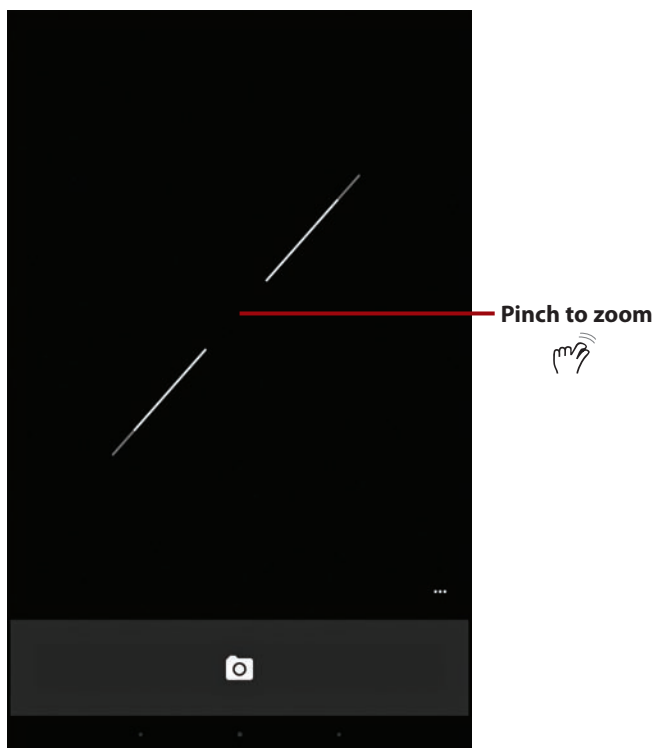


Adjust Camera Settings

Using camera settings, you can change things such as the resolution of each picture, picture review time, filters, scene mode, white balance, and more. The settings that are not available when you're in video mode are noted in the steps.

 1. Swipe in from the left of the screen.
2. Tap to see Settings.
3. Tap to enable or disable embedding your GPS coordinates into pictures you take.
4. Tap to enable or disable showing the manual exposure setting on the main camera screen.
5. Tap Resolution & Quality.

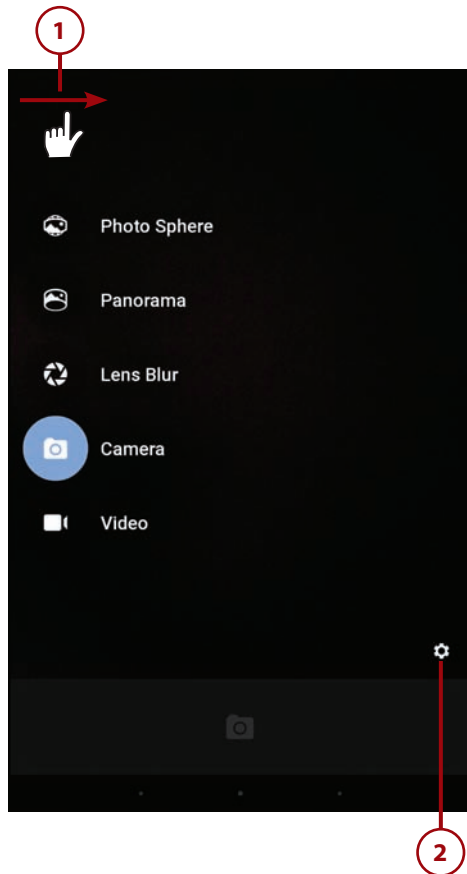

6. Tap to adjust the resolution and format of the pictures taken with the rear-facing camera. Your choices range from a 5 megapixel 4:3 ratio image to a 0.9 megapixel 16:9 ratio image. The exact range depends on your tablet's camera capabilities.
7. Tap to adjust the resolution and format of the pictures taken with the front-facing camera. Your choices range from a 1 megapixel 5:3 ratio image to a 0.1 megapixel 4:3 ratio image. The exact range depends on your tablet's camera capabilities.
8. Tap to adjust the format of the video taken with the rear-facing camera. Your choices are HD 1080p, HD 720p, and SD 480p. The exact range depends on your tablet's camera capabilities.
9. Tap to adjust the format of the video taken with the front-facing camera. Your choices are HD 720p, SD 480p, and CIF. The exact range depends on your tablet's camera capabilities.
10. Tap to adjust the quality of the images taken with the rear-facing camera when shooting panoramas. Your choices are High, Normal, and Low.
11. Tap to adjust the quality of the images taken with the rear-facing camera when shooting Lens Blur pictures. Your choices are Normal and Low.
12. Tap to save your changes and return to the main Settings screen.
13. Tap to save your changes and return to the main Camera screen.

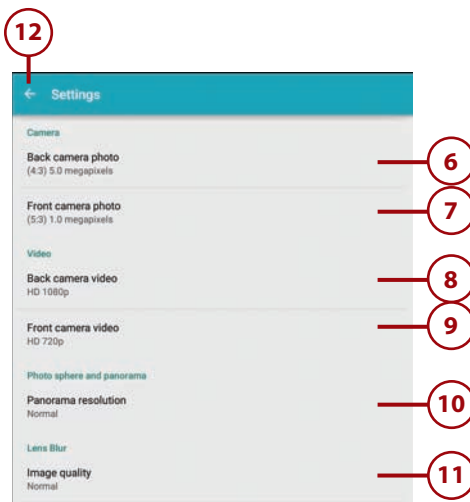 


Take Regular Pictures

Now that you have the settings the way you want them, take a few pictures. You can jump to Step 5 and take the picture, but you might want to first set up your shot. Remember to always take pictures in landscape mode for the best results.

1. Tap the Camera icon.
2. Swipe in from the left of the screen to change the camera mode.
3. Tap to select regular camera mode.
4. Tap the area of the frame you want to focus on specifically. When you release your finger, the camera adjusts its focus.
5. Tap to take the picture.

Focus on Parts of a Picture


 
You can actually focus on a certain part of a scene. By tapping the part of the picture you want in focus, you see that the rest of the picture goes out of focus. Using this trick enables you to create depth in your photos.

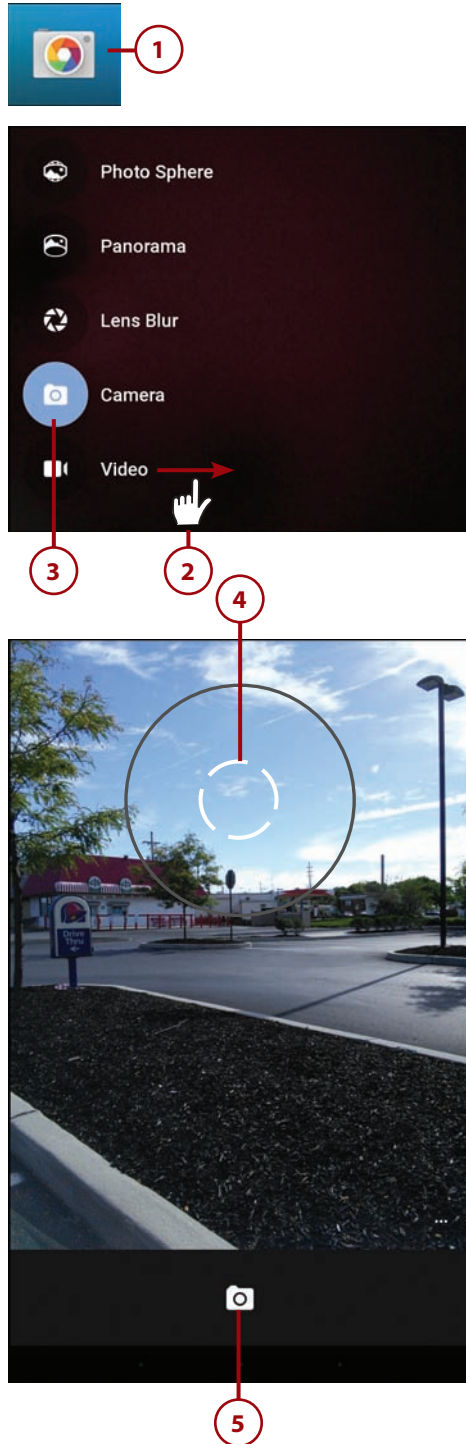

Take Panoramic Pictures

Your Android tablet can take panoramic pictures. Panoramic pictures are achieved by taking multiple pictures from left to right or right to left and stitching them together in one long picture. Luckily your Android tablet does all that work for you.

  1. Tap the Camera icon.
2. Swipe in from the left of the screen.
3. Tap to select Panorama.
4. Tap to select the type of panorama you want to take.
5. Tap to shoot a horizontal panorama (left to right or right to left).
6. Tap to shoot a vertical panorama (up/down or down/up).
7. Tap to shoot a wide angle panorama.
8. Tap to shoot a fish eye panorama.

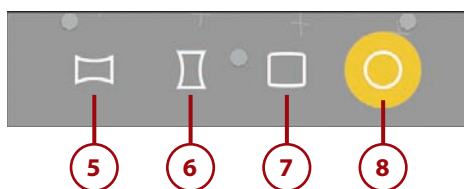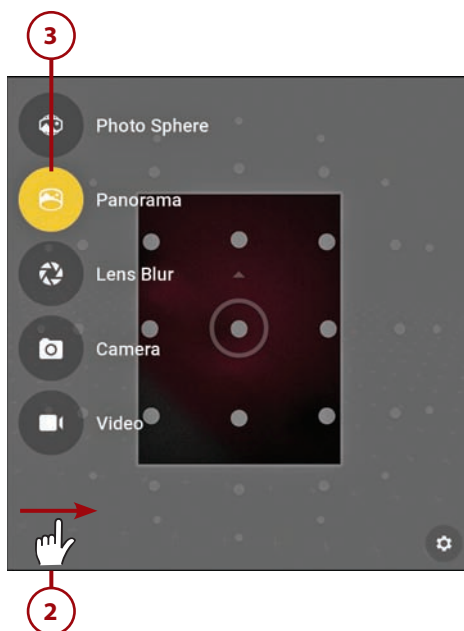



9. Tap to start the panorama.
10. Move your tablet until the circle is over the closest white dot. This is your starting off point. After the dot turns blue, more dots appear to guide you.
11. Slowly move your tablet around, and guide the circle over the blue dots. Each time you line them up, another image is captured for your panorama.
12. After you capture all the images necessary for the type of panorama you chose, the camera automatically stitches the pictures together into a panorama and saves it.

Can You Change the Width of the Panorama?

To create shorter horizontal or vertical panoramas, instead of rotating all the way from left to right, or up or down, you can tap the check mark icon to immediately stop the panorama process and save it as is.

Moving Too Fast

 
 
When you take panoramic pictures, you have to rotate slowly. If you start moving too fast, the camera indicates this to you. Slow down when this happens; otherwise the panorama will not look good.

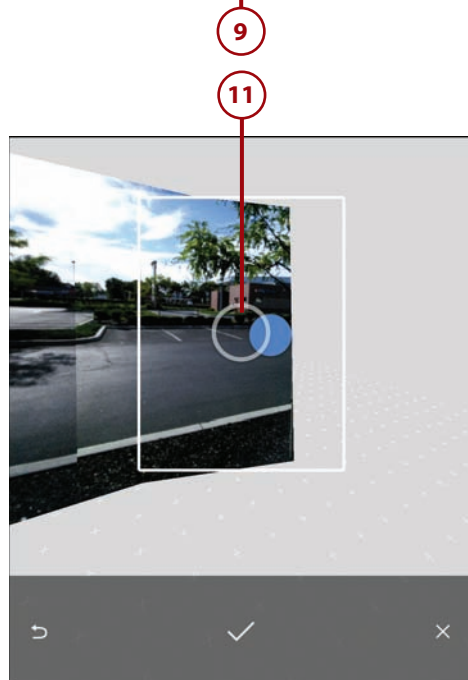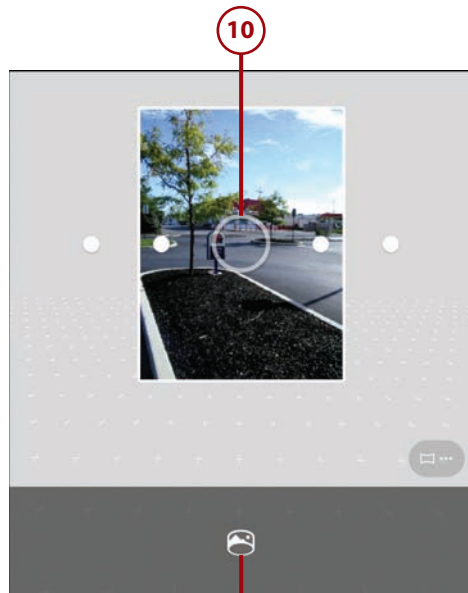


Take Photo Sphere (360 Panoramic) Pictures

Your tablet can take 360-degree panoramic pictures—or, as Google calls them, Photo Spheres. Photo Sphere pictures are achieved by taking multiple pictures in all directions around you and stitching them together in one large sphere image.

  1. Tap the Camera icon.
2. Swipe in from the left of the screen.
3. Tap Photo Sphere.
4. Move your tablet until the circle is over the blue dot. After you have done that, wait until you see other white dots appear.

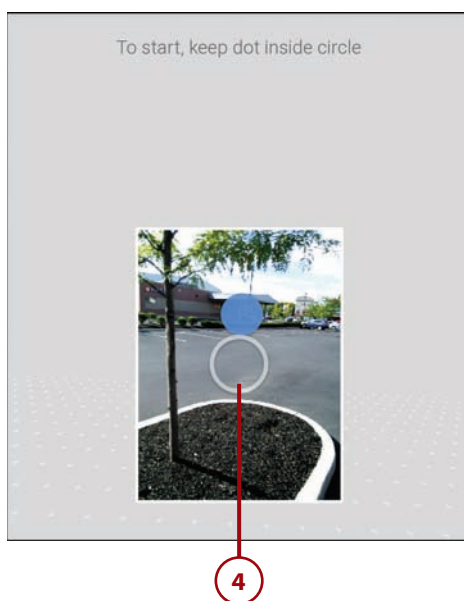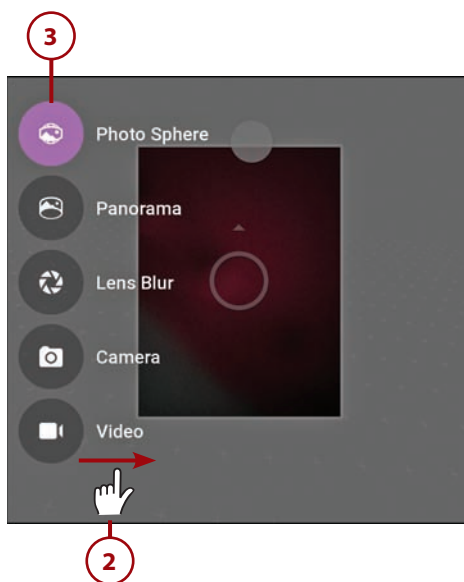

 
5. Slowly move your tablet around and guide the circle over the blue dots. Each time you line them up, another image is captured for your Photo Sphere.
6. When you have captured enough images, the images are stitched together in the background. You can view your Photo Sphere using the Photos app, which is covered later in this chapter.

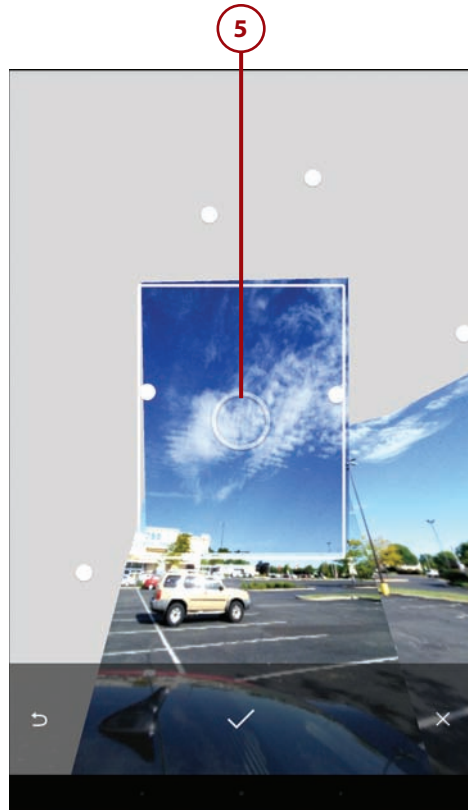



Take Lens Blur Pictures

When you take a Lens Blur picture, you can change the focus of the picture after the fact.

 1. Tap the Camera icon.
2. Swipe in from the left of the screen.
3. Tap Lens Blur.

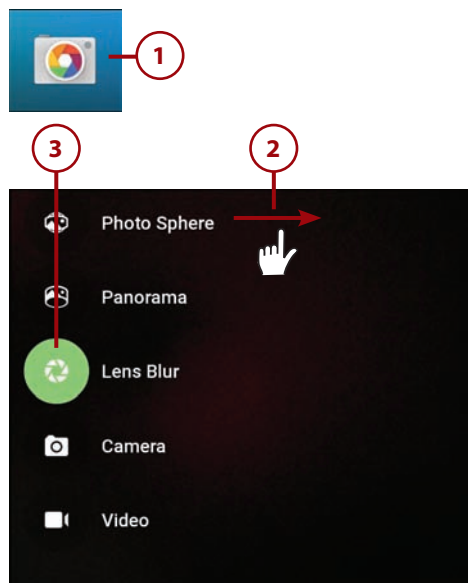

  4. Tap to start the Lens Blur capture.
5. Slowly move your tablet up as indicated by the arrow.
6. After the picture has completed, swipe in from the right of the screen to see the image and adjust the blur.

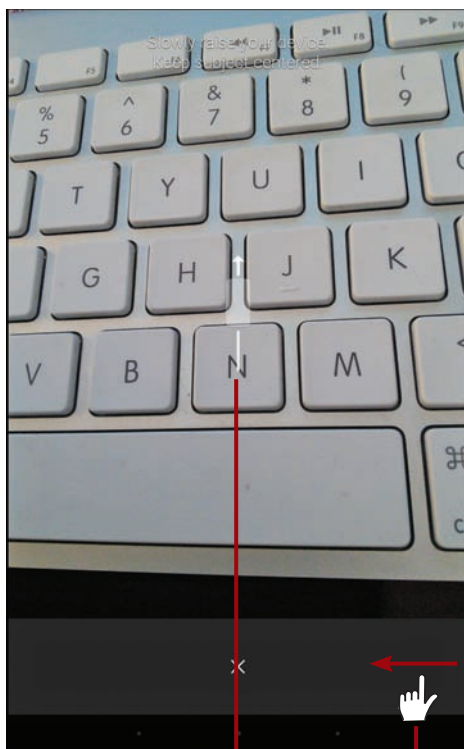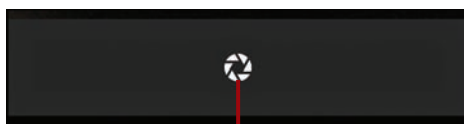

7. Tap to edit the blur.
8. Tap the picture where you want it to be the clearest.
9. Drag the slider to change how blurry the rest of the picture appears.
10. Tap Done to save your changes.



Viewing and Managing Your Photos


This section covers the photo-specific activities of the Photos app, such as viewing a Photo Sphere and editing photos. For more details about using the Photos app, read Chapter 2, “Audio, Video, and Movies.”

Navigate Photos


1. Tap to launch the Photos app.
2. Tap to open a photo.
3. Tap to open a Photo Sphere.

Where Are All My Photos and Videos Stored?

 When you open the Photos app, in addition to allowing you to view photos and videos on your device, it shows you a lot of other options, so what are they? If you tap Google+ you see your Google+ profile. If you tap Photos you see all photos and videos on your device and also ones that have previously been copied to your Google Cloud account from this and all other devices you own. If you tap Stories you access a feature of Google+ that creates stories from photos and videos that have previously been copied to your Google+ Cloud account. Tapping Albums shows you all albums on your device and in the Google+ Cloud. Tapping Auto Awesome shows you any photos and video that have been automatically backed up to your Google Cloud account and turned into little movies. (You can also manually create them.) Tapping Videos shows you only videos on your device and in your Google Cloud account.

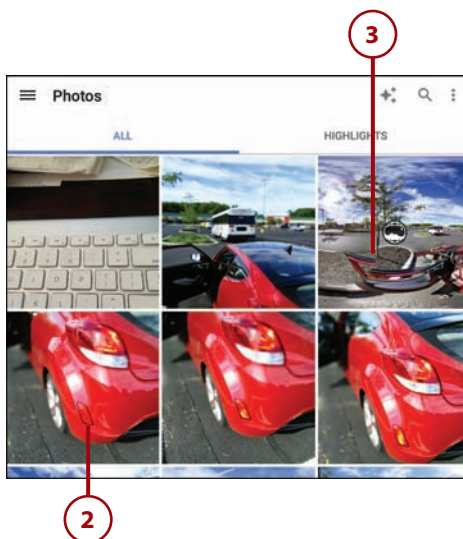

 
4. Swipe in from the left of the screen.
5. Select where you want to look for your photos, or just tap On Device to see only photos and videos you have recorded on this Android tablet.

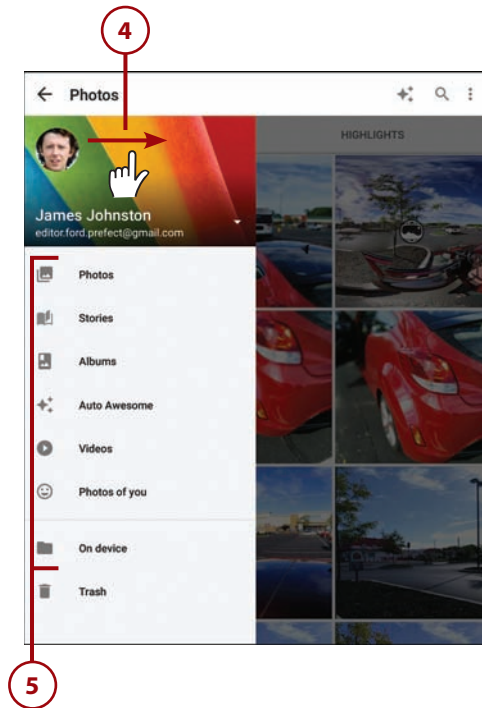

Delete Photo Albums

You can delete one or many photo albums but only if they were created on your Android tablet. You cannot delete albums created on your desktop computer that you can also see on your tablet.

 
1. While you have an album open, tap the Menu icon.
2. Tap Delete Album.

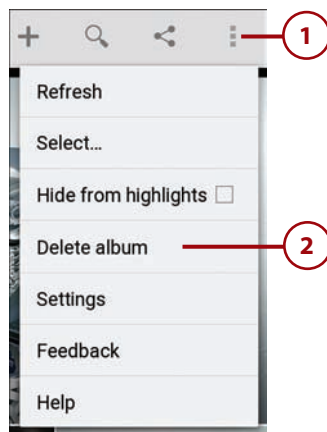

Review and Share Pictures


After you open a photo you can review it and share it with your friends.

 1. With a photo open, double-tap the picture to zoom in to the maximum zoom level. Double-tap again to zoom all the way back to 100 percent.
2. Use the pinch gesture to have a more controlled zoom in and zoom out.
3. Scroll left and right to see all the photos in the album.
4. Tap to share the picture with friends using Facebook, Twitter, Gmail, Email, Google+, Picasa (Google Photos), and more.
5. Tap the method you want to use to share the picture.

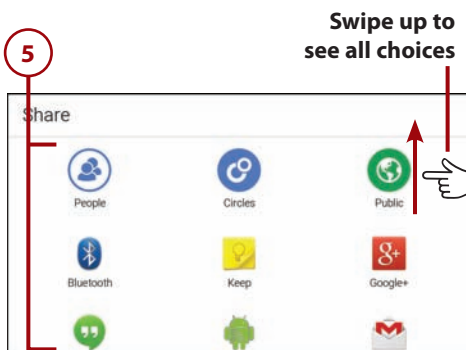

Use a Photo as Wallpaper or Contact Picture

 While viewing a photo, tap the Menu icon, and choose Set As. You can choose to use the photo as a contact picture for one of your contacts, or use it as the wallpaper on the Home screen.

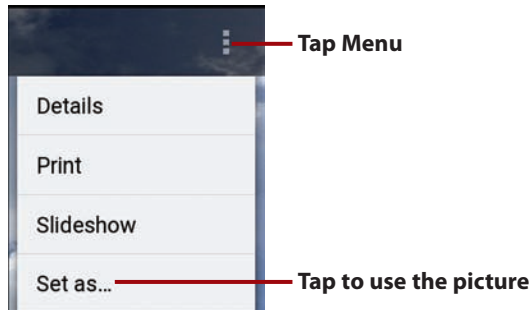

Can I Share a Photo Sphere?

You can share a Photo Sphere in one of two ways: as an interactive Photo Sphere where the viewer can move around your sphere interactively, or as a static image. Google+ is currently the only place that supports interactive Photo Sphere uploads. All other photo-sharing services and social networks, such as Facebook and Twitter, support only static images.

 
 
Edit Pictures

You can edit a picture by adding filters to it, enhancing it, or cropping it. These steps apply to still pictures, panoramic pictures, and Photo Sphere pictures.


1. With a photo open, tap the Edit icon.



2. Tap to let the Photos app automatically enhance your picture using changes it thinks will work best.
3. Tap to crop the picture. When cropping you can crop freely by dragging the crop box in any direction, choose to keep the original picture's aspect ratio as you drag the cropping box, or crop the picture always as a square image.
4. Tap to rotate the picture. When rotating the picture, you can rotate it freely using your fingers to make slight adjustments, or use icons to rotate it left or right.
5. Tap to add a filter to the picture.
6. Tap to fine-tune your picture by adjusting brightness, contrast, saturation, shadows, and so on.
7. Tap to do selective image tuning. This allows you to adjust selective parts of the image.
8. Tap to adjust the Structure and Sharpness of your picture.
9. Swipe right to see more picture adjustments.
10. Tap to make your picture look vintage.
11. Tap to add drama to your picture.
12. Tap to turn your picture into a black-and-white image.
13. Tap to enhance your picture to look like a High Dynamic Range (HDR) landscape.

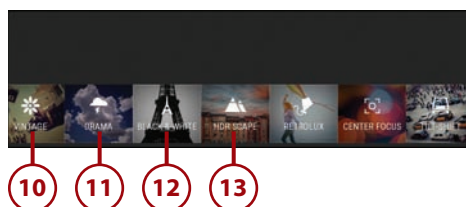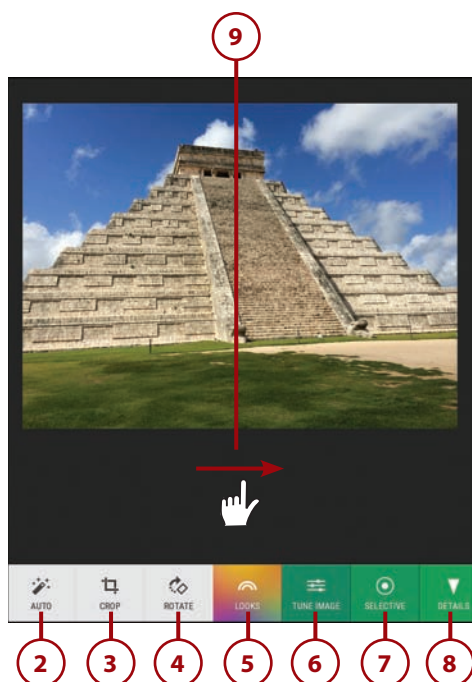

 14. Tap to enhance your picture using the Retrolux enhancement, which makes your photos look like they were taken with old camera equipment, complete with light streaks and scratches.
15. Tap to force focus on the center of your picture.
16. Tap to apply the Tilt Shift enhancement, which makes the objects in your picture look like they are miniature.
17. Swipe right to choose frames for your picture.
18. Touch to save your edited photo.

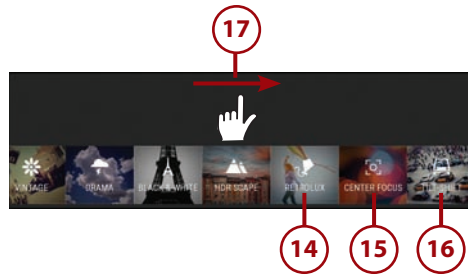


Get The Original Back

Even after you modify and save the picture, you can get the original picture back. To do this, edit the picture, tap the Menu icon, and choose Revert. The original version of the picture is loaded and the modified version is removed.

Picture Looks (Filters)

You can apply filters to your picture to change the way it looks.

 
1. Scroll left and right to see all the available filters (or looks).
2. Tap a look to preview how it changes your picture.
3. Tap the check mark icon to save your changes to the picture.

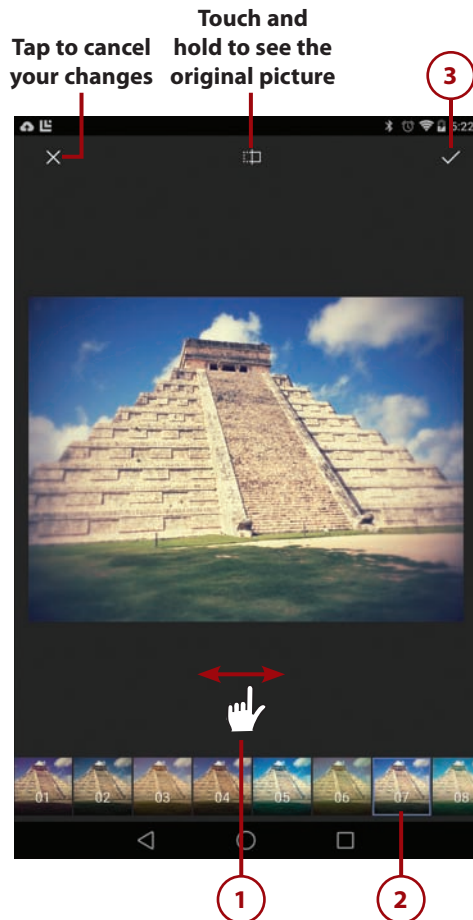

Tune Image

You can fine-tune the image by adjusting brightness, saturation, and contrast.

 
1. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
2. Swipe left and right over the setting value area to adjust the setting.
3. Tap the check mark icon to save your changes to the picture.

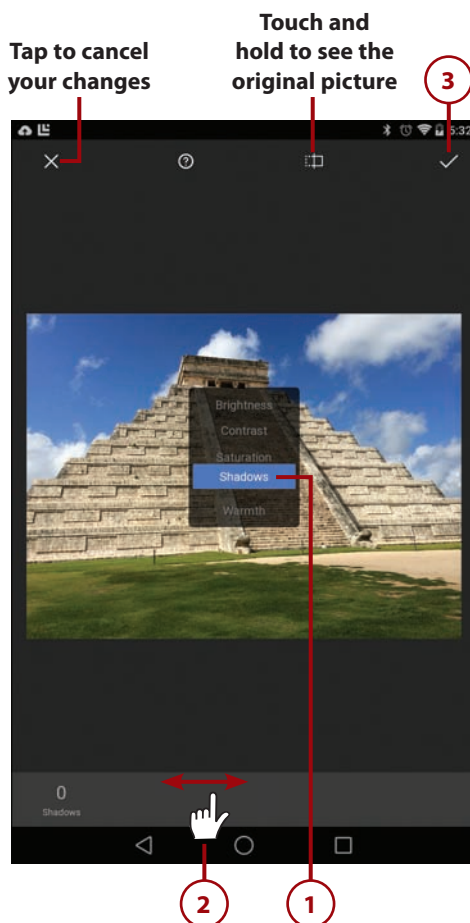

Selective Tune Image

You can fine-tune different parts of your image instead of the entire image at once.

 1. Tap the Add icon to add a tune point.
2. Drag the tune point to the part of your image you want to fine-tune. The tune point appears as a blue dot.
3. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
4. Swipe left and right over the setting value area to adjust the setting.
5. Tap the check mark icon to save your changes to the picture.

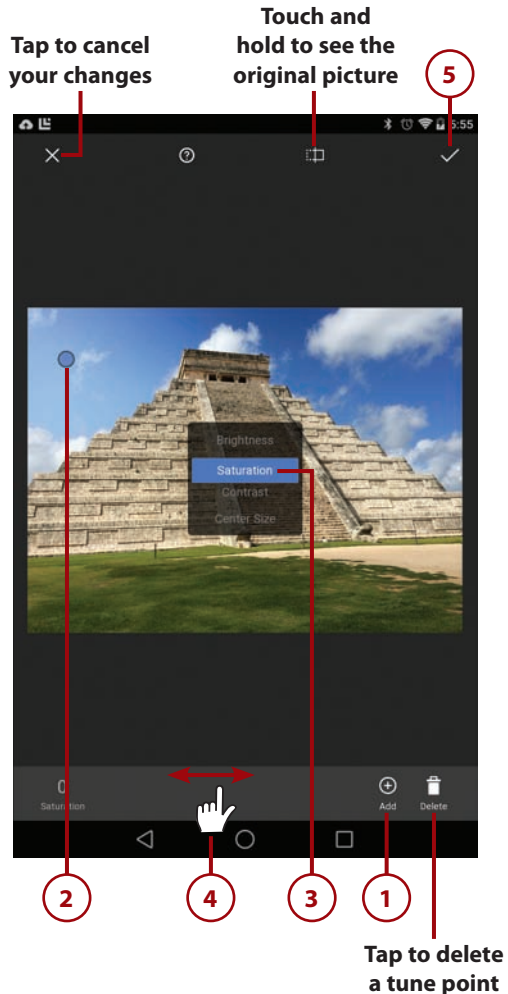


Adjusting Structure and Sharpness (Details)

1. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
2. Swipe left and right over the setting value area to adjust the setting.
3. Tap the check mark icon to save your changes to the picture.


Adjusting Structure and Sharpness

 To read more about the differences between the Structure and Sharpness enhancements, visit <http://blog.phaseone.com/how-to-enhance-details-with-structure/>.

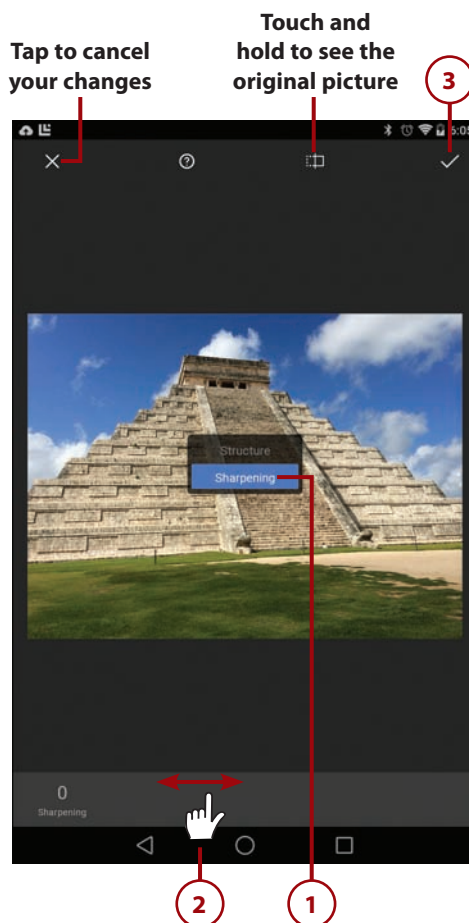


Vintage Pictures (Make Your Picture Look Aged)

 1. Tap Style to choose a style of aging you want to apply.
2. Tap Blur if you want to make your picture look blurry.
3. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
4. Swipe left and right over the setting value area to adjust the setting.
5. Tap the check mark icon to save your changes to the picture.

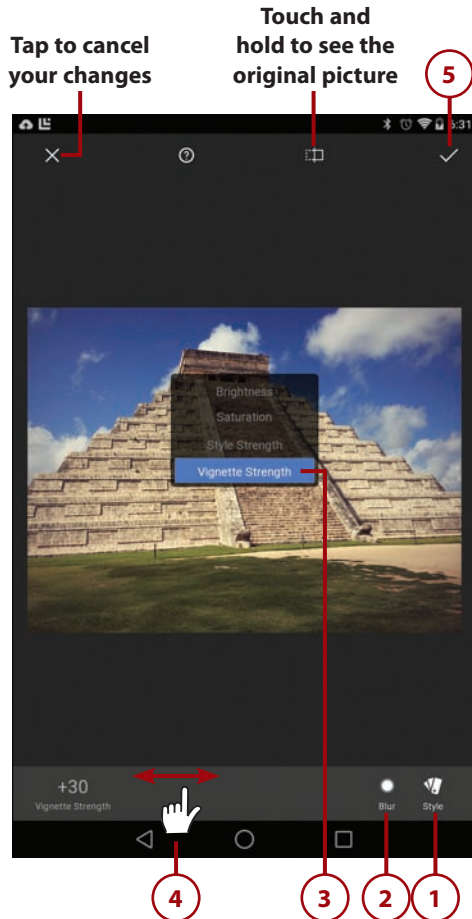

Pictures with Drama

 1. Tap Style to choose a style you want to apply.
2. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
3. Swipe left and right over the setting value area to adjust the setting.
4. Tap the check mark icon to save your changes to the picture.

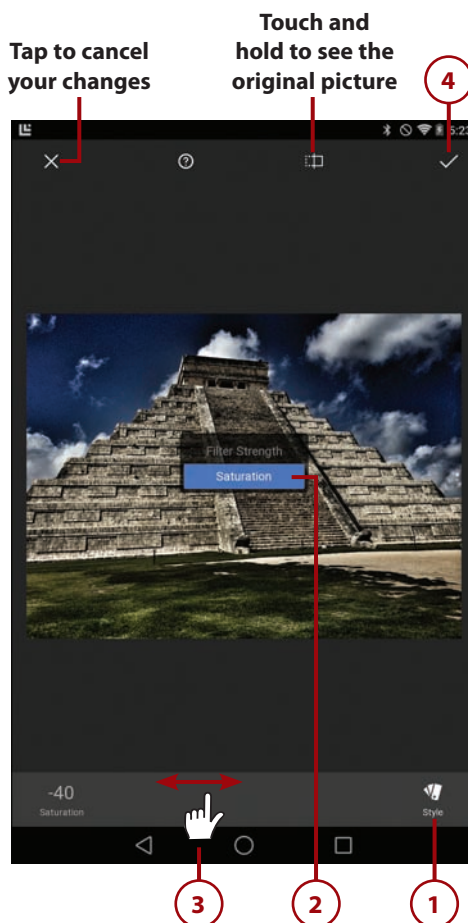


Black-and-White Pictures

1. Tap Style to choose a style you want to apply.
2. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
3. Swipe left and right over the setting value area to adjust the setting.
4. Tap the check mark icon to save your changes to the picture.

Color Filters and Black-and-White Pictures

 Because some colors look the same when converted to black and white, you can use color filters to correct this. Tap the check mark icon to save your changes. Read more about using color filters for black-and-white pictures at <http://www.photographymad.com/pages/view/using-coloured-filters-in-black-and-white-photography>.

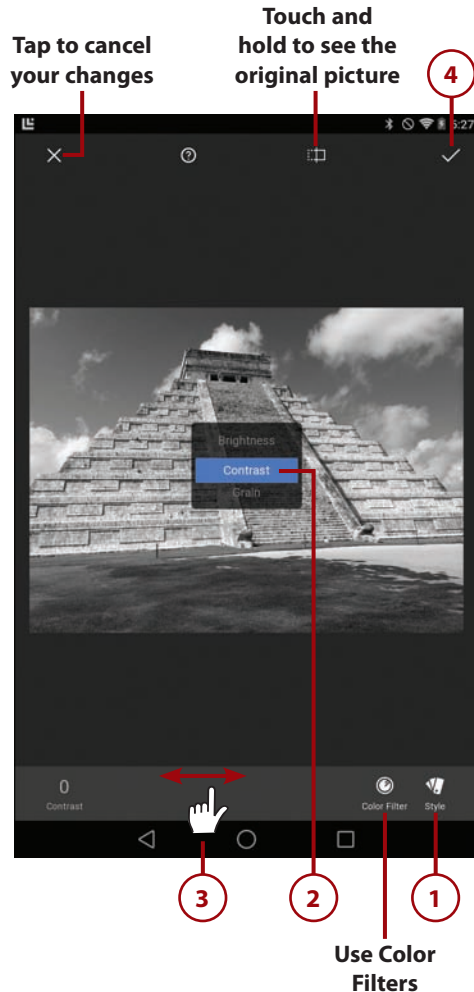


HDR Landscape Pictures

If your picture is of a landscape, you might want to enhance it using High Dynamic Range (HDR) processing.

1. Tap Style to choose a style you want to apply (for example, whether or not your picture has people in it).
2. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
3. Swipe left and right over the setting value area to adjust the setting.
4. Tap the check mark icon to save your changes to the picture.

HDR Landscape Pictures

 
Read more about using HDR Landscape processing at <http://www.lightstalking.com/getting-started-in-hdr-landscape-photography/>.

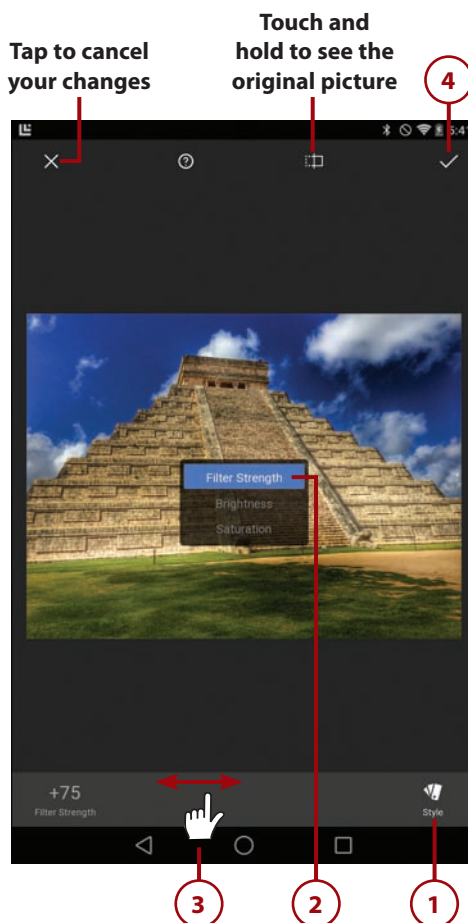

Retrolux Pictures

Give your picture the appearance of being from film that has been damaged.

 1. Tap Style to choose a style you want to apply. Tap the style multiple times to cycle through where the simulated defects should be added in your picture.
2. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
3. Swipe left and right over the setting value area to adjust the setting.
4. Tap the check mark icon to save your changes to the picture.

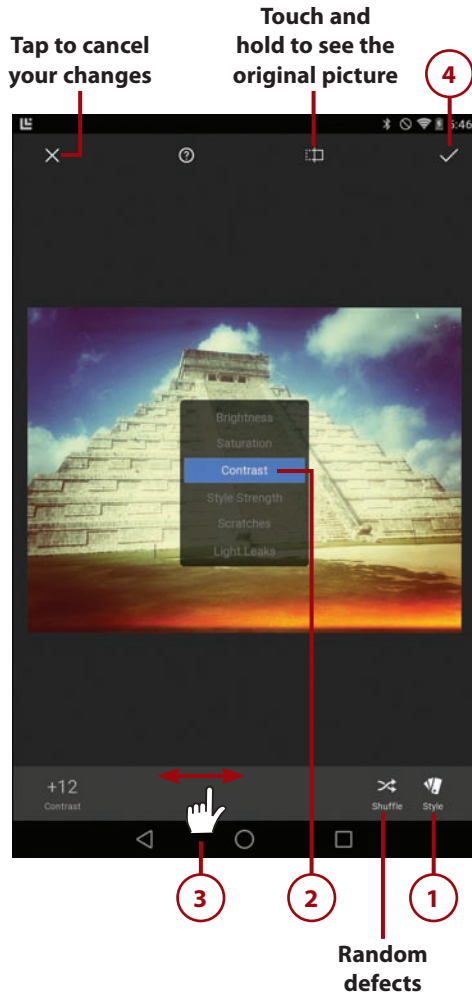

Center Focus

Give your picture the appearance of only being focused at the center.

1. Tap Style to choose a style you want to apply.
2. Tap Blur to choose if the blur is weak or strong.
3. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
4. Swipe left and right over the setting value area to adjust the setting.
5. Tap the check mark icon to save your changes to the picture.



 
Tilt Shift Pictures

The Tilt Shift effect makes the objects in your picture look like they are miniatures.

1. Tap Style to choose a style you want to apply.
2. Drag the blue dot to where you want the Tilt Shift effect to be applied.
3. Touch and hold on the picture and swipe up and down to see the different settings. Release when you see the setting you want to change.
4. Swipe left and right over the setting value area to adjust the setting.
5. Tap the check mark icon to save your changes to the picture.




Tilt Shift Pictures

To read more about the Tilt Shift effect, visit <http://www.tiltshift-photography.net>.

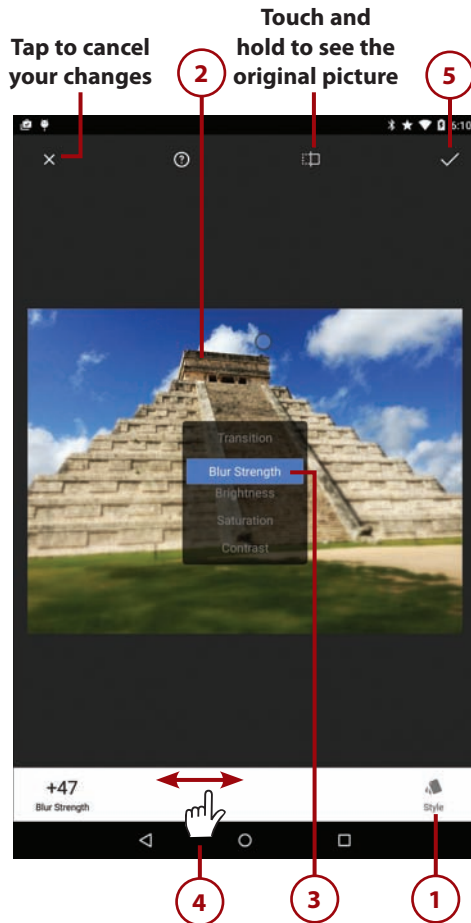

Modify Photos App Settings

   1. Tap the Menu icon.
2. Tap Settings.
3. Tap to manage automatically backing up your pictures and videos to your Google+ account.
4. Tap an account to edit settings for that specific Google account.
5. Check the box to see photos and videos you have stored in your Google Drive Cloud account, in Google Photos.
6. Check the box to show the location of where photos and videos were taken.
7. Tap to manage how Google handles location settings for this Google account.
8. Tap to let Google automatically enhance your pictures when they are uploaded.
9. Check the box to let Google create “auto awesome” images, movies, and stories from your photos and videos.
10. Check the box to allow your tablet to do the Auto awesome processing.
11. Check the box to let Google recognize your face in photos uploaded to Google by your friends, and prompt them to tag you.
12. Tap to save your changes and return to the previous screen.

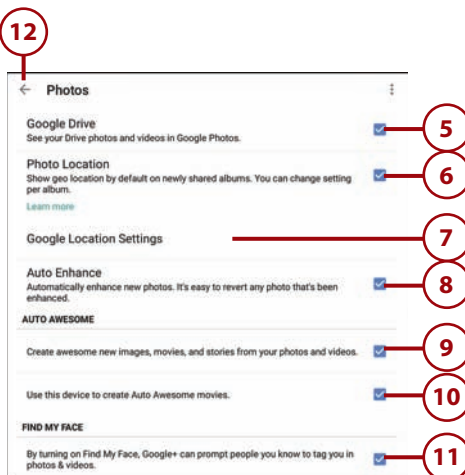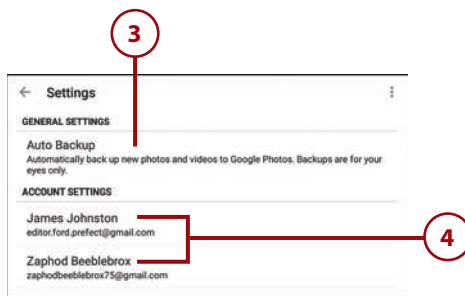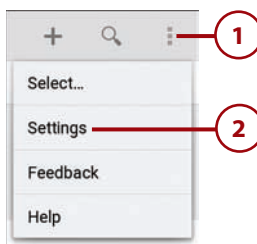


Managing Photos with Your Computer

When you connect your Android tablet to a computer, you can move pictures back and forth manually by using software such as Android File Transfer. If you have not yet installed Android File Transfer, follow the installation steps in the “Prologue.”


Manual Picture Management

This section covers moving pictures using the Android File Transfer app if you use a Mac or the media transfer functionality if you use Windows.

 1. Plug your tablet into your computer using the supplied USB cable.
2. Pull down the Notification Bar to reveal the USB Connected notification.

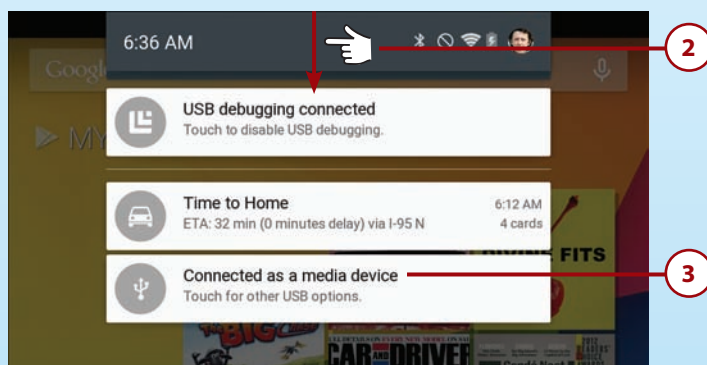

 3. Tap the Connected As a Media Device notification.

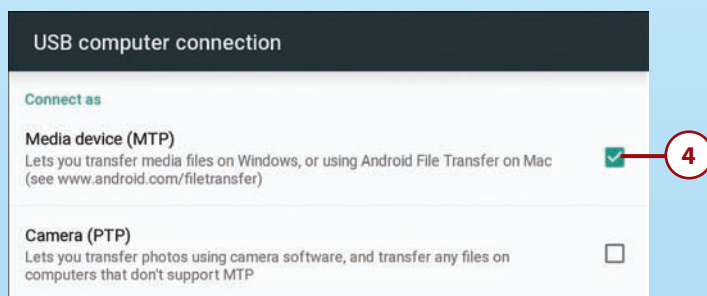

4. Tap to check the box next to Media Device (MTP) if it is not already checked.

 
Moving Pictures (Mac OSX)

After your tablet is connected to your Mac, the Android File Transfer app automatically launches, so you can browse the files on your tablet as well as move or copy files between your Mac and your tablet.

1. Browse to your tablet to locate the pictures.

Where Are the Pictures?

Pictures taken with the tablet's camera are in the DCIM\Camera folder. All other pictures are in a Pictures folder.

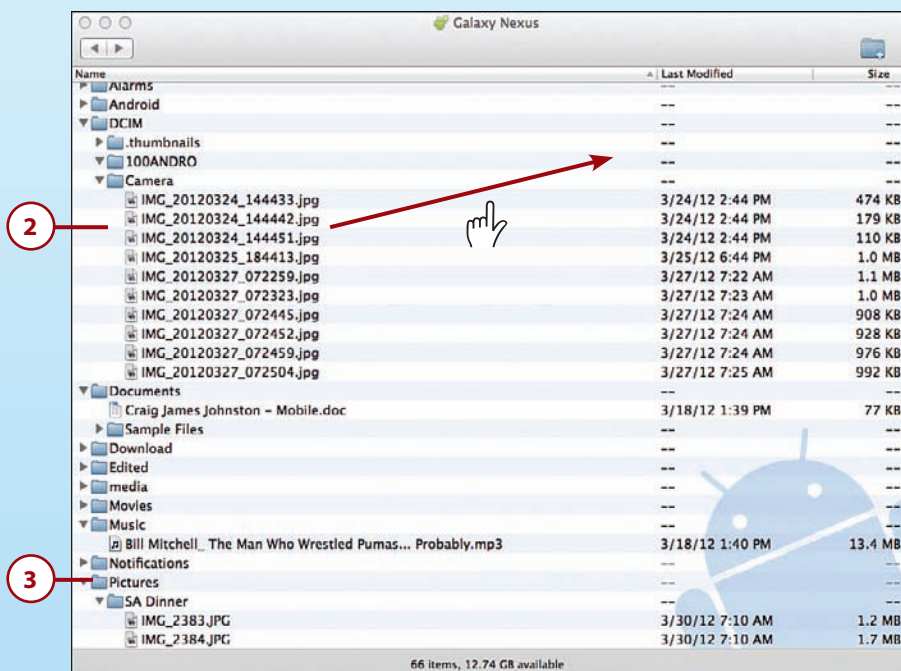

2. Save folders from your tablet to your Mac by dragging one or more pictures from your tablet to a folder on your Mac.
3. Create a new photo album on your tablet by dragging one or more pictures, or a folder filled with pictures, on your Mac to the Pictures folder on your tablet.

 
Moving Pictures (Windows)

After your tablet is connected to your Windows computer and mounted, you can browse the tablet just like any other drive on your computer.

1. Click if you want to import the pictures automatically.



2. Click to open an Explorer view and see the files on your tablet.

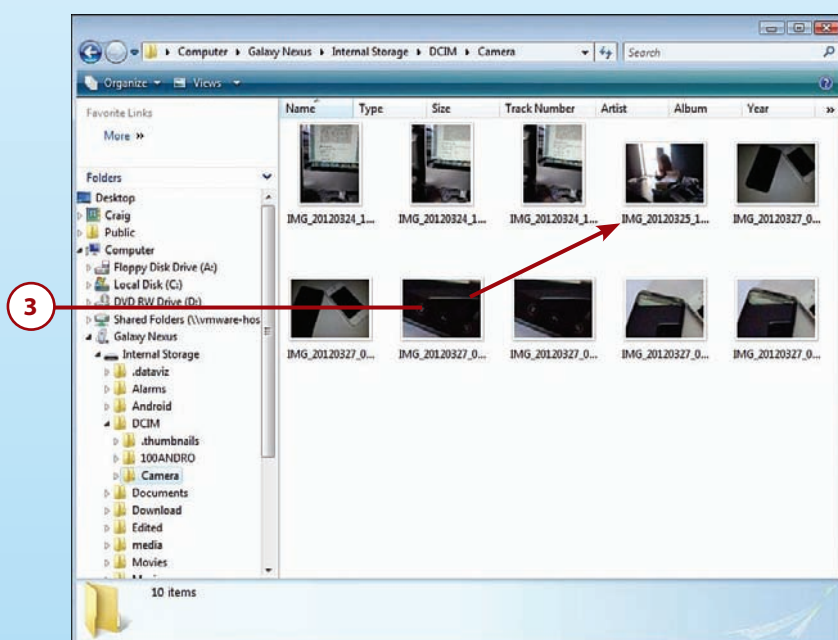

3. Save pictures from your tablet to your PC by dragging one or more pictures from your tablet to a folder on your PC.
4. Create a new photo album on your tablet by dragging one or more pictures, or a folder filled with pictures, on your PC to the Pictures folder on your tablet.

 
Where Are the Pictures?

Pictures taken with the tablet's camera are in the DCIM\Camera folder. All other pictures are in the Pictures folder.


Automatic Picture Management on a Mac

By setting your tablet to connect as a Camera, your Mac automatically opens iPhoto.

1. Plug your tablet into your computer using the supplied USB cable.
2. Pull down the Notification Bar to reveal the USB Connected notification.

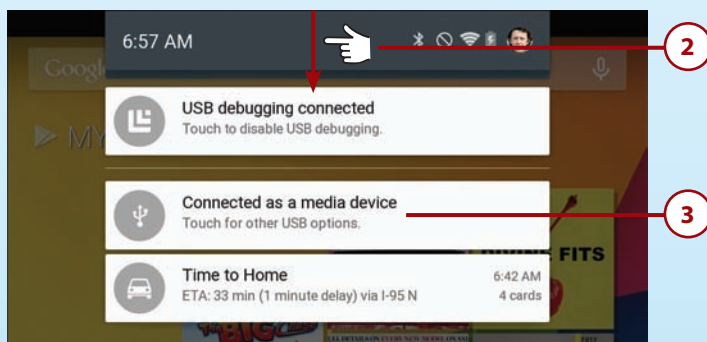

 3. Tap the Connected As a Media Device notification.

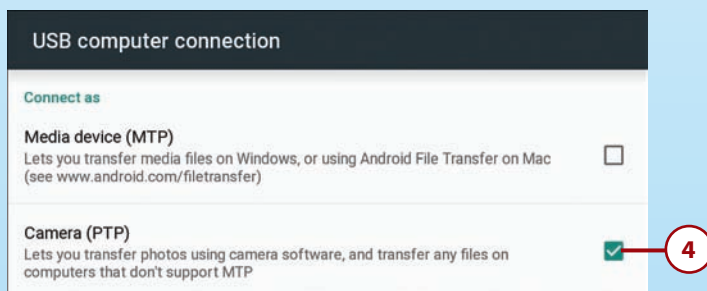

4. Tap to check the box next to Camera (PTP), if it is not already checked.

 


5. Your tablet appears in iPhoto under Devices so that you can import photos like you would with any other digital camera. In this example the tablet is a Nexus 7.


Synchronizing Pictures Using Your Google Cloud

You can synchronize pictures to your tablet from your computer without connecting your tablet to your computer. Just use your Google account's built-in cloud service. All photo albums that you create in the cloud are automatically synchronized to your tablet.


1. Log in to Google with your computer. Hover your mouse over the menu, and click Photos.

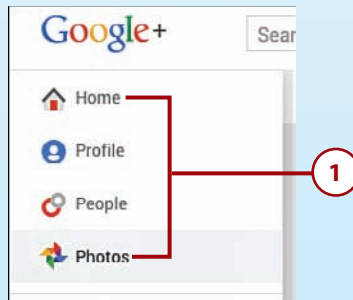

 2. Download all photos from a specific day by clicking the down arrow to the right of the date and selecting Download.

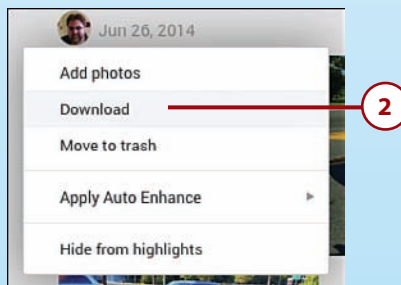

 3. Download a specific photo by opening the photo, clicking the More menu, and selecting Download Photo.

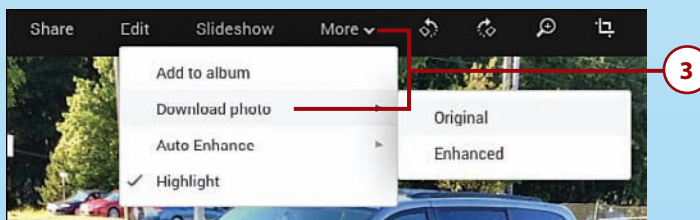

This page intentionally left blank

Index

Symbols

- 3.5mm headphone jack, 6
- 360 panoramic (Photo Sphere) pictures.
See also panoramic pictures
- sharing, 305
- taking, 298-299

A

- accelerometer, 7
- accented characters, typing, 23
- accessibility settings, customizing, 236-239
- accessing
 - Google Now, 181-183
 - previous/next websites in Chrome, 164
 - VPNs, 130
- accounts
 - adding, 41
 - determining what to synchronize, 47*
 - first-time setup, 11*
 - Samsung tablet, 43*
 - troubleshooting contact information, 45*
 - work email account, 42-48*
 - Google accounts
 - adding, 136-137
 - multiple accounts, 136-138
 - synchronizing, 138, 157
 - IMAP accounts, adding, 138-141
 - POP3 accounts, adding, 138-141
 - removing, 48
 - work email accounts
 - adding, 142-145
 - synchronizing contacts with, 42-48
- ActiveSync server, 45
- adaptive brightness, 242
- address bar (Chrome), entering data, 174
- addresses, Wi-Fi and, 125-126
- administration, Remote Security Administration, 46
- alarms (Clock app)
 - duration, 204
 - managing, 202-203
 - volume, 204
- Album tab (Google Play Music app), 77
- albums (music), filtering music by, 77
- albums (photo)
 - deleting, 303
 - navigating, 302-303
- alerts
 - Calendar app, expanding, 209
 - Google Now, configuring, 189
- All Access (Google Play Music app), 75
- Always-on VPNs, 132
- Android
 - blogs, 287
 - updating, 279-280

Android 5 (Lollipop), 12
 Android Central blog, 287
 Android File Transfer
 installing, 32-33
 moving pictures
 manually, 319-320
 Android Guys blog, 287
 Androinica blog, 287
 antennas (NFC), 56
 app folders
 creating, 18
 explained, 17
 Apple Mac OS X. *See* Mac OS X
 appointments. *See* events
 apps. *See also* names of specific apps
 buying
 configuring Google Wallet, 215-216
 from Google Play, 220-221
 closing, 283-284
 folders
 creating, 18
 explained, 17
 Galaxy App store, 225
 in-app purchases, 221
 installing from unknown sources, 225
 managing in Google Play, 222
 pinning, 245-247
 re-installing, 224
 sharing data, 188
 shortcuts
 creating, 17
 explained, 16
 switching between, 27-28
 uninstalling, 223
 updating, 223
 usage information, 245, 284-286
 arrow button, 8
 article mode (Play Newsstand app), 276
 artists, filtering music by, 77

Artists tab (Google Play Music app), 77
 attaching, inserting versus, 149
 attachments (Gmail app)
 adding, 149-150
 downloading, 157-160
 Autofill forms feature (Chrome), 174
 automatically updating apps, 223
 automatically uploading music, 74
 automatic picture management, 322
 automatic screen rotation, enabling/disabling, 237
 availability in corporate calendars, 211

B

Back button, 5, 19
 backing up photos/video, 98
 backward/forward scrolling on main screen (Calendar app), 205
 balance in Google Wallet, 260
 battery
 care and maintenance, 281
 optimizing, 281-282
 viewing battery usage, 281-282
 BCC (Blind Carbon Copy), 148
 beaming
 contact information via NFC, 57
 music between Android devices, 88
 birthdays in Calendar app, 208
 black-and-white pictures, 313
 blocking pop-up windows, 177

blogs, 287
 Bluetooth, 117
 customizing, 120
 disconnecting devices, 121
 Pairing Mode, 118
 pairing with, 118-119
 passkeys, 119
 profiles, 121
 radio, 7
 renaming devices, 120
 video, sharing, 96
 bookmarks
 Chrome, 169
 adding, 170
 deleting, 170
 editing, 170
 opening, 169-170
 renaming, 170
 saving, 170-171
 websites in, 164
 Internet web browser, 179
 books. *See* Play Books app
 brightness, adjusting, 201, 242
 browsers. *See* Chrome
 browsing history, clearing, 174
 buttons
 arrow button, 8
 Back button, 5, 19
 Home button, 5, 19
 Menu button, 5
 placement, 5
 power button, 7
 Recent Apps button, 5, 19, 27-28
 volume buttons, 7
 buying
 apps. *See* Google Play
 books, 265-266
 with Google Wallet app
 adding credit card info, 251-252
 adding loyalty cards, 254-257
 configuring, 215-216, 250, 258-259

- redeeming gift cards*, 253-254
 - Tap and Pay*, 252, 259
 - using at checkout*, 257-258
 - magazines and newspapers, 272-274
 - movies, 100-102
 - music, 71-72
 - TV shows, 103-104
- C**
- cable, synchronizing media, 87
 - caching music in Google Play Music app, 86
 - Calendar app
 - alerts, expanding, 209
 - configuring, 206-207
 - events. *See* events
 - first day of the week, choosing, 207
 - home time zones, 207
 - main screen, 205
 - hiding calendars*, 206
 - scrolling backward/forward*, 205
 - selecting views*, 205
 - Quick Responses
 - editing*, 207
 - sending*, 209
 - ringtones, 207
 - synchronizing calendars, 208
 - Camera app
 - displaying settings, 293-294
 - focusing, 295
 - navigating, 289-291
 - pinch to zoom, 292
 - resolution settings, 294
 - taking pictures, 291, 295
 - Lens Blur pictures*, 299-301
 - panoramic pictures*, 296-297
 - Photo Sphere (360 panoramic) pictures*, 298-299
 - while recording video*, 89
 - video
 - customizing settings*, 90-92
 - format*, 294
 - recording*, 88-89
 - zooming in/out*, 292
 - cameras. *See also* Camera app; photos
 - front camera, 4
 - LED camera flash, 6
 - rear camera, 6
 - capitalizing letters, 22
 - Captions, enabling/disabling, 237
 - CC (Carbon Copy), 148
 - center focus pictures, 316
 - certificates, installing, 244
 - checking accounts, adding info to Google Wallet app, 251-252
 - Chrome
 - address bar, entering data, 174
 - Autofill forms feature, 174
 - bookmarks. *See* bookmarks, Chrome
 - browser tabs, viewing, 167
 - browsing history, 171-172
 - clearing*, 174
 - content protection, enabling/disabling, 176
 - cookies, 177
 - crash reports, sending, 175
 - customizing settings, 166, 172-179
 - Google Translate, enabling/disabling, 176
 - Incognito browser tab, 165
 - Internet web browser versus, 179
 - JavaScript, enabling/disabling, 176
 - landscape orientation, 167
 - launching, 164
 - passwords, 174
 - personal information, security and, 175
 - pinch to zoom feature, 168
 - pop-up blocking, 177
 - portrait orientation, 167
 - Privacy settings, 174
 - Reduce Data Usage, enabling/disabling, 178
 - resizing text, 176
 - web addresses, typing, 164
 - websites. *See* websites
 - zooming in/out screen, 168
 - cleaning tablet exterior, 286
 - clearing browsing history in Chrome, 174
 - clicking email addresses in Chrome, 178
 - client certificates, 45
 - Clock app
 - alarms
 - duration*, 204
 - managing*, 202-203
 - volume*, 204
 - configuring, 204
 - navigating, 201
 - screen, dimming, 201
 - snooze period, setting, 204
 - closing apps, 283-284
 - cloud
 - streaming music from, 72
 - synchronizing pictures with, 323
 - color coding events (Calendar app), 205
 - color filters for black-and-white pictures, 313
 - color inversion, 239
 - color space correction, 239

- commands (Google Now), 184
 - voice commands, 185-186
- compass, 7
- composing email with Gmail app, 148
- configuring. *See also* customizing
 - Calendar app, 206-208
 - Camera app, 293-294
 - Clock app, 204
 - Google Maps, 189-191, 194-195
 - Google Music Manager, 36-39
 - Google Now, 184-189
 - Google Play, 224
 - Google Wallet, 215-216, 250, 258-259
 - initial setup, 8-11
 - guest users, adding, 30*
 - restricted profiles, adding, 31*
 - users, adding, 28-29*
 - Lock screen settings, 13
 - Photos app, synchronization settings, 318
 - Quick Settings bar, 15-16
 - Smart Lock, 246
- connecting
 - to Bluetooth devices, 117
 - Bluetooth profiles, 121*
 - customizing, 120*
 - pairing devices, 118-119*
 - passkeys, 119*
 - to VPNs, 128-129
 - to Wi-Fi, 121-123
 - troubleshooting connections, 123*
 - WPS network connections, 123*
- contacts
 - adding, 49
 - accounts, 41-48*
 - email, 53-54*
 - Home screen, 64-67*
 - manually, 54-55*
 - vCards, 55-56*
 - beaming info via NFC, 57
 - customizing settings, 58
 - displaying/hiding, 60-61
 - editing, 50-51
 - enabling/disabling
 - Google Now access, 189
 - exporting, 67
 - groups, creating, 58-60
 - importing, 67
 - inviting to events in
 - Calendar app, 210-211
 - joining, 61-63
 - marking as favorites, 49
 - navigating, 48-49
 - photos, adding, 51-53
 - removing, 48
 - separating, 63
 - sharing, 56, 67
 - shortcuts, adding to
 - Home screen, 64-65
 - synchronizing from work
 - email account, 42-48
 - troubleshooting, 45
- Containers, 42
- content filtering level, configuring in Google Play, 224
- content protection (Chrome), enabling/disabling, 176
- context menus, 27
- conversations (Gmail), 151
 - muting, 152
- cookies, Chrome and, 177
- copying
 - text, 26
 - videos from computer
 - Mac OSX, 108*
 - Windows OS, 107*
- corporate calendars, privacy and availability, 211
- crash reports (Chrome), 175
- credit cards
 - adding info to Google Wallet app, 251-252
 - from Google, 259
- cropping photos, 53, 308
- customizing. *See also* configuring
 - accessibility settings, 236-239
 - Bluetooth, 120
 - Chrome settings, 166, 173-179
 - Contacts app settings, 58
 - display settings, 241-242
 - Exchange settings, 159
 - Gmail settings, 154-160
 - Google Location Settings, 100
 - Google Play Music app settings, 85-86
 - keyboard, 231-232
 - language, 235-236
 - notifications, 239-241
 - Photos app settings, 97-99
 - playback in Google Play Music app, 87
 - Play Books app, 268-269
 - Play Movies & TV app settings, 106
 - POP/IMAP settings, 158
 - security settings, 243-245
 - sound settings, 239-240
 - video settings in Camera app, 90-92
 - wallpaper. *See* wallpaper
 - YouTube app settings, 114

D

- data usage, determining in apps, 245, 284-286
- date
 - setting, 199-200
 - synchronizing, 200
- Daydream mode, 242
- DCIM\Camera folder, 320-322
- debit cards, adding info to Google Wallet app, 251-252
- deleting
 - accounts, 48
 - bookmarks in Chrome, 170

- events from Calendar app, 212
- photo albums, 303
- playlists in Google Play Music app, 80
- shortcuts, 66
- video in Photos app, 97
- VPNs, 130
- widgets, 234
- Device Administrators, 244
- dictation mode, 24
- dictionary
 - adding words to, 22
 - word suggestions from, 21
- digital zoom feature (Camera app), 292
- dimming screen (Clock app), 201
- directions, getting via Google Maps, 192-194
- disabling
 - adaptive brightness, 242
 - automatic screen rotation, 237
 - Captions, 237
 - color inversion, 239
 - color space correction, 239
 - Daydream mode, 242
 - High Contrast Text, 237
 - large text, 237
 - magnification gestures, 237
 - Screen Pinning, 245-247
 - Smart Lock, 243
 - spoken passwords, 237
 - Switch Access, 237
 - TalkBack, 237
 - text-to-speech, 238
 - Trust Agents, 245
- disconnecting Bluetooth devices, 121
- disliking/liking music in Google Play Music app, 82
- displaying. *See also* viewing calendars in Calendar app, 206

- contacts, 60-61
- keyboard, 20
- display settings, customizing, 241-242
- docking pins, 7
- double-tapping, 20
- doubleTwist app, synchronizing media with, 87
- downloading
 - apps from Google Play
 - free apps*, 218-219
 - permissions*, 219
 - viewing downloaded apps*, 216
 - books in Play Books app, 271
 - email attachments in Gmail app, 157-160
 - magazines and newspapers in Play Newsstand app, 274
 - music from Google Play Music app, 75
 - viewing download progress, 102
- dragging icons, 19
- dramatic picture style, 312
- Dual Persona app, 42

E

- ebooks. *See* Play Books app
- editing
 - bookmarks in Chrome, 170
 - contacts, 50-51
 - events in Calendar app, 212
 - pictures, 305-307
 - playlists in Google Play Music app, 79-80
 - Quick Responses in Calendar app, 207
 - text, 25
 - VPNs, 130

- email. *See also* Gmail app
 - adding contacts from, 53-54
 - attachments
 - adding*, 149-150
 - downloading*, 157-160
 - BCC, 148
 - CC, 148
 - composing, 148
 - Email app, adding POP3 or IMAP accounts, 138
 - important emails, determining, 153
 - marking as spam, 153
 - notifications, 156-160
 - printing, 153
 - reading, 151-152
 - RTF, 151
 - security, 141
 - sending, 148
 - signatures, 157-159
 - text, sizing, 155
 - video, sharing, 96
- email accounts
 - removing, 48
 - synchronizing to
 - Contacts app, 42-48
- email addresses, clicking in Chrome, 178
- Email app, 135
- enabling
 - adaptive brightness, 242
 - automatic screen rotation, 237
 - Captions, 237
 - color inversion, 239
 - color space correction, 239
 - Daydream mode, 242
 - High Contrast Text, 237
 - large text, 237
 - magnification gestures, 237
 - NFC, 133
 - Screen Pinning, 245-247
 - Smart Lock, 243
 - spoken passwords, 237
 - Switch Access, 237
 - TalkBack, 237
 - text-to-speech, 238
 - Trust Agents, 245

encryption, 244
 enhancing pictures, 306-307
 entering text
 dictation, 24
 gestures, 24
 keyboard, 21-23
 equalizer (Google Play Music app), 87
 events (Calendar app)
 adding, 210-211
 color coding, 205
 corporate calendar
 privacy, 211
 default length, setting, 207
 deleting, 212
 editing, 212
 inviting contacts, 210-211
 naming, 210
 reminders, 211
 repeating, 211
 responding to invitations, 212
 Exchange settings, customizing, 159
 exporting contacts, 67
 exterior of tablet, cleaning, 286

F

Facebook, sharing video, 96
 fast forwarding/rewinding music in Google Play Music app, 82
 video in Photos app, 95
 favorites, marking contacts as, 49
 Favorites Tray, 18
 filtering level, configuring in Google Play, 224
 filters for pictures, 307
 color filters, 313
 finding
 books, 265
 music, 70
 wallpaper, 230

 websites, 164
 words on web pages, 164
 fine-tuning pictures, 308-309
 first day of the week (Calendar app), choosing, 207
 first-time setup, 8-11
 Flowing Text (Play Books app), 270
 focusing pictures, center focus, 316
 focus ring indicator (Camera app), 295
 folders
 app folders
 creating, 18
 explained, 17
 DCIM\Camera, 320-322
 music folders, uploading music from, 74
 Pictures, 320-322
 font size, setting, 242
 foreign currencies, purchasing apps from Google Play with, 220
 forward/backward scrolling in main screen (Calendar app), 205
 free apps, installing, 218-219
 free music, 71
 front camera, 4
 full screen, viewing video in, 95

G

Galaxy App store (Samsung), 225
 Gallery app, 100. *See also* Photos app
 General Settings screen (Gmail app), 155
 genre, filtering music by, 77
 Genres tab (Google Play Music app), 77
 gestures, 19

double-tapping, 20
 dragging, 19
 keyboard, 24
 magnification gestures, 237
 pinching, 20
 sliding, 20
 swiping, 20
 tapping, 19
 touching and holding, 19
 gift cards, redeeming in Google Wallet app, 253-254
 Global Positioning System (GPS), 7
 Gmail app, 135
 attaching versus inserting, 149
 BCC, 148
 CC, 148
 conversations, 151
 muting, 152
 customizing settings, 154-160
 Exchange settings, 159
 POP/IMAP settings, 158
 email attachments
 adding, 149-150
 downloading, 157-160
 email messages
 composing, 148
 determining important, 153
 marking as spam, 153
 printing, 153
 reading, 151-152
 sending, 148
 starred, 147
 General Settings screen, 155
 labels, 147
 manual configuration, 139
 navigating, 145-147
 notifications, 156-160
 POP3 and IMAP accounts, adding, 138-140
 Priority Inbox, 156
 RTF, 151
 signatures, 157-159

- synchronizing work email
 - account, 143-144
 - text, sizing, 155
 - usernames and passwords, 140
 - video, sharing, 96
 - work email accounts, adding, 142-145
- Google+, sharing video, 96
- Google accounts
 - adding, 136-137
 - multiple accounts, 136-138
 - synchronizing, 138, 157
- Google cloud
 - streaming music from, 72
 - synchronizing pictures with, 323
- Google credit cards, ordering, 259
- Google Chrome. *See* Chrome
- Google Earth, launching, 191
- Google Location Settings, customizing, 100
- Google Maps
 - configuring, 189-191, 194-195
 - directions, getting, 192-194
 - launching, 190
 - offline usage, 195-197
 - options, viewing, 190
 - public transportation options, viewing, 192
 - voice command, 190
- Google Music Manager
 - adding existing music to Google Play Music app, 73-74
 - configuring, 36-39
 - installing
 - for Mac OS X, 33-34
 - for Windows, 35
- Google Now
 - accessing, 181-183
 - commands, 184
 - configuring, 184-189
 - languages, selecting, 185
 - searching, 183
 - voice commands, 185-186
- Google Photos, synchronizing pictures via Photos app, 318
- Google Play, 216
 - configuring, 224
- Google Wallet, configuring, 215-216
- installing apps
 - free apps*, 218-219
 - permissions*, 219
 - re-installing apps*, 224
 - uninstalling apps*, 223
- managing apps, 222
- movies, buying/renting, 100-102
- navigating, 216-218
- purchasing apps, 220-221
 - foreign currencies*, 220
- re-installing apps, 224
- TV shows, buying, 103-104
- uninstalling apps, 223
- updating apps, 223
- viewing downloaded/purchased apps, 216
- wishlist, 217
- Google Play Music app, 69
 - adding existing music to, 73
 - albums, filtering music by, 77
 - Album tab, 77
 - artists, filtering music by, 77
 - Artists tab, 77
 - caching music, 86
 - changing views, 77
 - controlling playback, 82-84, 87
 - customizing, 85-86
 - downloading music from, 75
 - fast forwarding/rewinding music, 82
 - finding music, 70
 - free music, 71
 - genres, filtering music by, 77
 - Genres tab, 77
 - graphic equalizer, 87
 - Instant Mixes, 80
 - creating*, 81
 - launching, 70
 - liking/disliking music, 82
 - listening to music
 - offline*, 85
 - while working*, 84
 - next/previous songs, jumping to, 82
 - Notification bar, 84
 - pausing music, 82
 - playback, customizing, 87
 - playing music from, 75-76
 - playlists. *See* playlists
 - previous/next songs, jumping to, 82
 - purchasing music, 71-72
 - queues, 83
 - repeating music, 82
 - rewinding/fast forwarding music, 82
 - sharing music on social media, 83
 - shuffling music, 82
 - song information, viewing, 77
 - songs, filtering music by, 77
 - Songs tab, 77
- Google Translate, enabling/disabling, 176
- Google Wallet
 - changing PIN, 259
 - configuring, 215-216, 250, 259
 - credit card info, adding, 251-252
 - gift cards, redeeming, 253-254
 - installing, 249
 - loyalty cards, adding, 254-257
 - notifications, 259
 - payment methods, adding, 71, 101, 104

sending and receiving money, 260
 Tap and Pay, 252, 259
 using at checkout, 257-258
 Google Wallet Balance, 260
 Google website, 287
 graphic equalizer (Google Play Music app), 87
 grid pattern in videos, 90
 groups, creating contact groups, 58-60
 guest users, adding, 30
 gyroscope, 7

H

Hall Sensor, 7
 HDR landscape pictures, 314
 headphone jack, 6
 help, resources for, 287
 hidden networks, adding, 122
 hiding/displaying
 calendars, 206
 contacts, 60-61
 high contrast, enabling/disabling, 189
 High Contrast Text, 237
 High Dynamic Range (HDR) landscape pictures, 316
 history, Chrome browsing history, 171-172
 holidays in Calendar app, 208
 home address, configuring in Google Maps, 189, 195
 Home button, 5, 19
 Home screens, 14-18
 contacts, adding to, 64-65
 widgets
 adding, 233-234
 moving, 234
 removing, 234
 resizing, 235
 home time zones (Calendar app), 207

I

icons
 dragging, 19
 Launcher icon, 18
 notification icons, 14
 tapping, 19
 touching and holding, 19
 images. *See* icons; photos; wallpaper
 IMAP accounts, adding, 138-141
 IMAP settings, customizing, 158
 important emails, Gmail's determination of, 153
 importing contacts, 67
 in-app purchases, 221
 Incognito browser tab (Chrome), 165
 inserting, attaching versus, 149
 Instagram, sharing video, 96
 installing
 Android File Transfer, 32-33
 Android updates, 279-280
 apps
 from unknown sources, 225
 re-installing, 224
 uninstalling apps, 223
 certificates, 244
 free apps, 218-219
 Google Music Manager
 for Mac OS X, 33-34
 for Windows, 35
 Google Wallet, 249
 Play Newsstand app, 271
 Instant Mixes (Google Play Music app), 80
 creating, 81, 83
 Internet web browser, 179
 invitations to events
 for contacts, 210-211
 responding to, 212
 IP addresses, Wi-Fi and, 125-126

J

jacks, 3.5mm headphone jack, 6
 JavaScript, enabling/disabling in Chrome, 176
 joining contacts, 61-63

K

keyboard, 21-23
 accented characters, typing, 23
 customizing, 231-232
 gestures, 24
 landscape keyboard, 23
 quick tips, 21
 Shift key, 22
 showing, 20
 Symbols key, 22

L

labels (Gmail), 147
 landscape keyboard, switching to, 23
 landscape orientation (Chrome), 167
 landscape pictures, 316
 language
 customizing, 235-236
 selecting via Google Now, 185
 large text, enabling/disabling, 237
 Launcher icon, 18
 LED camera flash, 6
 Lens Blur pictures, taking, 299-301
 letters, capitalizing, 22
 light sensor, 4
 liking/disliking music in Google Play Music app, 82
 links, touching and holding in Chrome, 179

- listening to music
 - Google Play Music app, 75-76
 - offline, 85
- Listen Now screen (Google Play Music app), 75
- location information access (websites), enabling/disabling in Chrome, 177
- location settings, customizing, 100
- location tracking, enabling/disabling, 188
- locking tablet, 243
- Lock screen
 - notifications on, 13
 - settings on, 13
 - unlocking, 12
 - VPN lock screen PINs, 127-128
- loyalty cards, adding in Google Wallet app, 254-257

M

- MAC addresses, Wi-Fi and, 125-126
- Mac OS X
 - automatic picture management, 322
 - manual picture management, 320
 - videos, copying from computer, 108
- magazines (Play Newsstand app), 271
 - article mode versus page mode, 276
 - downloading, 274
 - installing, 271
 - launching, 272
 - reading, 274-275
 - subscribing, 272-274
- magnification gestures, 237

- main screen
 - Calendar app, 205
 - hiding calendars*, 206
 - scrolling backward*, 205
 - selecting views*, 205
 - YouTube app, 109
- maintenance
 - Android, updating, 279-280
 - apps
 - closing*, 283-284
 - determining data usage*, 284-286
 - battery, 281
 - battery care tips*, 281
 - viewing battery usage*, 281-282
 - cleaning tablet exterior, 286
- managing
 - alarms (Clock app), 202-203
 - apps in Google Play, 222
- manual picture
 - management, 319
 - Mac OS X, 320
 - Windows, 321
- manually adding contacts, 54-55
- manually checking for updates, 280
- manually closing apps, 284
- manually configuring email, 139
- manually joining contacts, 61-63
- manually separating contacts, 63
- maps. *See* Google maps
- marking email as spam with Gmail app, 153
- MDM (Mobile Device Management), 42
- meetings. *See* events
- memory, closing apps that use too much, 283-284
- Menu button, 5

- Menu icon, 26
- menus, 26-27
- microphone, 6
- Micro-USB port, 6
- Miracast, 242
- Mobile Device Management (MDM), 42
- money, sending and receiving with Google Wallet, 260
- movies
 - buying, 100-102
 - copying from computer
 - Mac OS X, 108
 - Windows OS, 107
 - playing full screen, 112
 - renting, 100-102
 - synchronizing with doubleTwist app, 87
- moving
 - pictures
 - automatic picture management*, 322
 - manually*, 319-321
 - widgets, 234
- multiple open tabs in Chrome, 172
- multiple videos, sharing, 96
- music. *See also* Google Play Music app
 - beaming between Android devices, 88
 - listening to
 - offline*, 85
 - while working*, 84
 - sharing on social media, 83
 - streaming from cloud, 72
 - synchronizing with doubleTwist app, 87
- music folders, uploading music from, 74
- muting conversations (Gmail app), 152
- My Android Tablet book site, 287

N

naming

- Bluetooth devices, 120
- bookmarks in Chrome, 170
- events in Calendar app, 210

Near Field Communication.
See NFC

networks

- NFC
 - defining, 132
 - enabling, 133
- VPNs. *See* VPNs
- Wi-Fi. *See* Wi-Fi
- WPS networks, Wi-Fi connections, 123

newspapers (Play

- Newsstand app), 271
 - article mode versus page mode, 276
 - downloading, 274
 - installing, 271
 - launching, 272
 - reading, 274-275
 - subscribing, 272-274

next/previous songs,
jumping to, 82

NFC (Near Field

Communication), 7, 56,
249

contacts

- beaming between devices, 57
- exporting, 67
- importing, 67

defining, 132

enabling, 133

music, beaming between devices, 88

notes, marking in Play Books app, 270

Notification Bar, 14, 84

notification icons, 14

notifications

- customizing, 239-241
- email, 156-160
- for events in Calendar app, 211

Google Wallet, 259

- interacting with, 15
- Lock screen, 13

numbers, typing, 22

O

offline, using Google Maps, 195-197

“OK Google” detection, 13

opening bookmarks in Chrome, 169-170

optical zoom feature (Camera app), 292

optimizing battery life, 281-282

Original Pages (Play Books app), 270

original picture, reverting to, 307

P

page mode (Play Newsstand app), 276

pages, turning in Play Books app, 268

pairing Bluetooth devices, 118-119

Pairing Mode (Bluetooth), 118

panoramic pictures, taking, 296-297. *See also* Photo Sphere (360 panoramic) pictures

parental controls, adding restricted profiles, 31

passkeys (Bluetooth), 119

passwords

- Chrome, 174
- Gmail app, 140
- Remote Security Administration, 46
- spoken passwords, enabling/disabling, 237
- typing in Google Play, 224
- VPNs, 129

pasting text, 26

pausing

- music, 82
- video, 95

payment methods, adding to Google Wallet, 71, 101, 104

payments, making via

- Google Wallet app
 - adding credit card info, 251-252
 - adding loyalty cards, 254-257
 - configuring, 250, 258-259
 - redeeming gift cards, 253-254
 - Tap and Pay, 252, 259
 - using at checkout, 257-258

People. *See* contacts

permissions, installing Google Play apps, 219

personal information

- Chrome security, 175
- location information access (websites), enabling/disabling, 177

Personal Results, enabling/disabling, 188

photo albums

- deleting, 303
- navigating, 302-303

photos. *See also* Photos app

- attaching to email, 149-150
- automatic picture management, 322
- backing up, 98
- center focus, 316
- contacts, adding to, 51-53
- cropping, 53, 306
- dramatic style, 312
- editing, 305-307
- enhancing, 306-307
- filters, 307
- fine-tuning, 308-309
- moving manually, 319
- Mac OS X, 320
- Windows, 321

- reverting to original, 307
 - reviewing, 304
 - rotating, 306
 - sharing, 304-305
 - storage locations, 93-94, 302
 - structure and sharpness adjustments, 310
 - synchronizing, 318, 323
 - taking, 295
 - black-and-white*, 313
 - Camera app*, 291
 - HDR landscape*, 314
 - Lens Blur*, 299-301
 - panoramic*, 296-297
 - Photo Sphere* (360 *panoramic*), 298-299
 - RetroLux*, 315
 - Tilt Shift*, 317
 - while recording video*, 89
 - vintage style, 311
 - wallpaper, changing, 228-230, 305
- Photos app. *See also* photos
- customizing settings, 97-99, 318
 - deleting photo albums, 303
 - navigating, 302-303
 - video. *See* video
- Photo Sphere (360 *panoramic pictures*). *See also* *panoramic pictures*
- sharing, 305
 - taking, 298-299
- pictures. *See* photos
- Pictures folder, 320-322
- pinching, 20
- pinch to zoom feature
- Camera app*, 292
 - Chrome*, 168
- pinning apps, 245-247
- PINs
- Google Wallet*, changing, 259
 - lock screen PINs (VPNs), 127-128
- playback (music), controlling via *Google Play Music app*, 82-84, 87
- Play Books app
- bookmarks, 269
 - customizing view, 268-269
 - Flowing Text*, 270
 - launching, 264
 - navigating, 264
 - Original Pages*, 270
 - purchasing books, 265-266
 - reading
 - book reviews*, 266
 - books*, 267
 - free book samples*, 266
 - saving books, 271
 - searching for books, 265
 - taking notes, 270
 - translating text, 270
 - turning pages, 268
- playing
- music from *Google Play Music app*, 75-76
 - video
 - full screen*, 112
 - Photos app*, 93-94
 - on smart TVs/game consoles*, 115
 - YouTube*, 111
- playlists (*Google Play Music app*)
- adding songs, 79
 - creating, 78-79, 83
 - deleting, 80
 - editing, 79-80
 - instant mixes, 83
 - viewing, 83
- Play Movies & TV app, 105
- customizing settings, 106
- Play Newsstand app, 271
- article mode versus page mode, 276
 - downloading magazines and newspapers, 274
 - installing, 271
 - launching, 272
 - reading, 274-275
 - subscribing, 272-274
- POP3 accounts, adding, 138-141
- POP/IMAP settings, customizing, 158
- pop-up blocking, 177
- portrait orientation (*Chrome*), 167
- ports, 6
- power button, 7
- previewing
- live wallpaper, 230
 - widgets, 234
- previous/next songs, jumping to, 82
- printing
- email, 153
 - web pages, 166
- Priority Inbox (*Gmail*), 156
- privacy in corporate calendars, 211
- privacy settings, 11, 174
- problems, solving. *See* troubleshooting
- profiles
- Bluetooth*, 121
 - VPN*, 128
- publications. *See* magazines; newspapers
- public transportation
- options, viewing in *Google Maps*, 192
- purchases
- purchasing. *See* buying

Q

- queues (music), 83
- Quick Responses (*Calendar app*), 208
 - editing*, 207
 - sending*, 209
- Quick Settings bar, 15-16

R

- radios, 7, 56
- Radio Stations. *See* *Instant Mixes*

- reading
 - books, 267
 - email
 - determining important emails*, 153
 - with Gmail app*, 151-152
 - free book samples, 266
 - magazines and newspapers, 274-275
 - reviews (books), 266
 - rear camera, 6
 - receiving money with Google Wallet, 260
 - Recent Apps button, 5, 19, 27-28
 - recording video with Camera app, 88-89
 - redeeming gift cards in Google Wallet app, 253-254
 - Reduce Data Usage, enabling/disabling, 178
 - refreshing websites in Chrome, 164
 - re-installing apps, 224
 - reminders for events in Calendar app, 211
 - Remote Security Administration, 46
 - removing. *See* deleting
 - renaming
 - Bluetooth devices, 120
 - bookmarks in Chrome, 170
 - renting movies, 100-102
 - repeating
 - events, 211
 - music, 82
 - repositioning shortcuts, 66
 - resizing
 - text in Chrome, 176
 - widgets, 235
 - resolution settings (Camera app), 294
 - responding to event invitations, 212
 - restricted profiles, adding, 31
 - Retrolux pictures, 315
 - reverse pairing Bluetooth devices, 119
 - reverting to original picture, 307
 - reviewing pictures, 304
 - reviews (books), reading via Play Books app, 266
 - rewards cards, adding in Google Wallet app, 254-257
 - rewinding/fast forwarding
 - music, 82
 - video, 95
 - RFID (Radio Frequency Identification), NFC as, 132
 - ringtones (Calendar app), 207
 - rotating
 - screen, 20
 - pictures, 308
 - RTF (Rich Text Formatting) in email, 151
- ## S
- SafeSearch Filter, enabling/disabling, 189
 - Samsung tablets
 - add account, 43
 - app buttons, 5
 - Beam, 56, 57
 - Gallery app, 100
 - Galaxy Apps store, 225
 - Quick Settings, 16
 - sharing contact, 56
 - System bar, 18
 - saving
 - bookmarks in Chrome, 170-171
 - books in Play Books app, 271
 - contact groups, 59
 - scaling text, 176
 - screen. *See* main screen; touchscreen
 - Screen Pinning, 245-247
 - scrolling main screen (Calendar app), 205
 - search engines, storage management, 189
 - searching
 - books via Play Books app, 265
 - Google Now, 183
 - websites via Chrome, 164
 - words on web pages via Chrome, 164
 - security
 - customizing settings, 243-245
 - email, 141
 - location information access (websites), enabling/disabling in Chrome, 177
 - personal information and Chrome, 175
 - pop-up blocking, 177
 - Remote Security Administration, 46
 - Smart Lock, configuring, 246
 - websites, browsing in secret, 165
 - sending
 - email with Gmail app, 148
 - money with Google Wallet, 260
 - sensors
 - accelerometer, 7
 - compass, 7
 - Global Positioning System (GPS), 7
 - gyroscope, 7
 - Hall Sensor, 7
 - light sensor, 4
 - separating contacts, 63
 - setup. *See* configuring
 - sharing
 - contacts, 56, 67
 - data with apps, 188
 - music on social media, 83
 - pictures, 304-305

- video
 - Bluetooth*, 96
 - Photos app*, 95-96
 - web pages on social media, 166
- sharpness adjustments for pictures, 310
- Shift key, 22
- shooting pictures. *See* pictures, taking
- shortcuts
 - contacts, adding to Home screen, 64-65
 - creating, 17
 - explained, 16
 - removing, 66
 - repositioning, 66
- showing. *See* displaying
- shuffling music, 82
- signatures (email), 157-159
- sizing text
 - Chrome, 176
 - Gmail app, 155
- Sleep mode (Wi-Fi), keeping Wi-Fi on during, 126
- sleep settings, 242
- sliding, 20
- Smart Lock, 243
 - configuring, 246
- smart TVs/game consoles, 115
- snooze period (Clock app), setting, 204
- social media sharing
 - music, 83
 - videos, 95-96
 - web pages, 166
- solving problems. *See* troubleshooting
- Song tab (Google Play Music app), 77
- songs. *See also* music
 - filtering music by, 77
 - viewing information, 77
- sorting contacts, 58
- sound settings, customizing, 239-240

- spam, marking email as, 153
- speaker, 6
- spoken passwords, enabling/disabling, 237
- SSIDs (Service Set Identifiers), 122
- SSL, 141
- starred email (Gmail), 147
- static wallpaper, 230
- stopping apps, 283-284
- storage locations for photos, 93-94, 302
- storage type for encryption keys, 244
- streaming music from cloud, 72
- structure adjustments for pictures, 310
- subscribing to publications, 272-274
- swiping, 20
 - Google Play Music app views, changing, 77
 - on keyboard, 24
 - video, 112
- Switch Access, 238
- switching between apps, 27-28
- users, 29
- symbols, typing, 22
- Symbols key, 22
- synchronization software
 - Android File Transfer, installing, 32-33
 - Google Music Manager
 - configuring*, 36-39
 - installing*, 33-35
- synchronizing
 - calendars (Calendar app), 208
 - contacts
 - determining what to synchronize*, 47
 - from work email account*, 42-48
 - troubleshooting*, 45

- date/time, 200
- Exchange accounts, 159-160
- Google accounts, 138, 157
- movies, 87
- music, 87
- photos, 318, 323
- TV shows, 87
- work email account, 143-144
- System bar, 18-19

T

- tabs
 - Internet web browser, 179
 - multiple open tabs in Chrome, 172
- taking pictures. *See* pictures, taking
- TalkBack, 237
- Tap and Pay (Google Wallet), 252, 259
- tapping icons, 19
- text
 - copying and pasting, 26
 - editing, 25
 - entering
 - dictation*, 24
 - gestures*, 24
 - keyboard*, 21-23
 - font size, setting, 242
 - High Contrast Text, 237
 - large text, enabling/disabling, 237
 - Play Books app. *See* Play Books app
 - resizing
 - Chrome, 176
 - Gmail app, 155
 - scaling, 176
- text-to-speech, 238-239
- Tilt Shift pictures, 317
- time
 - setting, 199-200
 - synchronizing, 200
- time zone, setting, 200, 207

TLS, 141

touching and holding

- icons, 19
- links in Chrome, 179

touchscreen

- brightness, adjusting, 201
- cleaning, 288
- explained, 4
- gestures. *See* gestures
- Home screens, 14-18
- Lock screen
 - notifications on, 13
 - settings on, 13
 - unlocking, 12, 243
- rotating, 20
- unlocking, 12, 243

translating text in Play Books app, 270

troubleshooting. *See also* maintenance

- Android, updating, 279
- apps
 - closing, 283-284
 - determining data usage, 284-286
- battery life, 281-282
- email account
 - synchronization with Contacts app, 45
- help and resources, 287
- video sharing via Bluetooth, 96
- Wi-Fi connections, 123

Trust Agents, 245

- configuring Smart Lock, 246

trusted credentials, 244

turning pages in Play Books app, 268

TV shows

- buying, 103-104
- copying from computer
 - Mac OS X, 108
 - Windows OS, 107
- playing full screen, 112
- Play Movies & TV app, 105
 - customizing settings, 106
- synchronizing with doubleTwist app, 87

U

undeleting video, 97

uninstalling apps, 223

unknown sources, installing apps from, 225

unlocking screen, 12, 243

updating

- Android, 279-280
 - checking for updates, 280
 - installing updates, 279-280
- apps, 223

uploading

- music to Google Play Music app, 73
- video
 - Photos app, 96
 - YouTube, 112-113

usage information, collecting via apps, 245, 284-286

usernames

- Gmail app, 140
- VPNs, 129

users

- adding, 28-29
- guest users, adding, 30
- switching between, 29

V

vCards

- adding to Contacts app, 55-56
- importing/exporting, 67

verifying VPN (virtual private network) connections, 130

video

- Bluetooth, sharing, 96
- Camera app
 - customizing settings, 90-92
 - recording, 88-89
- copying from computer
 - Mac OS X, 108
 - Windows OS, 107
- movies, buying/renting, 100-102
- Photos app. *See* Photos app
- playing
 - full screen, 112
 - on smart TVs/game consoles, 115
 - Photos app, 93-94
- Play Movies & TV app, 105-106
- storage locations, 93-94, 302
- swiping, 112
- TV shows, buying, 103-104
- YouTube. *See* YouTube

video format (Camera app), adjusting, 294

viewing. *See also* displaying

- battery usage, 281-282
- browser tabs in Chrome, 167
- download progress, 102
- downloads from Google Play, 216
- Google Map options, 190
- playlists, 83
- public transportation options in Google Maps, 192
- purchases from Google Play, 216
- song information in Google Play Music app, 77
- video
 - full screen, 95, 112
 - on smart TVs/game consoles, 115
 - YouTube app, 111

vintage picture style, 311

virtual private networks. *See* VPNs

voice commands

- Google Maps, 190
- Google Now, 185-186
- "OK Google" detection, 13

voice recognition, dictation mode, 24

volume of alarms, adjusting, 204

volume buttons, 7

VPNs (virtual private networks), 126

- accessing quickly, 130
- adding, 127
- Always-on VPNs, 132
- connecting to, 128
 - passwords*, 129
 - usernames*, 129
 - verifying connections*, 130
- deleting, 130
- editing, 130
- lock screen PINs, configuring, 127-128
- profiles, adding, 128

W

wallpaper, changing, 228

- finding wallpaper, 230
- live wallpaper, 229-230
- from Photos app, 228-229, 305
- static wallpaper, 230

watching. *See* viewing

web addresses, typing in Chrome, 164

web browsers. *See* Chrome

Web History, enabling/disabling, 188

websites. *See also* Chrome

- accessing previous/next, 164
- additional options, 165-166
- bookmarking, 164, 169-171
- browsing via Incognito browser tab, 165
- clicking email addresses, 178

- cookies, 177
- email addresses, clicking, 178
- enabling/disabling location information access, 177
- finding words on web pages, 164
- JavaScript, enabling/disabling, 176
- key words, finding, 164
- landscape orientation, 167
- location information access, enabling/disabling, 177
- multiple open tabs, 172
- passwords, 174
- personal information, security and, 175
- pop-up blocking, 177
- portrait orientation, 167
- printing, 166
- refreshing, 164
- resizing text, 176
- searching, 164
- sharing addresses, 166
- touching and holding links, 179
- zooming in/out, 168

widgets, 16

- adding to Home screens, 233-234
- moving, 234
- previewing, 234
- removing, 234
- resizing, 235

Wi-Fi, 121

- connecting to, 121-123
- hidden networks, adding, 122
- IP addresses, 125-126
- MAC addresses, 125-126
- music
 - listening offline*, 85
 - streaming from clouds*, 72

- network options, 124-125
- Sleep mode, keeping connected in, 126
- SSIDs, 122
- troubleshooting connections, 123
- Wi-Fi (WLAN) radio, 7
- Windows
 - manual picture management, 321
 - videos, copying from computer, 107
- Wireless Fidelity. *See* Wi-Fi
- wishlist in Google Play, 217
- work address, configuring in Google Maps, 189, 195
- work email accounts
 - adding, 142-145
 - synchronizing, 42-48, 143-144
- WPS (Wi-Fi Protected Setup) networks, Wi-Fi connections, 123
- writing email with Gmail app, 148

Y

YouTube app

- customizing settings, 114
- Main screen, 109
- navigating, 110
- smart TVs/game consoles, 115
- video
 - playing*, 111
 - sharing*, 96
 - uploading*, 112-113

Z

zooming in/out

- Camera app, 292
- Chrome screen, 168

REGISTER THIS PRODUCT SAVE 35%^{*} ON YOUR NEXT PURCHASE!

How to Register Your Product

- Go to quepublishing.com/register
- Sign in or create an account
- Enter ISBN: 9780133928471

Benefits of Registering

- Ability to download product updates
- Access to bonus chapters and workshop files
- A 35% coupon to be used on your next purchase – valid for 30 days
To obtain your coupon, click on
“Manage Codes” in the right column
of your Account page
- Receive special offers on new editions and related Que products

*Please note that the benefits for registering may vary by product.
Benefits will be listed on your Account page under Registered Products.*

We value and respect your privacy. Your email address will not be sold to any third party company.

** 35% discount code presented after product registration is valid on most print books, eBooks, and full-course videos sold on QuePublishing.com. Discount may not be combined with any other offer and is not redeemable for cash. Discount code expires after 30 days from the time of product registration. Offer subject to change.*