



Discover Shooting Modes




Your Samsung S6 or S6 edge offers several shooting modes you can employ when taking a picture. These modes affect the look of the photos you take, as detailed in the following table.

Mode	Description	Available for Main Camera	Available for Front Camera
Auto	Camera automatically evaluates your surroundings and determines the best mode for the photo. This is the default mode for the main camera.	✓	
Interval Shot	Takes several shots in rapid succession. You can then choose the best pictures to use.		✓
Panorama	Creates an extra-wide image by taking several side-by-side pictures. Tap the Camera button and then slowly move the camera from one direction to another.	✓	
Pro	Enables you to manually adjust the ISO sensitivity, exposure, white balance, and color tone.	✓	
Selective Focus	Enables you to change the focus of the picture after it has been taken.	✓	
Selfie	Optimized for selfie shots. Offers various additional effects, such as Beauty mode. This is the default mode for the front-facing camera.		✓
Virtual Shot	Creates multi-directional views of objects. Tap the Camera button and then circle around the object you're shooting.	✓	✓
Wide Selfie	Takes wide-angle shots to fit more people into your selfies. Tap the Camera button and then slowly move the camera from one direction to another.		✓

Explore Special Effects

Your phone's camera enables you to apply a variety of special effects when you shoot your photos. These include Cartoon, Faded Color, Grayscale, Moody, Tint, Vignette, and Vintage effects, as shown in the following table.

Effect	Example
No effect	
Cartoon	

Effect	Example
Faded Color	
Grayscale	
Moody	

Effect**Example**

Tint



Vignette



Vintage

